

2005-2008 Dodge Magnum (8 Channel Premium Audio Only)

2005-UP Chrysler 300C (8 Channel Premium Audio Only)

2006-UP Dodge Charger (8 Channel Premium Audio Only)

2005-2010 Jeep Commander (Premium Audio Only)

2005-2008 Dodge Ram (Regular Cab, Quad Cab, Mega Cab)

2005- 2010 Jeep Grand Cherokee (Premium Audio Only)

2008-2011 Dodge Avenger (Premium Audio Only)

2007-2010 Chrysler Sebring (Premium Audio Only)

2008-2011 Dodge Challenger

2011 Chrysler 200

Installation Instructions

## **TOOLS REQUIRED:**

\*Phillips Screwdriver \*Panel Removal Tool \*Pick Tool

## **CONTENTS:**

2EA. 6X9 WOOFER

2EA. 3.5" TWO WAY SPEAKER

P/N 05030126AB

P/N 68039662AB

P/N RBI77KICK11


P/N RISPACER


P/N RISPACER

8EA. #8X1" SCREW P/N RFS81P

#### Front Door Installation for Challenger, Magnum, Charger, 300C

- 1. Using a pick tool pry open the screw covers behind the interior door release lever and below the arm rest and remove the screws. Fig. 1
- 2. Remove the four screws securing the door panel along the bottom. Fig. 1
- 3. Using the end of a Phillips screwdriver gently depress the center pin of the three plastic retainers securing the door panel. The center pin of the plastic retainer should depress approximately 1/8" and allow the retainer to be removed from the door panel. The two uppermost retainers do not need to be removed in order to remove the door panel. Fig. 2

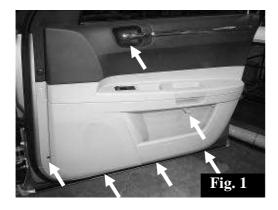

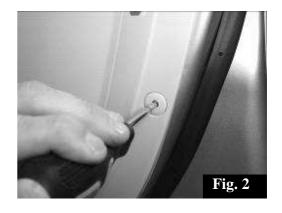



2005-2008 Dodge Magnum (8 Channel Premium Audio Only)

2005-UP Chrysler 300C (8 Channel Premium Audio Only)

2006-UP Dodge Charger (8 Channel Premium Audio Only)

2005-2010 Jeep Commander (Premium Audio Only)

2005-2008 Dodge Ram (Regular Cab, Quad Cab, Mega Cab)

2005- 2010 Jeep Grand Cherokee (Premium Audio Only)

2008-2011 Dodge Avenger (Premium Audio Only)


2007-2010 Chrysler Sebring (Premium Audio Only)

2008-2011 Dodge Challenger

2011 Chrysler 200

**Installation Instructions** 


- 4. Using a panel removal tool gently pry the door panel away from the door.
- 5. Disconnect the door handle linkage by rotating the blue plastic latch and pulling the linkage rod loose. Fig. 3
- 6. Disconnect door wiring and set door panel aside.
- 7. Remove the existing speaker and its mounting adapter. The replacement speakers come with new adapters to allow more mounting depth and clearance of the speaker magnet from components inside the door. Fig. 4

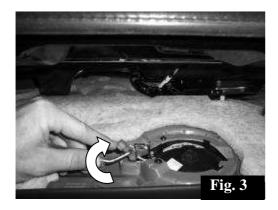



- 8. Connect the speaker wiring and install the upgrade speaker. Fig. 5
- 9. Reset the plastic door panel retainers by pushing the center pin back through the retainer two clicks. The retainer can now be reinstalled in the door panel. When you have the retainer in place press the center pin in one click to lock it into place and secure the door panel. Fig. 6



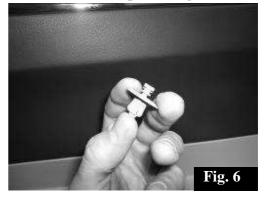

10. Replace all previously removed parts in reverse order.



2005-2008 Dodge Magnum (8 Channel Premium Audio Only)

2005-UP Chrysler 300C (8 Channel Premium Audio Only)

2006-UP Dodge Charger (8 Channel Premium Audio Only)

2005-2010 Jeep Commander (Premium Audio Only)

2005-2008 Dodge Ram (Regular Cab, Quad Cab, Mega Cab)

2005- 2010 Jeep Grand Cherokee (Premium Audio Only)

2008-2011 Dodge Avenger (Premium Audio Only)

2007-2010 Chrysler Sebring (Premium Audio Only)

2008-2011 Dodge Challenger

2011 Chrysler 200


**Installation Instructions** 

# Dash Speaker Installation for Dodge Challenger, Charger and Magnum


(For Dodge Challenger start with step 6)

- 1. Pull the rubber door molding away from the A pillar location. Fig. 7
- 2. Gently pull the A pillar cover to release the snap clips retaining it. The cover will not come completely loose until you press the sides of the black plastic retainer cup behind the cover. Using your index finger press on the sides of the retainer cup while gently pulling the cover toward the center of the car. Fig. 8



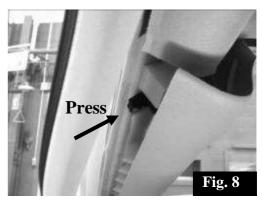

- 3. Rotate the A pillar cover back and forth toward windshield to release it from the dash. Fig. 9
- 4. Remove the plastic retainer cup from the back of the A pillar cover and replace it in the hole in the metal of the A pillar. Fig. 10
- 5. Repeat steps 1-4 on both sides of vehicle.

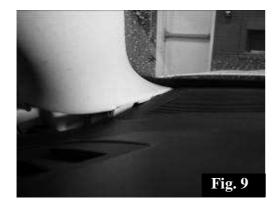





2005-2008 Dodge Magnum (8 Channel Premium Audio Only)

2005-UP Chrysler 300C (8 Channel Premium Audio Only)

2006-UP Dodge Charger (8 Channel Premium Audio Only)

2005-2010 Jeep Commander (Premium Audio Only)

2005-2008 Dodge Ram (Regular Cab, Quad Cab, Mega Cab)

2005- 2010 Jeep Grand Cherokee (Premium Audio Only)

2008-2011 Dodge Avenger (Premium Audio Only)

2007-2010 Chrysler Sebring (Premium Audio Only)

2008-2011 Dodge Challenger

2011 Chrysler 200

**Installation Instructions** 

#### **Dash Speaker Installation for Dodge Charger and Magnum (continued)**

- 6. Starting at one end and working across the dash, use a panel removal tool to gently pry up on the dash speaker cover to release the metal fasteners. Fig. 11
- 7. With the dash cover removed you can now remove the two screws retaining each speaker.
- 8. Disconnect speakers and remove.
- 9. Connect speaker wiring and install upgrade speakers. Fig. 12





10. Replace all previously removed parts in reverse order.

#### Dash Speaker Installation for Chrysler 300C

- 1. Using a panel removal tool gently pry the speaker grills upward to release retainers. Fig. 13
- 2. Remove the existing speakers and disconnect wiring.
- 3. Connect the speaker wiring and install the upgrade speakers. Fig. 14
- 4. Replace speaker grills.







2005-2008 Dodge Magnum (8 Channel Premium Audio Only)

2005-UP Chrysler 300C (8 Channel Premium Audio Only)

2006-UP Dodge Charger (8 Channel Premium Audio Only)

2005-2010 Jeep Commander (Premium Audio Only)

2005-2008 Dodge Ram (Regular Cab, Quad Cab, Mega Cab)

2005- 2010 Jeep Grand Cherokee (Premium Audio Only)

2008-2011 Dodge Avenger (Premium Audio Only)

2007-2010 Chrysler Sebring (Premium Audio Only)

2008-2011 Dodge Challenger

2011 Chrysler 200


**Installation Instructions** 

#### **TOOLS REQUIRED:**

\*Phillips Screwdriver\*10mm Nut Driver\*Panel Removal Tool\*Window Crank Removal Tool\*Pick Tool

## **Door Speaker Installation for Dodge Ram Truck**

- 1. Using a 10mm nut driver remove the bolt securing the door handle. Fig. 15
- 2. For models with manual windows use a window crank removal tool to disengage the pin securing the window crank and pull window crank from door. Fig. 16
- 3. Remove the four screws securing the door panel. There are two along the bottom, one behind the door handle and one at the top of the door panel.
- 4. Remove the door panel by lifting upward.
- 5. Disconnect door wiring and set door panel aside.
- 6. Remove the screws securing the speaker, disconnect wiring and remove speaker.

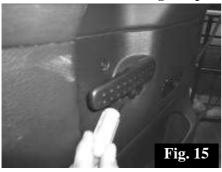



- 7. On a workbench carefully pry the speaker spacer ring loose using a panel removal tool. Fig. 17
- 8. Remove the upgrade speaker from the adapter it is shipped in, it will not be used for this vehicle.
- 9. Reattach the spacer ring onto the upgrade speaker.
- 10. Install the upgrade speaker, replace screws and tighten. Fig. 18





11. Reinstall all previously removed parts in reverse order.



2005-2008 Dodge Magnum (8 Channel Premium Audio Only)

2005-UP Chrysler 300C (8 Channel Premium Audio Only)

2006-UP Dodge Charger (8 Channel Premium Audio Only)

2005-2010 Jeep Commander (Premium Audio Only)

2005-2008 Dodge Ram (Regular Cab, Quad Cab, Mega Cab)

2005- 2010 Jeep Grand Cherokee (Premium Audio Only)

2008-2011 Dodge Avenger (Premium Audio Only)

2007-2010 Chrysler Sebring (Premium Audio Only)


2008-2011 Dodge Challenger


2011 Chrysler 200

**Installation Instructions** 

# **Dash Speaker Installation for Dodge Ram Truck**

- 1. Pull the rubber door molding away from the A pillar location. Fig. 19
- 2. Using a pick tool, pry open the screw covers on the plastic A pillar covers to reveal the 10mm bolts. Fig. 20
- 3. Remove the bolts and the A pillar covers.

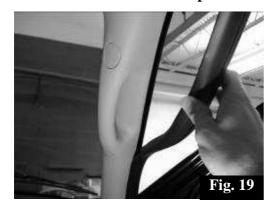

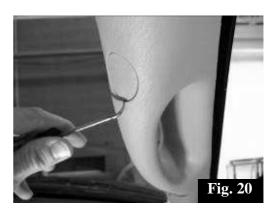

- 4. Starting at one end and working across the dash, use a panel removal tool to gently pry up on the dash speaker cover to release the fasteners. Fig. 21
- 5. Remove the screws securing the speaker, disconnect wiring and remove speaker.
- 6. Install the upgrade speaker, replace screws and tighten. Fig. 22
- 7. Reinstall all previously removed parts in reverse order.







2005-2008 Dodge Magnum (8 Channel Premium Audio Only)

2005-UP Chrysler 300C (8 Channel Premium Audio Only)

2006-UP Dodge Charger (8 Channel Premium Audio Only)

2005-2010 Jeep Commander (Premium Audio Only)

2005-2008 Dodge Ram (Regular Cab, Quad Cab, Mega Cab)

2005- 2010 Jeep Grand Cherokee (Premium Audio Only)

2008-2011 Dodge Avenger (Premium Audio Only)

2007-2010 Chrysler Sebring (Premium Audio Only)

2008-2011 Dodge Challenger

2011 Chrysler 200

**Installation Instructions** 

## **TOOLS REQUIRED:**

\*Phillips Screwdriver\*10mm Nut Driver\*Panel Removal Tool\*Pick Tool

#### Dash Speaker Installation for Jeep Commander

- 1. Using a pick tool, gently lift speaker grill to release fasteners. Fig. 23
- 2. Remove the screws securing the speaker, disconnect wiring and remove speaker.
- 3. Install the upgrade speaker making sure the connecter on the speaker is facing toward the window.
- 4. The side of the speaker with the connecter on it has to be dropped into the dash first in order for the speaker to be installed. Fig. 24
- 5. Replace the screws and tighten.
- 6. Reinstall all previously removed parts in reverse order.







2005-2008 Dodge Magnum (8 Channel Premium Audio Only)

2005-UP Chrysler 300C (8 Channel Premium Audio Only)

2006-UP Dodge Charger (8 Channel Premium Audio Only)

2005-2010 Jeep Commander (Premium Audio Only)

2005-2008 Dodge Ram (Regular Cab, Quad Cab, Mega Cab)

2005- 2010 Jeep Grand Cherokee (Premium Audio Only)

2008-2011 Dodge Avenger (Premium Audio Only)

2007-2010 Chrysler Sebring (Premium Audio Only)

2008-2011 Dodge Challenger


2011 Chrysler 200

Installation Instructions


# **Door Speaker Installation for Jeep Commander**


- 1. Using a pick tool pry open the screw covers behind the interior door release lever and remove the screw. Fig. 25
- 2. Remove the screw behind the armrest handle and the screw toward the top and front of the door panel. Fig. 26



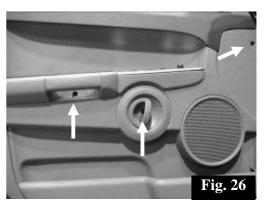

- 3. Using a panel removal tool gently pry the door panel out to release the plastic fasteners. Fig. 27
- 4. Disconnect the door handle linkage by rotating the yellow plastic latch and pulling the linkage rod loose. Fig. 28
- 5. Disconnect door wiring and set door panel aside.

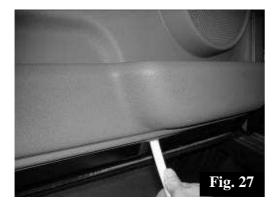

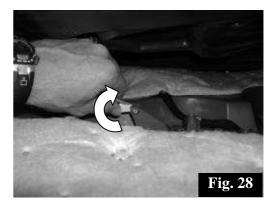



2005-2008 Dodge Magnum (8 Channel Premium Audio Only)

2005-UP Chrysler 300C (8 Channel Premium Audio Only)

2006-UP Dodge Charger (8 Channel Premium Audio Only)

2005-2010 Jeep Commander (Premium Audio Only)

2005-2008 Dodge Ram (Regular Cab, Quad Cab, Mega Cab)

2005- 2010 Jeep Grand Cherokee (Premium Audio Only)

2008-2011 Dodge Avenger (Premium Audio Only)

2007-2010 Chrysler Sebring (Premium Audio Only)


2008-2011 Dodge Challenger


2011 Chrysler 200

**Installation Instructions** 

# **Door Speaker Installation for Jeep Commander continued**

- 6. Remove the screws securing the speaker, disconnect wiring and remove speaker. Fig. 29
- 7. Remove the upgrade speaker from the adapter it is shipped in, it will not be used for this vehicle.
- 8. Install the upgrade speaker with the included spacer ring (P/N RISPACER), replace screws and tighten. Fig. 30
- 9. Reinstall all previously removed parts in reverse order.

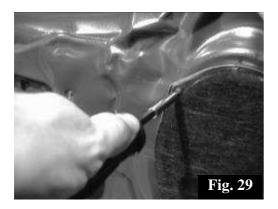

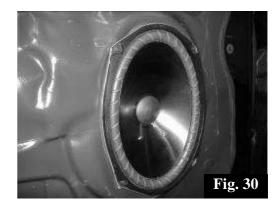



2005-2008 Dodge Magnum (8 Channel Premium Audio Only)

2005-UP Chrysler 300C (8 Channel Premium Audio Only)

2006-UP Dodge Charger (8 Channel Premium Audio Only)

2005-2010 Jeep Commander (Premium Audio Only)

2005-2008 Dodge Ram (Regular Cab, Quad Cab, Mega Cab)

2005- 2010 Jeep Grand Cherokee (Premium Audio Only)

2008-2011 Dodge Avenger (Premium Audio Only)

2007-2010 Chrysler Sebring (Premium Audio Only)

2008-2011 Dodge Challenger

2011 Chrysler 200

Installation Instructions

## **TOOLS REQUIRED:**

\*Phillips Screwdriver\*10mm Nut Driver\*Panel Removal Tool\*Pick Tool

#### **Dash Speaker Installation for Jeep Cherokee**

- 1. Pull the rubber door molding away from the A pillar location. Fig. 31
- 2. Using a pick tool, pry open the screw covers on the plastic A pillar covers to reveal the 10mm bolts. Fig. 32





- 3. Remove the bolts and the A pillar covers. Fig. 33
- 4. Using a panel removal tool, gently lift speaker grill to release fasteners. Fig. 34







2005-2008 Dodge Magnum (8 Channel Premium Audio Only)

2005-UP Chrysler 300C (8 Channel Premium Audio Only)

2006-UP Dodge Charger (8 Channel Premium Audio Only)

2005-2010 Jeep Commander (Premium Audio Only)

2005-2008 Dodge Ram (Regular Cab, Quad Cab, Mega Cab)

2005- 2010 Jeep Grand Cherokee (Premium Audio Only)

2008-2011 Dodge Avenger (Premium Audio Only)

2007-2010 Chrysler Sebring (Premium Audio Only)

2008-2011 Dodge Challenger


2011 Chrysler 200

**Installation Instructions** 

# **Dash Speaker Installation for Jeep Cherokee (continued)**

- 5. Remove the screws securing the speaker, disconnect wiring and remove speaker. Fig. 35
- 6. For clearance of the connector on the upgrade speaker remove the plastic in the area indicated by the dotted line in Fig. 36
- 7. Install the upgrade speaker making sure the connecter on the speaker is facing toward the window.



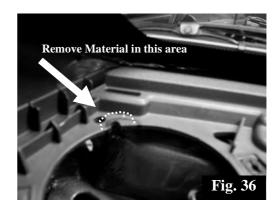

- 8. The side of the speaker with the connecter on it has to be dropped into the dash first in order for the speaker to be installed. Fig. 37
- 9. Replace the screws and tighten.
- 10. Reinstall all previously removed parts in reverse order.
- 11. Repeat process on other side of vehicle.





2005-2008 Dodge Magnum (8 Channel Premium Audio Only)

2005-UP Chrysler 300C (8 Channel Premium Audio Only)

2006-UP Dodge Charger (8 Channel Premium Audio Only)

2005-2010 Jeep Commander (Premium Audio Only)

2005-2008 Dodge Ram (Regular Cab, Quad Cab, Mega Cab)

2005- 2010 Jeep Grand Cherokee (Premium Audio Only)

2008-2011 Dodge Avenger (Premium Audio Only)

2007-2010 Chrysler Sebring (Premium Audio Only)

2008-2011 Dodge Challenger


2011 Chrysler 200

**Installation Instructions** 


## **Door Speaker Installation for Jeep Cherokee**


- 1. Remove rubber pad from the bottom of the armrest pocket and remove the screw under it. Fig. 38
- 2. Remove the screw toward the top and front of the door panel and from behind the door release lever. Fig. 38
- 3. Using a panel removal tool gently pry the door panel out to release the plastic fasteners. Fig. 39



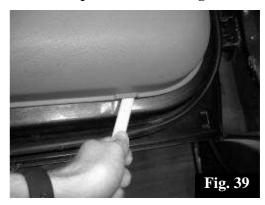

- 4. Disconnect the door handle linkage by rotating the blue plastic latch and pulling the linkage rod loose. Fig. 40
- 5. Disconnect door wiring and set door panel aside.
- 6. Remove the screws securing the speaker, disconnect wiring and remove speaker. Fig. 41
- 7. Remove the upgrade speaker from the adapter it is shipped in, it will not be used for this vehicle.
- 8. Install the upgrade speaker with the included spacer ring (P/N RISPACER), replace screws and tighten.
- 9. Reinstall all previously removed parts in reverse order.
- 10. Repeat process on other side of vehicle.

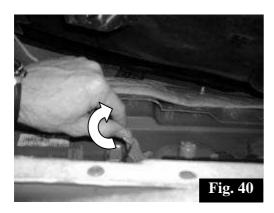

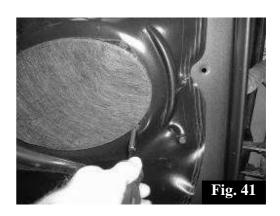



2005-2008 Dodge Magnum (8 Channel Premium Audio Only)

2005-UP Chrysler 300C (8 Channel Premium Audio Only)

2006-UP Dodge Charger (8 Channel Premium Audio Only)

2005-2010 Jeep Commander (Premium Audio Only)

2005-2008 Dodge Ram (Regular Cab, Quad Cab, Mega Cab)

2005- 2010 Jeep Grand Cherokee (Premium Audio Only)

2008-2011 Dodge Avenger (Premium Audio Only)

2007-2010 Chrysler Sebring (Premium Audio Only)

2008-2011 Dodge Challenger

2011 Chrysler 200

Installation Instructions

## **TOOLS REQUIRED:**

Torx® T-20 Screwdriver\*Ratchet\* Torx® T-20 Socket\* \*Panel Removal Tool \*Pick Tool

#### Front Door Installation for Avenger and Sebring

- 11. Remove the triangle shaped plastic panel at the top of the door by prying loose with a panel removal tool. Fig. 42
- 12. Using a pick tool pry the screw cover behind the door latch release lever and remove the screw. Fig. 43





- 13. Using a pick tool pry the screw cover in the door armrest pocket loose to reveal the two screws. The screw cover is hinged toward the outside of the door panel. Remove the two screws. Fig. 44
- 14. Using a panel removal tool gently pry the door panel away from the door. Fig. 45







2005-2008 Dodge Magnum (8 Channel Premium Audio Only)

2005-UP Chrysler 300C (8 Channel Premium Audio Only)

2006-UP Dodge Charger (8 Channel Premium Audio Only)

2005-2010 Jeep Commander (Premium Audio Only)

2005-2008 Dodge Ram (Regular Cab, Quad Cab, Mega Cab)

2005- 2010 Jeep Grand Cherokee (Premium Audio Only)

2008-2011 Dodge Avenger (Premium Audio Only)


2007-2010 Chrysler Sebring (Premium Audio Only)


2008-2011 Dodge Challenger

2011 Chrysler 200

Installation Instructions


- 15. Disconnect the door handle linkage by rotating the yellow plastic latch and pulling the linkage cable loose from the lever. Next, pull back on the cable housing and slide the cable through the slot in the plastic. Fig. 46
- 16. Disconnect door wiring and set door panel aside.
- 17. Using a Torx T-20 driver remove the four screws securing the speaker, disconnect wiring and remove speaker.
- 18. Remove the upgrade speaker from the adapter it is shipped in, it will not be used for this vehicle.
- 19. Install the upgrade speaker with the included spacer ring (P/N RISPACER), using the supplied 1" Phillips head screws and tighten. Fig. 47
- 20. Replace all previously removed parts in reverse order.

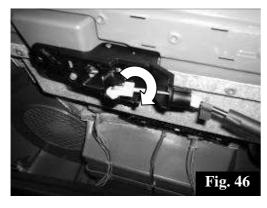


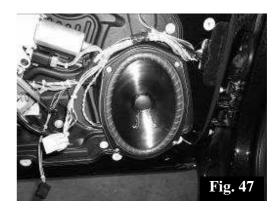

# **Dash Speaker Installation Sebring**

- 21. Using a panel removal tool gently pry the speaker grills upward to release retainers. Fig. 48
- 22. Remove the Torx® T-20 screws securing the existing speakers disconnect wiring and remove speaker. Fig. 49

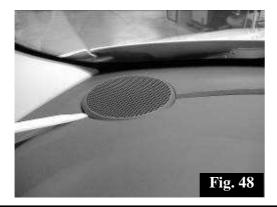

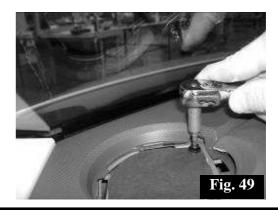



2005-2008 Dodge Magnum (8 Channel Premium Audio Only)

2005-UP Chrysler 300C (8 Channel Premium Audio Only)

2006-UP Dodge Charger (8 Channel Premium Audio Only)

2005-2010 Jeep Commander (Premium Audio Only)

2005-2008 Dodge Ram (Regular Cab, Quad Cab, Mega Cab)

2005- 2010 Jeep Grand Cherokee (Premium Audio Only)

2008-2011 Dodge Avenger (Premium Audio Only)

2007-2010 Chrysler Sebring (Premium Audio Only)

2008-2011 Dodge Challenger

2011 Chrysler 200


Installation Instructions

## **Dash Speaker Installation Sebring (continued)**

- 23. Connect the speaker wiring install the upgrade speaker and replace screws
- 24. Replace speaker grills.
- 25. Repeat steps 1-4 on other side of vehicle.

# **Dash Speaker Installation Avenger**

- 26. Using a panel removal tool gently pry the speaker grills upward to release retainers. Fig. 50
- 27. Remove the Torx® T-20 screws securing the existing speakers disconnect wiring and remove speaker
- 28. Connect the speaker wiring install the upgrade speaker and replace screws. Fig. 51
- 29. Replace speaker grills.

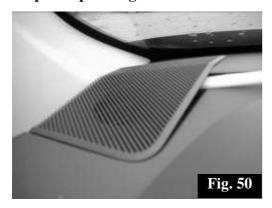



30. Repeat steps 1-4 on other side of vehicle.



2005-2008 Dodge Magnum (8 Channel Premium Audio Only)

2005-UP Chrysler 300C (8 Channel Premium Audio Only)

2006-UP Dodge Charger (8 Channel Premium Audio Only)

2005-2010 Jeep Commander (Premium Audio Only)

2005-2008 Dodge Ram (Regular Cab, Quad Cab, Mega Cab)

2005- 2010 Jeep Grand Cherokee (Premium Audio Only)

2008-2011 Dodge Avenger (Premium Audio Only)

2007-2010 Chrysler Sebring (Premium Audio Only)

2008-2011 Dodge Challenger

2011 Chrysler 200

**Installation Instructions** 

#### **Dash Speaker Installation for Chrysler 200**

- 1. Pull the rubber door molding away from the A pillar location. Fig. 52
- 2. Pull the A pillar covers loose and disconnect the strap from the back of the covers. Fig. 53





- 3. Using a panel removal tool, gently lift speaker grill to release fasteners. Fig. 54
- 4. Remove the Torx® T-20 screws securing the existing speakers disconnect wiring and remove speaker
- 5. Connect the speaker wiring install the upgrade speaker and replace screws. Fig. 55
- 6. Repeat steps 4 and 5 for other side of vehicle.
- 7. Reinstall all previously removed parts in reverse order.







2005-2008 Dodge Magnum (8 Channel Premium Audio Only)

2005-UP Chrysler 300C (8 Channel Premium Audio Only)

2006-UP Dodge Charger (8 Channel Premium Audio Only)

2005-2010 Jeep Commander (Premium Audio Only)

2005-2008 Dodge Ram (Regular Cab, Quad Cab, Mega Cab)

2005- 2010 Jeep Grand Cherokee (Premium Audio Only)

2008-2011 Dodge Avenger (Premium Audio Only)

2007-2010 Chrysler Sebring (Premium Audio Only)

2008-2011 Dodge Challenger

2011 Chrysler 200

Installation Instructions


# Front Door Installation 2011 Chysler 200


- 1. Remove the triangle shaped plastic panel at the top of the door by prying loose with a panel removal tool. Fig. 56
- 2. Using a pick tool pry the screw cover behind the door latch release lever and remove the Torx ® T-20 screw. Fig. 57





- 3. Using a pick tool pry the screw cover in the door armrest pocket loose to reveal and remove the two Torx® T-20 screws. Fig. 58
- 4. Using a panel removal tool gently pry the door panel away from the door. Fig. 59

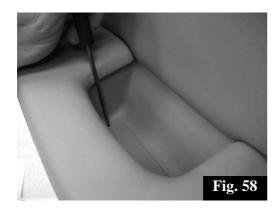

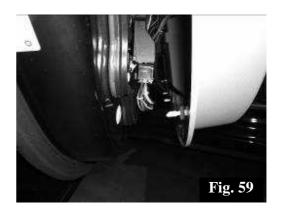



2005-2008 Dodge Magnum (8 Channel Premium Audio Only)

2005-UP Chrysler 300C (8 Channel Premium Audio Only)

2006-UP Dodge Charger (8 Channel Premium Audio Only)

2005-2010 Jeep Commander (Premium Audio Only)

2005-2008 Dodge Ram (Regular Cab, Quad Cab, Mega Cab)

2005- 2010 Jeep Grand Cherokee (Premium Audio Only)

2008-2011 Dodge Avenger (Premium Audio Only)

2007-2010 Chrysler Sebring (Premium Audio Only)

2008-2011 Dodge Challenger

2011 Chrysler 200

**Installation Instructions** 

- 5. Disconnect door wiring and move the door panel aside enough to allow access to the speaker. Leave door handle linkage attached.
- 6. Using a Torx T-20 driver remove the four screws securing the speaker, disconnect wiring and remove speaker.
- 7. Remove the upgrade speaker from the adapter it is shipped in, it will not be used for this vehicle.
- 8. Install the upgrade speaker with the included spacer ring (P/N RISPACER), using the supplied 1" Phillips head screws and tighten. Fig. 60
- 9. Replace all previously removed parts in reverse order.





2005-2008 Dodge Magnum (8 Channel Premium Audio Only)

2005-UP Chrysler 300C (8 Channel Premium Audio Only)

2006-UP Dodge Charger (8 Channel Premium Audio Only)

2005-2010 Jeep Commander (Premium Audio Only)

2005-2008 Dodge Ram (Regular Cab, Quad Cab, Mega Cab)

2005- 2010 Jeep Grand Cherokee (Premium Audio Only)

2008-2011 Dodge Avenger (Premium Audio Only)

2007-2010 Chrysler Sebring (Premium Audio Only)

2008-2011 Dodge Challenger

2011 Chrysler 200

**Installation Instructions** 


## 2011-2012 Charger, 300 Dash Speaker Installation

- 1. Pull the rubber door molding away from the A pillar location on driver's side and passenger's side. Fig. 61
- 2. Pull the A pillar cover loose on the driver's side and passenger's side and disconnect the black retainer. Fig. 62





- 3. Using a panel removal tool, gently lift speaker grill to release fasteners. Fig. 63
- 4. Remove the 7mm screws securing the existing speakers disconnect wiring and remove speaker
- 5. Connect the speaker wiring install the upgrade speaker and replace screws. Fig. 64

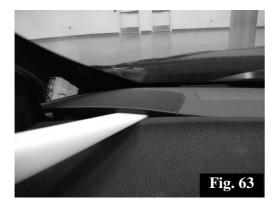





2005-2008 Dodge Magnum (8 Channel Premium Audio Only)

2005-UP Chrysler 300C (8 Channel Premium Audio Only)

2006-UP Dodge Charger (8 Channel Premium Audio Only)

2005-2010 Jeep Commander (Premium Audio Only)

2005-2008 Dodge Ram (Regular Cab, Quad Cab, Mega Cab)

2005- 2010 Jeep Grand Cherokee (Premium Audio Only)

2008-2011 Dodge Avenger (Premium Audio Only)

2007-2010 Chrysler Sebring (Premium Audio Only)


2008-2011 Dodge Challenger

2011 Chrysler 200

Installation Instructions

# 2011-2012 Charger, 300 Front Door Speakers

- 1. Using the end of a Phillips screwdriver gently depress the center pin of the plastic retainer toward the front of the door panel. The center pin of the plastic retainer should depress approximately 1/8" to allow the retainer to be removed from the door panel and then pry out with a panel removal tool. Fig. 65
- 2. Using a pick tool, remove the screw cover behind the door release lever and on the armrest and remove the screws. Fig. 66

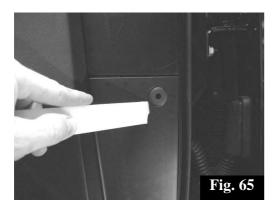



- 3. Remove the screw retaining the rubber bumper. Fig. 67
- 4. Using a panel removal tool pry loose the switch plate and disconnect the wiring. Fig. 68







2005-2008 Dodge Magnum (8 Channel Premium Audio Only)

2005-UP Chrysler 300C (8 Channel Premium Audio Only)

2006-UP Dodge Charger (8 Channel Premium Audio Only)

2005-2010 Jeep Commander (Premium Audio Only)

2005-2008 Dodge Ram (Regular Cab, Quad Cab, Mega Cab)

2005- 2010 Jeep Grand Cherokee (Premium Audio Only)

2008-2011 Dodge Avenger (Premium Audio Only)

2007-2010 Chrysler Sebring (Premium Audio Only)

2008-2011 Dodge Challenger

2011 Chrysler 200

**Installation Instructions** 

- 5. Snap loose the door panel using a panel removal tool and disconnect wiring.
- 6. Remove the four screws securing the speaker, disconnect wiring and remove speaker.
- 7. Remove the upgrade speaker from the adapter it is shipped in, it will not be used for this vehicle.
- 8. Install the upgrade speaker and replace screws. Fig. 69
- 9. For reassembly, remove the window felt by releasing the four metal clips securing it to the door panel. Reinstall the window felt onto metal along the top of the door and then reinstall the door panel in reverse order. Fig. 70



