


GENUINE ACCESSORIES

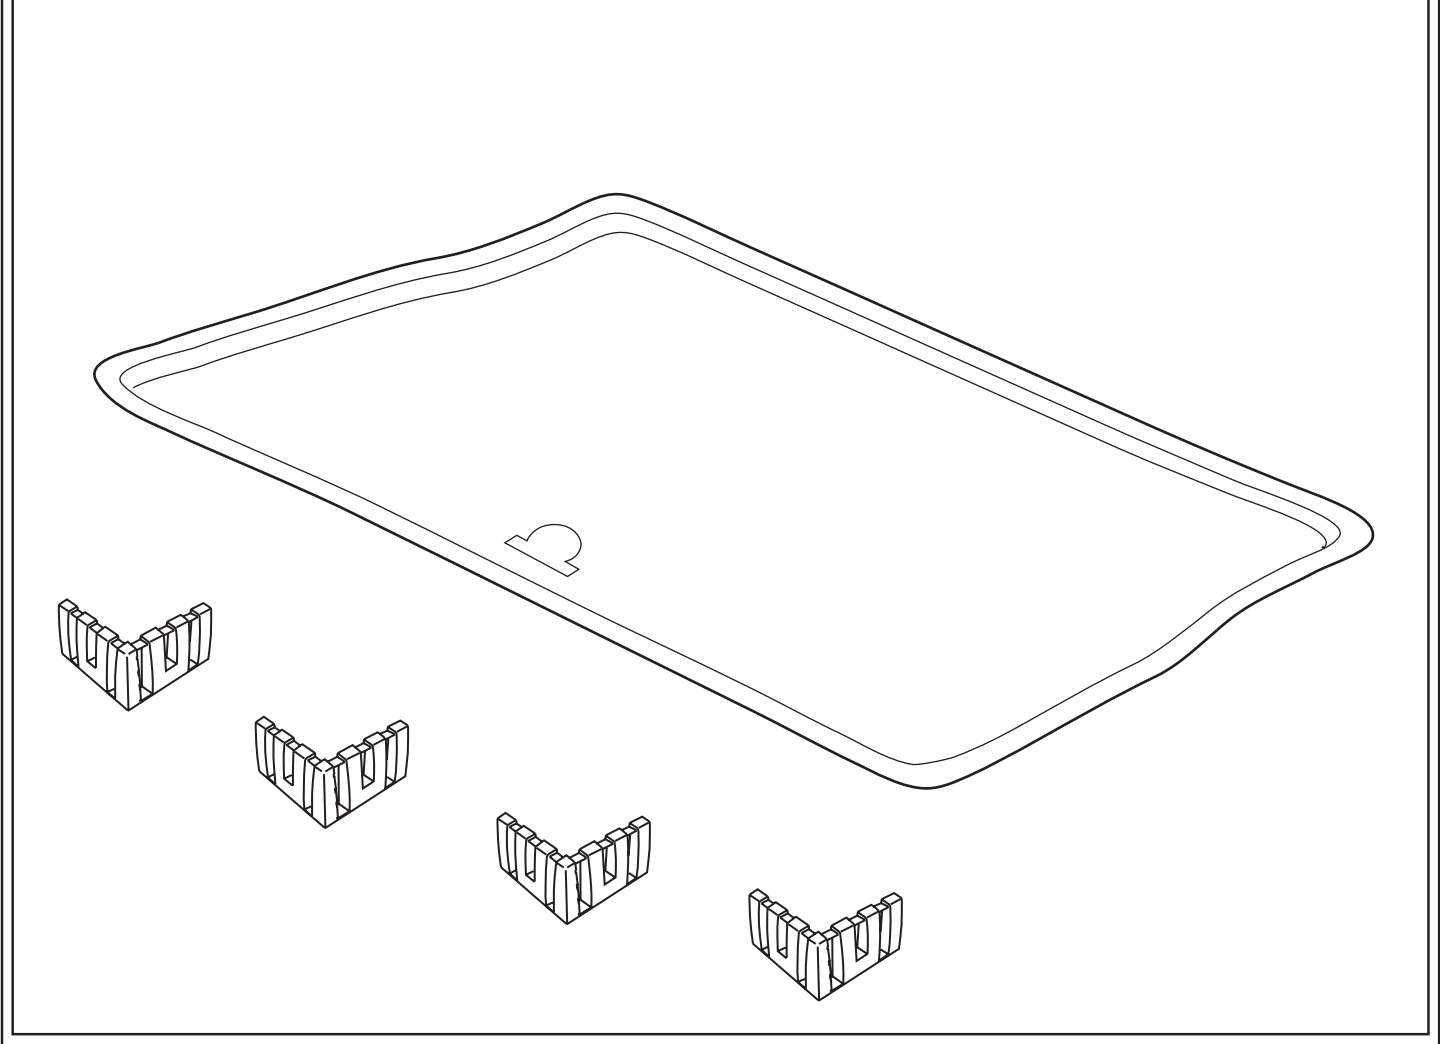

GB *INSTALLATION INSTRUCTION* **CARGO MAT**

E *INSTRUCCIONES DE MONTAJE* **LA ESTERA DE LA CARGA**

F *NOTICE DE MONTAGE* **TAPIS DE CARGAISON**

Subject to alteration without notice
Reservadas modificaciones técnicas
Sous réserve de modifications
techniques

11-17-03 I-165

DAIMLERCHRYSLER

GENUINE ACCESSORIES

GB

Application: RS Minivan
Install parts as shown on illustrations.


E

Aplicación: RS Minivan
Instale las piezas tal como muestran las ilustraciones.


F

Application: RS Minivan
Installer les éléments comme indiqué sur les illustrations.

1

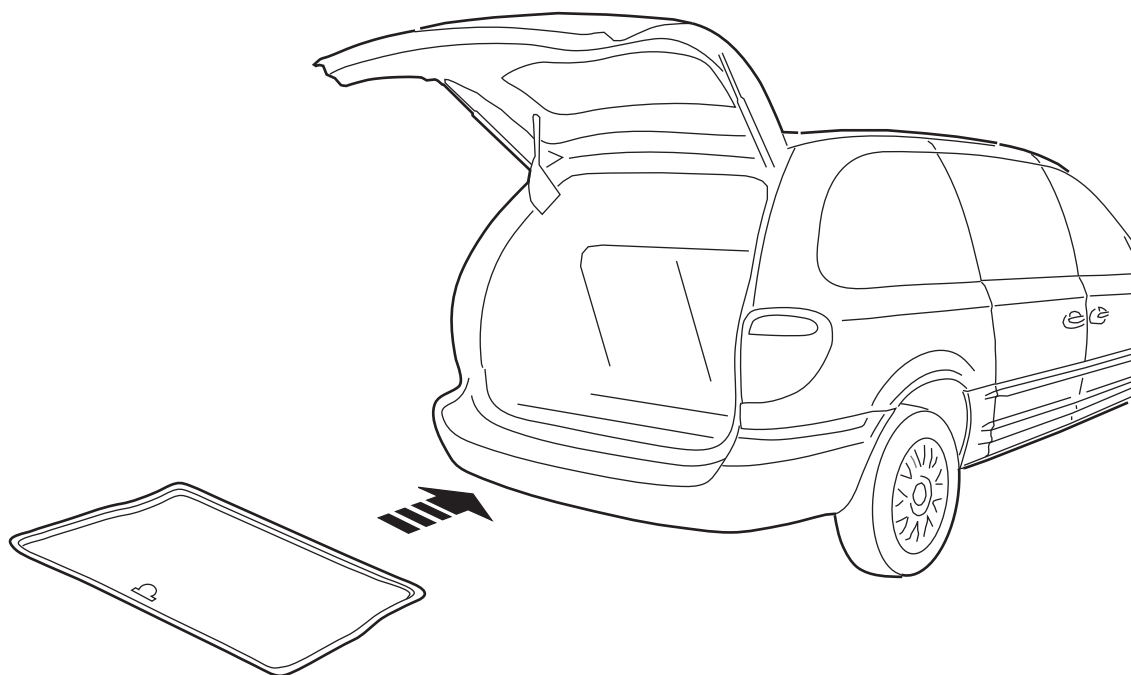

2

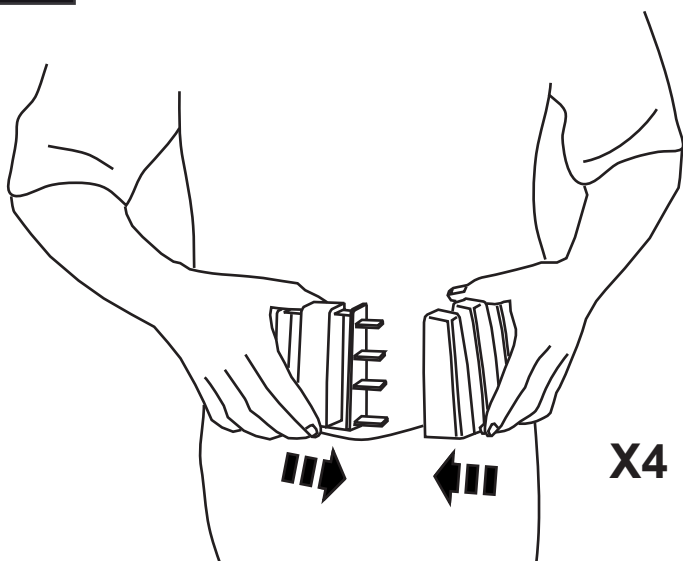

3

