



GB	INSTALLATION INSTRUCTION	SUNSHADE
E	INSTRUCCIONES DE MONTAJE	PARASOL
F	NOTICE DE MONTAGE	PARE-SOLEIL

Subject to alteration without notice
Sujeto a cambios sin aviso previo
Sous réserve de modifications techniques

02-2006 82210314
DAIMLERCHRYSLER

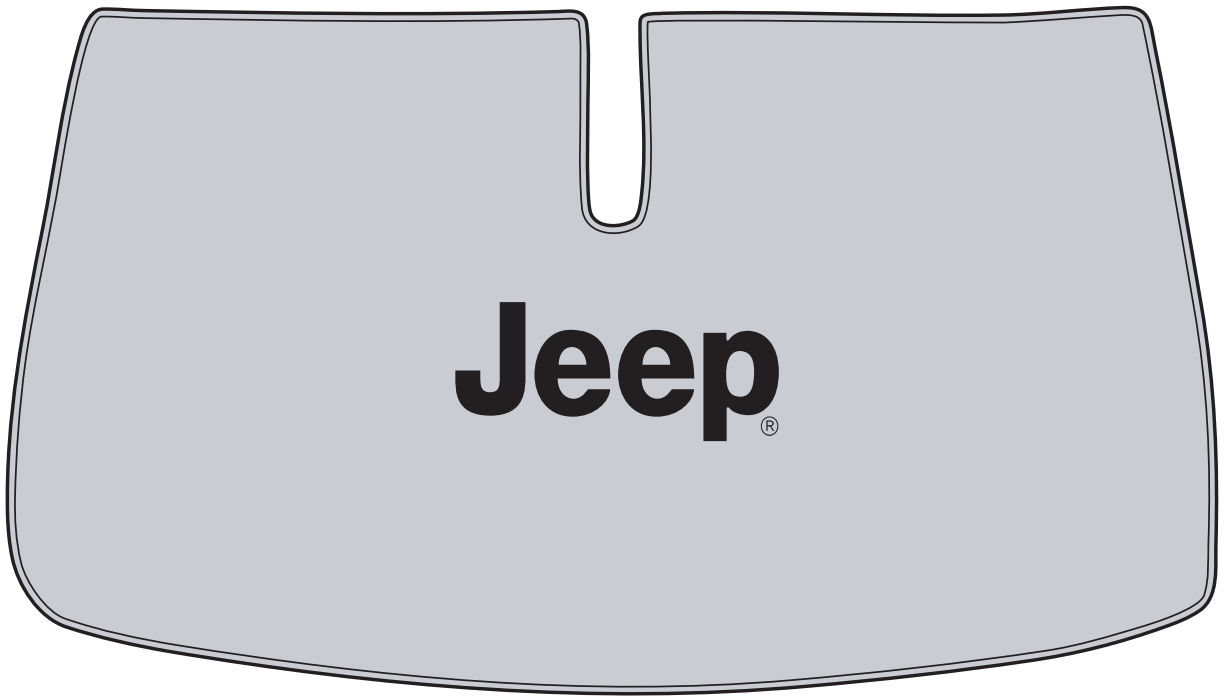

A

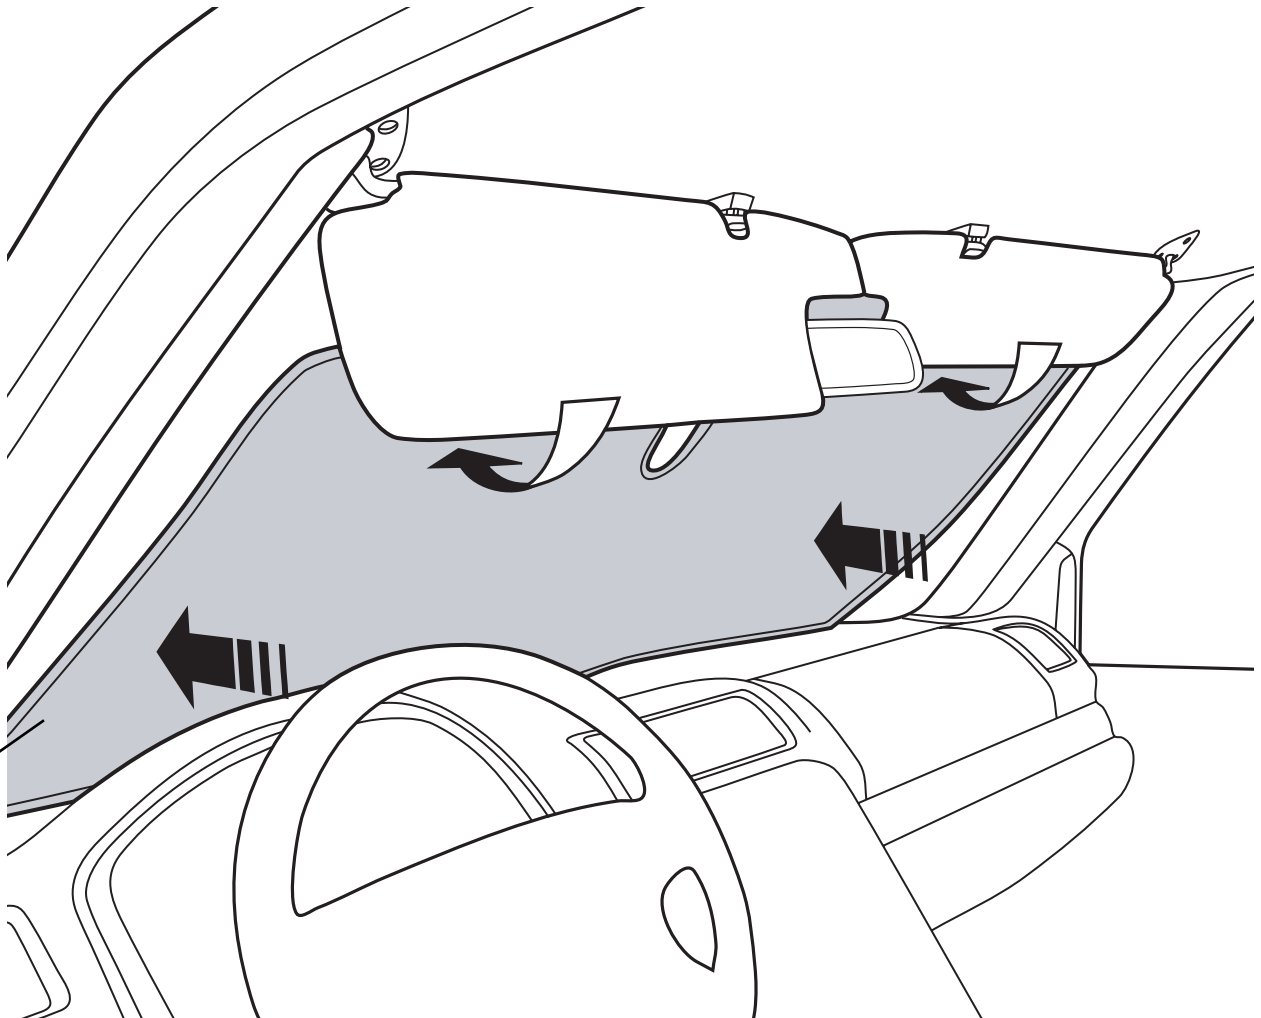

A

1