


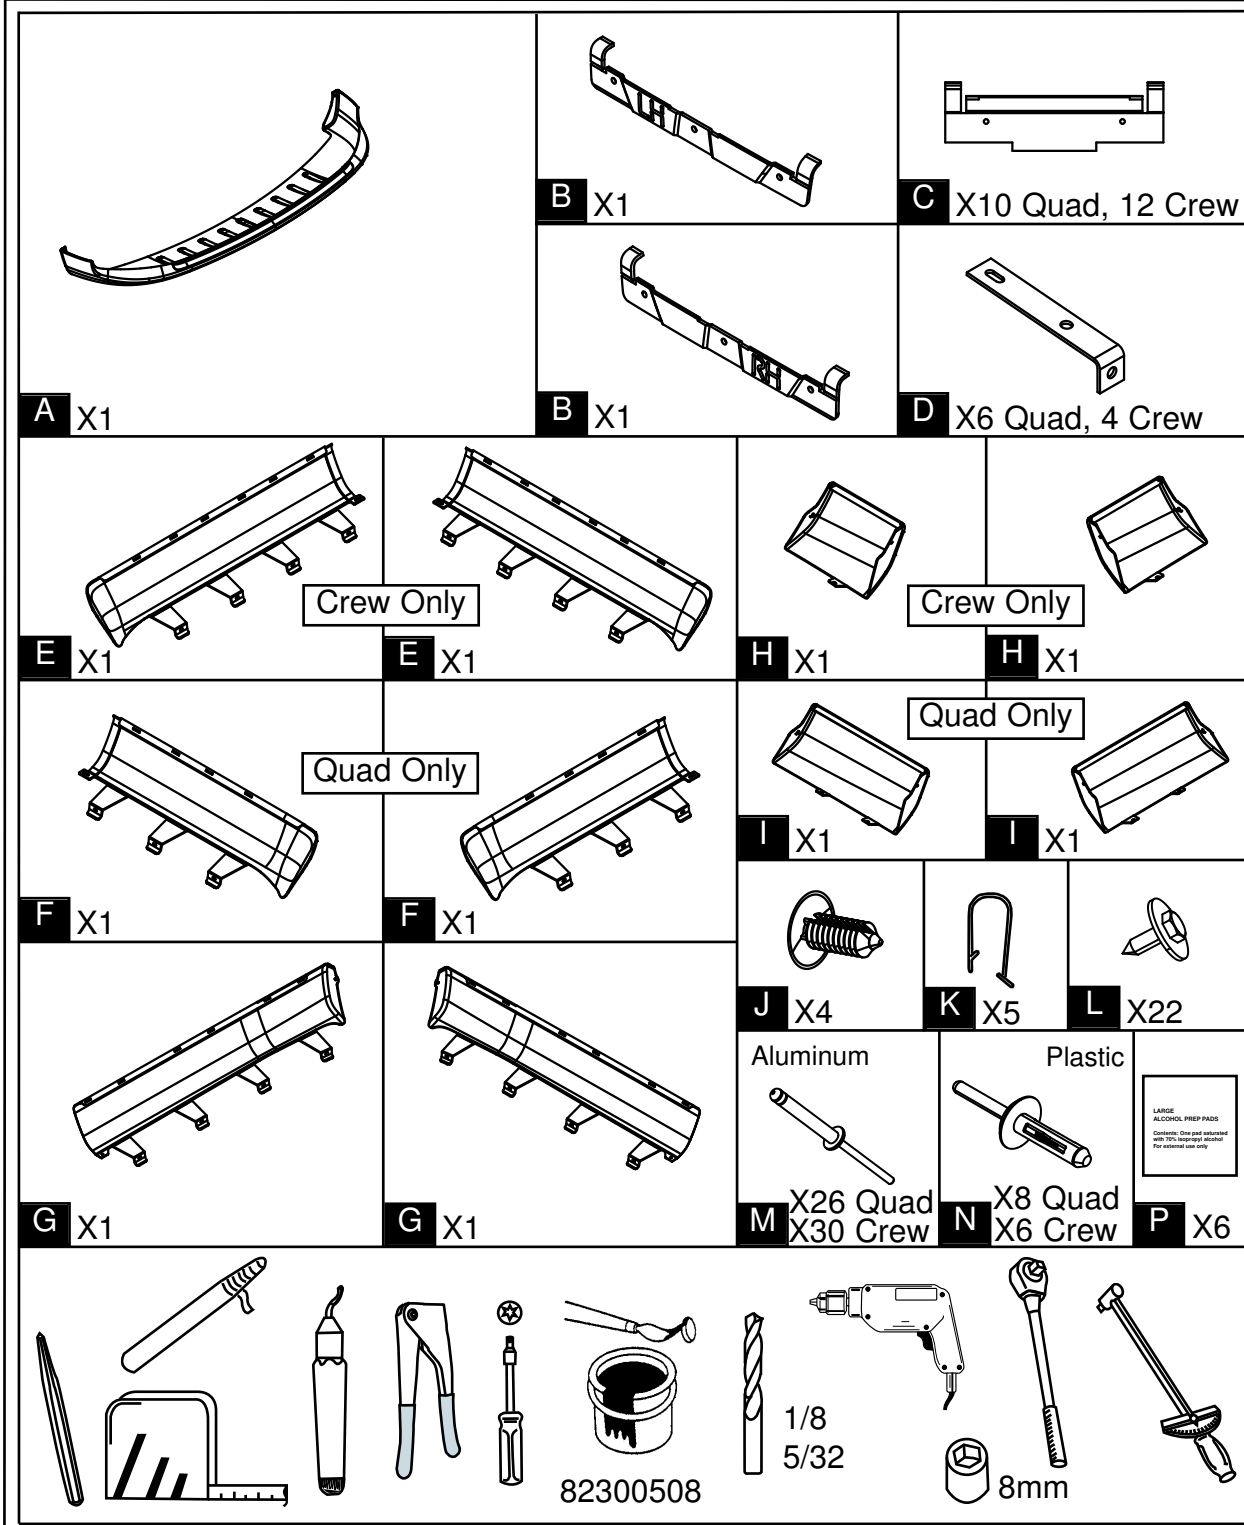


Dodge Ram

Body Kit




Air Dam

Clean Vehicle

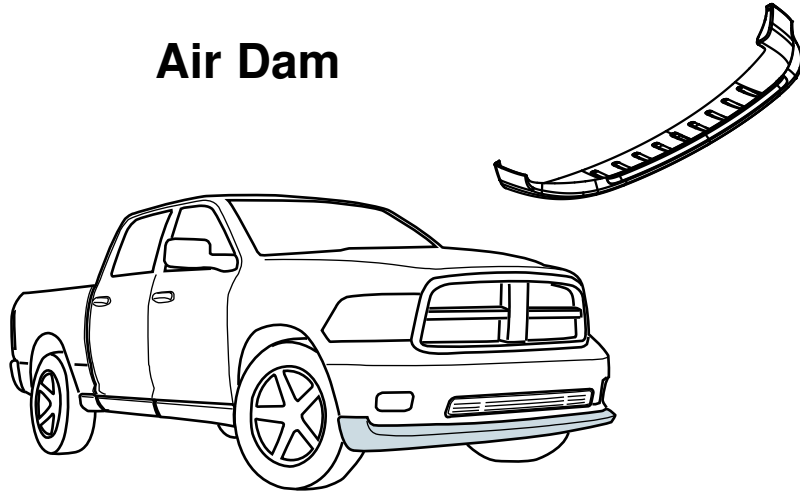


Remove existing wheel well liner push pin and discard.

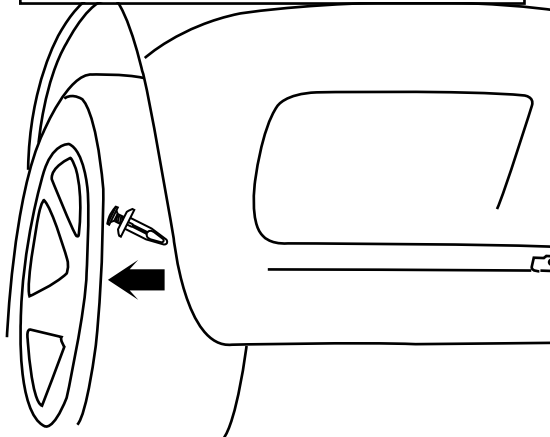


1

Mark Center

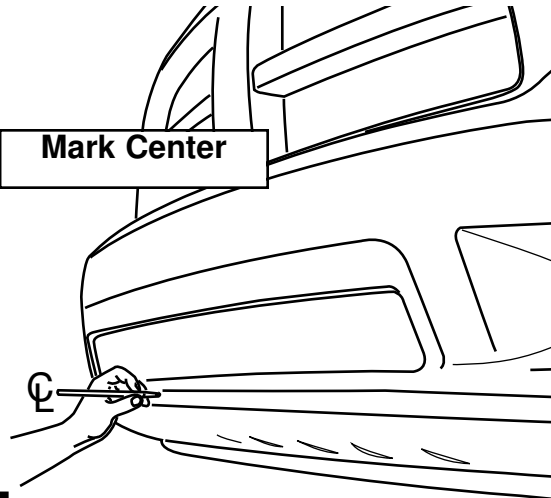


2

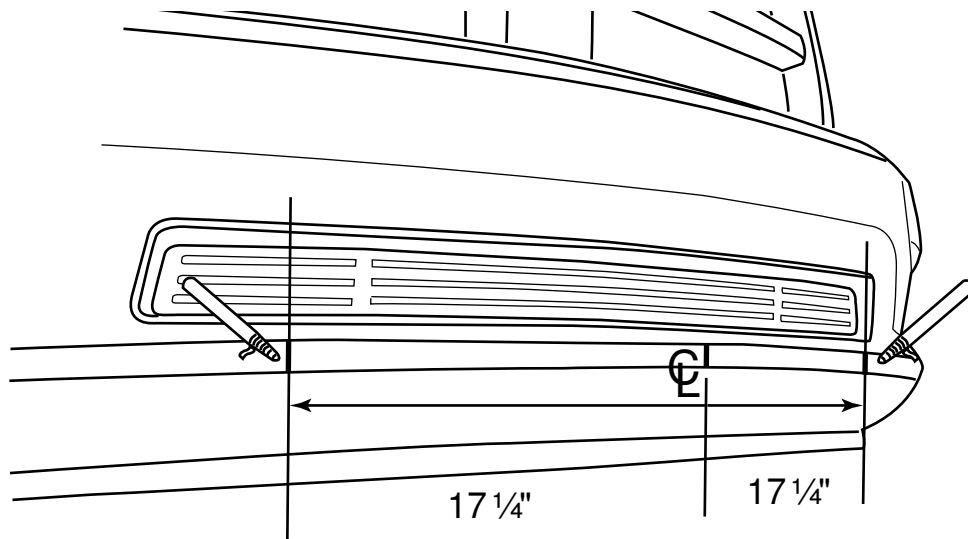


3

Line up bracket to measurement line.

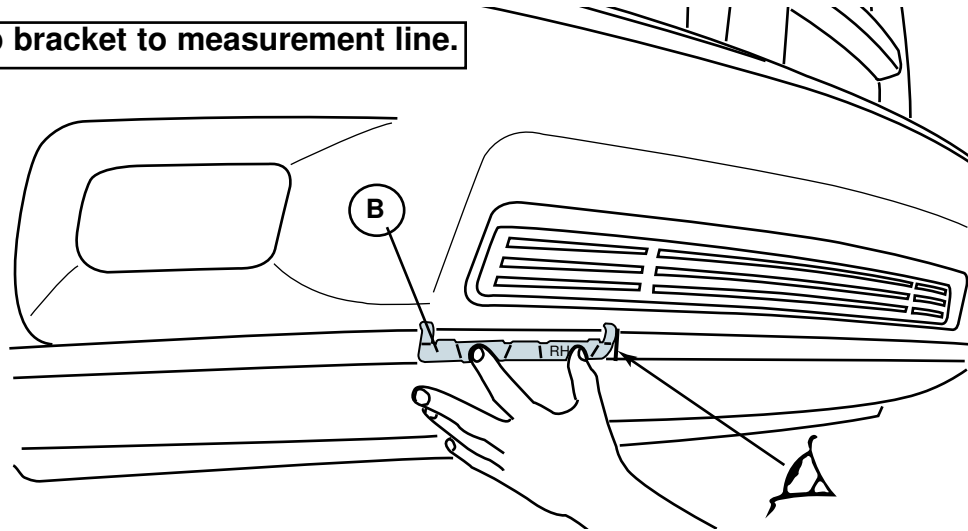


4


Push in by hand.

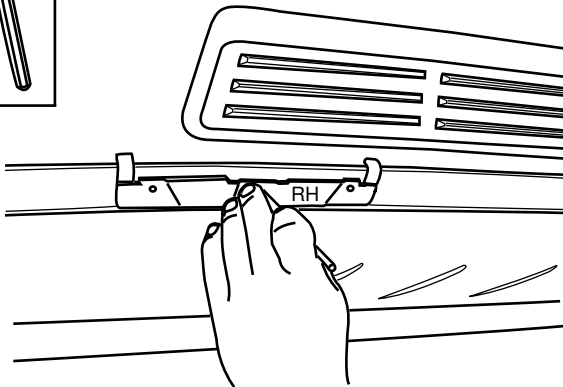


5

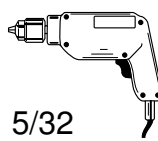


5/32

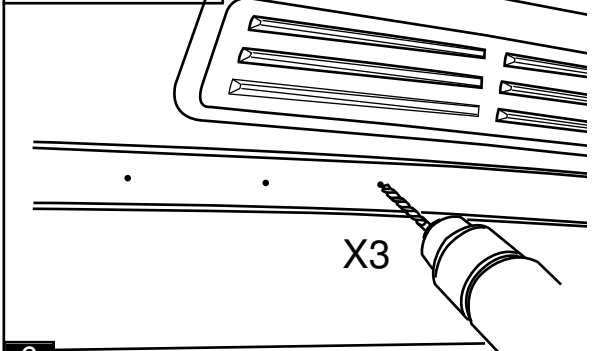


6

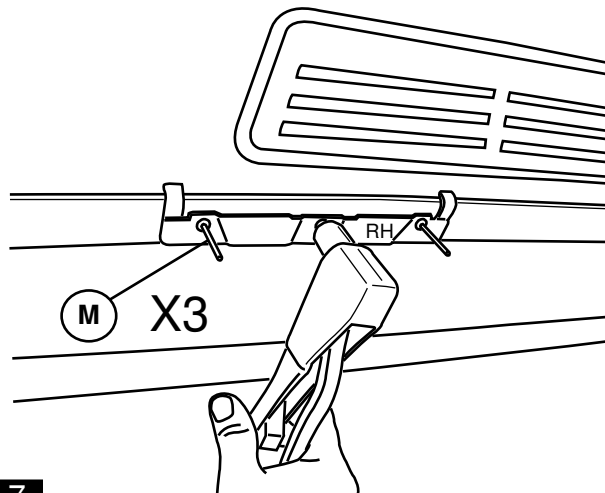


7

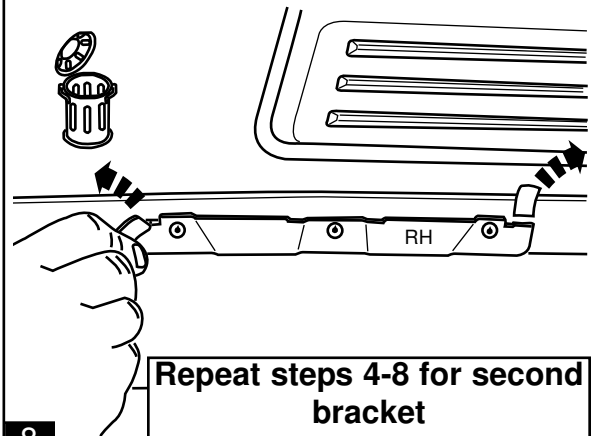

8

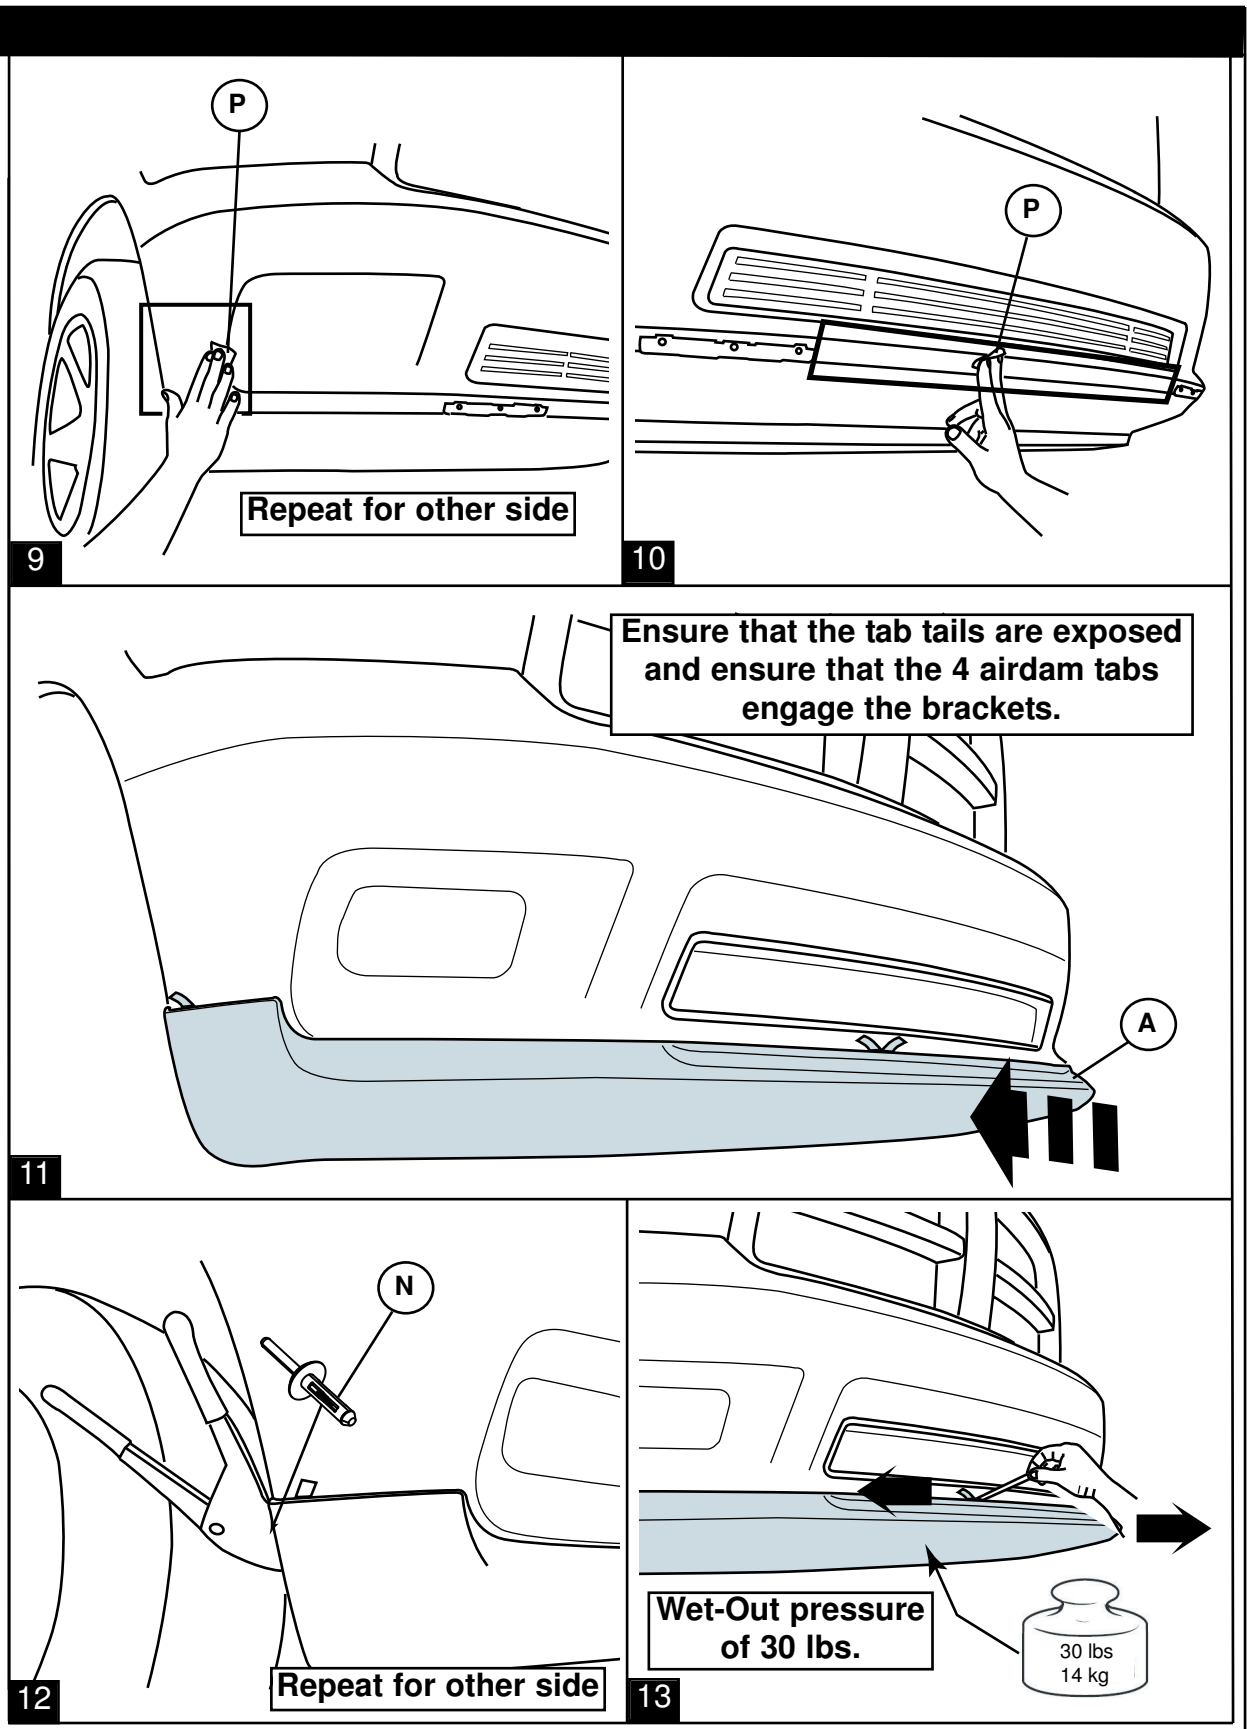


Wet-Out pressure
of 30 lbs.

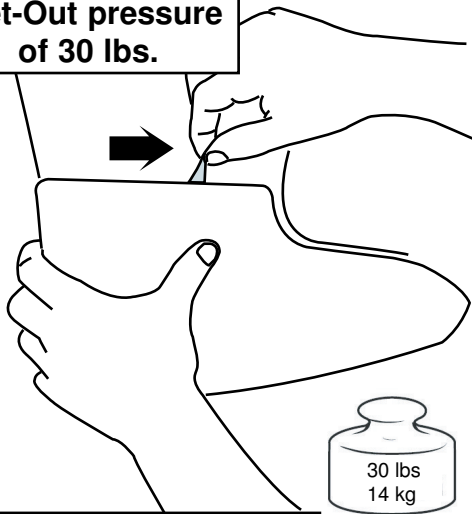

14 Repeat for other side


(K)

X5

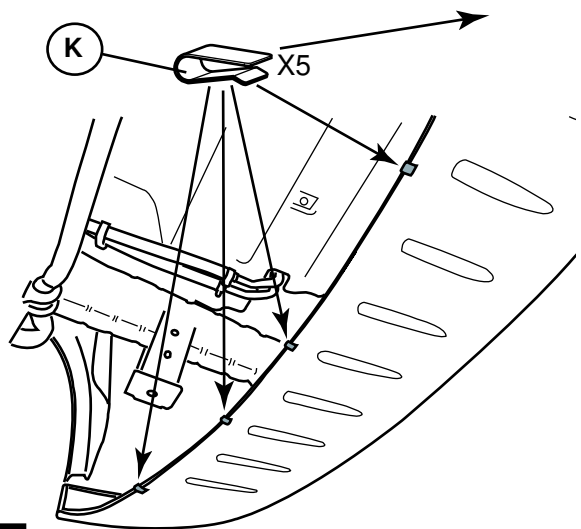


15

Crew Cab

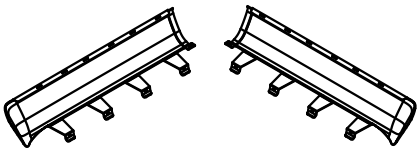

Side Sills

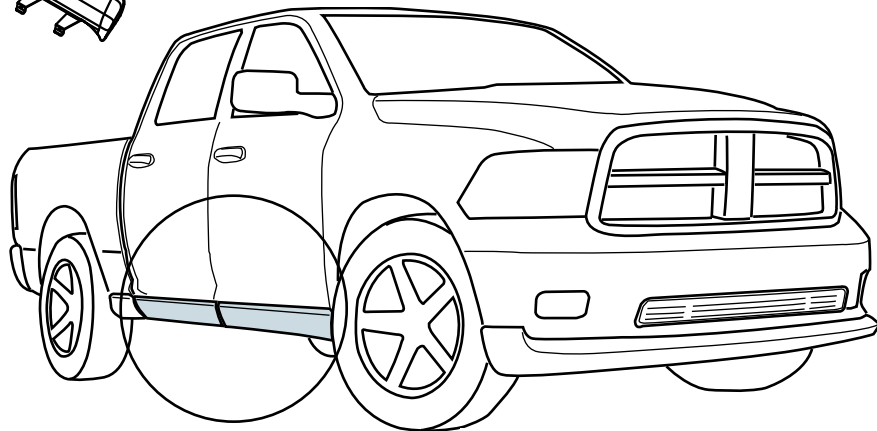

Quad Cab

