




# LOCKABLE GLOVE BOX


## DODGE RAM

### PROCEDURE STEPS:


1. Open the glove box.
2. Remove the retainers (1) from the glove box and remove the latch assembly.

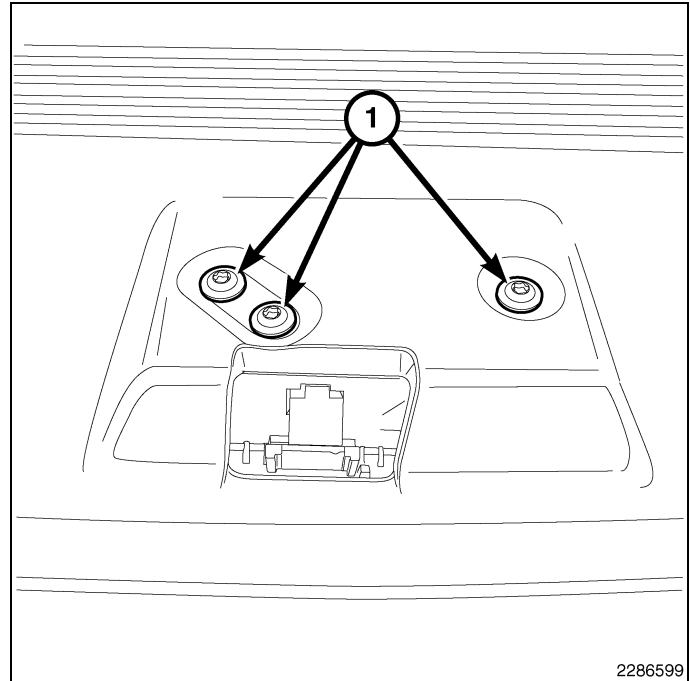


3. Insert the key into the lock cylinder (2), align the slot (1) on the lock cylinder with the tab on the latch (shown in step 4).

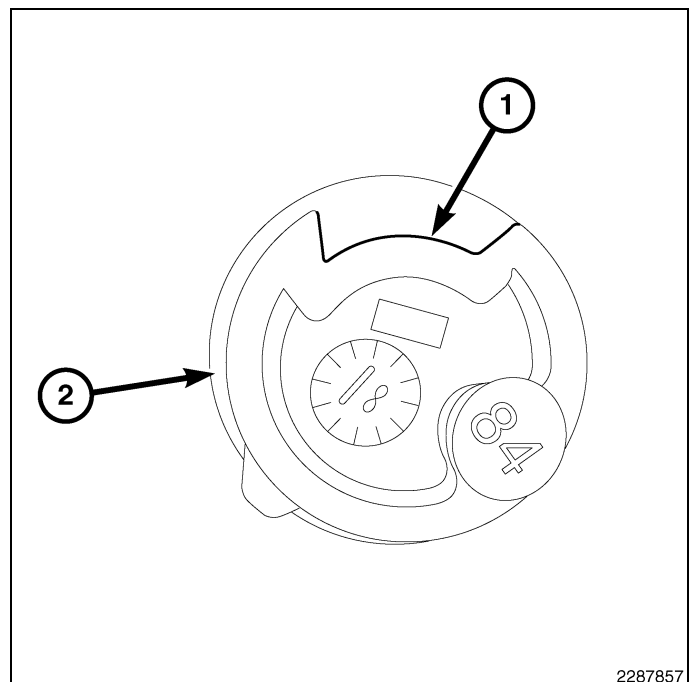

4. While aligning the slot with the tab (1) it may be necessary to move the key around in the cylinder to allow easier installation.

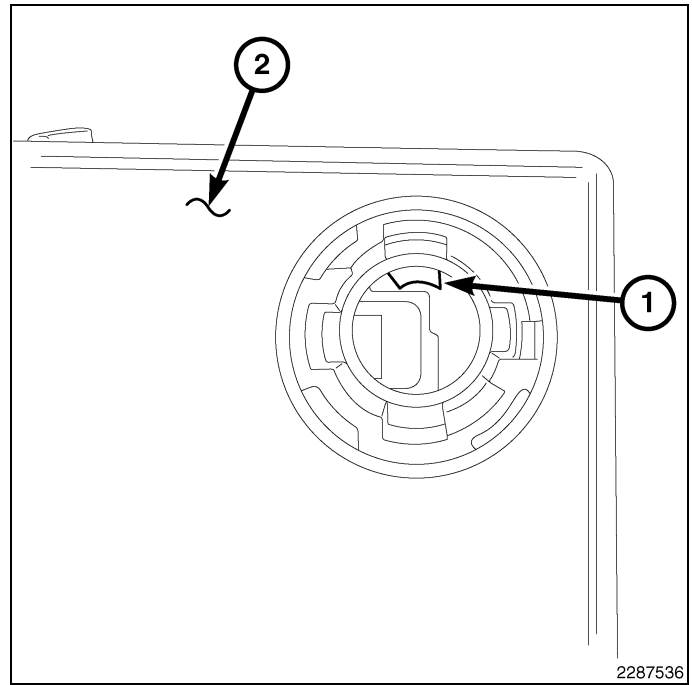

5. Turn the key counter clockwise until it clicks in a vertical position.
6. Remove the key from the handle.
7. Install the handle into the glove box and tighten the retainers (reverse step 1 for installation).
8. Verify that the glove box locks and unlocks.

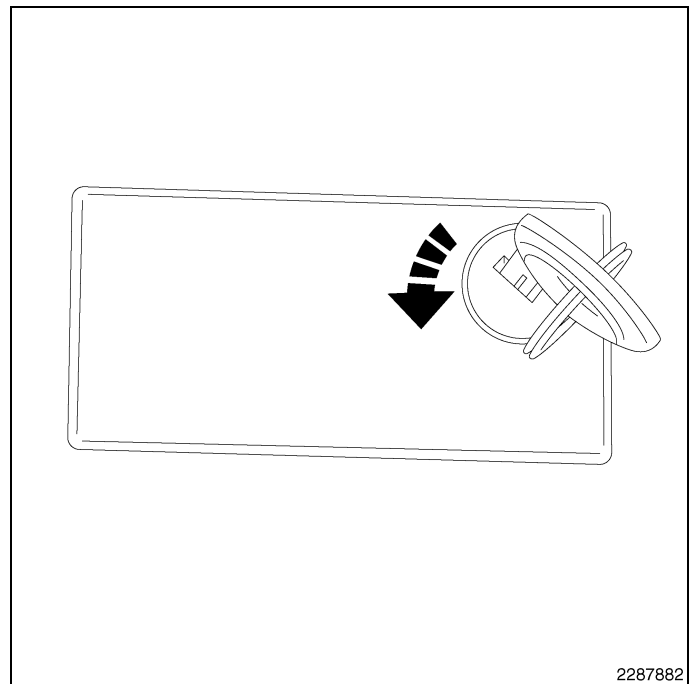



## ADDENDUM TO CODE LOCK CYLINDER

### Steps to Code Lock Cylinder

1. BEFORE YOU INSTALL bring accessory kit 82211490 to your dealer service desk along with the VIN number of the vehicle you are installing the kit into.
2. The service desk will provide the correct tumblers and springs and a technician will install them into the cylinder.
3. After these tumblers and springs are installed please follow installation sheet K6860723 included in the kit.