




Passenger Side Shown
 El Lado del Pasajero Mostrado
 Côté passager illustré




Dodge Ram



Running Board
 Estribo
 Marche pied

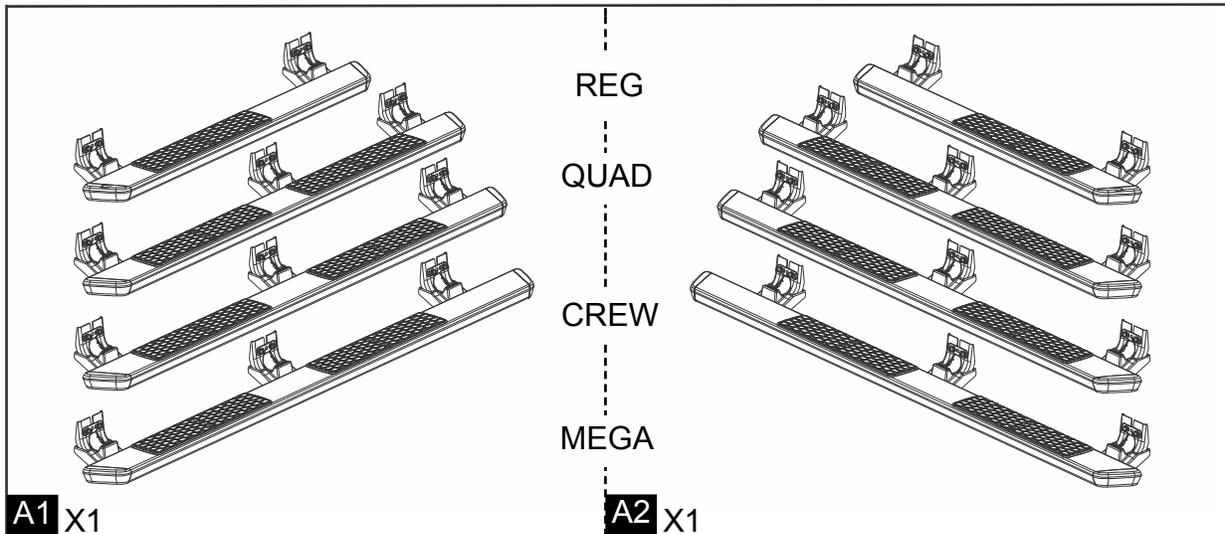


A1 X1

A2 X1

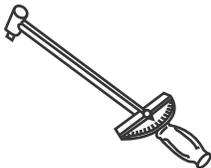
 Quad X12 Crew X12 Mega X12 Regular X8 M8	 Quad X12 Crew X12 Mega X12 Regular X8 M8	 Quad X12 Crew X12 Mega X12 Regular X8 M6	 Rivnut Installation Tool Herramienta de instalación de remaches-tuercas Outil de pose d'écrou à river	
---	---	---	--	--

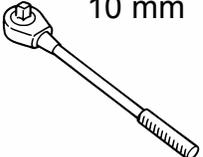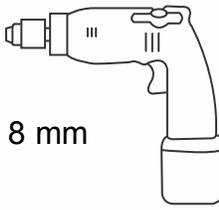 10 mm 	 8 mm 			
--	---	--	---	---

	 82300508ab	<div data-bbox="909 1648 1331 1753" style="border: 1px solid black; padding: 5px;"> <p>Check the bolt pack for the correct number of fasteners as indicated on the I-sheet.</p> </div> <p style="text-align: center;">1</p>
---	--	--

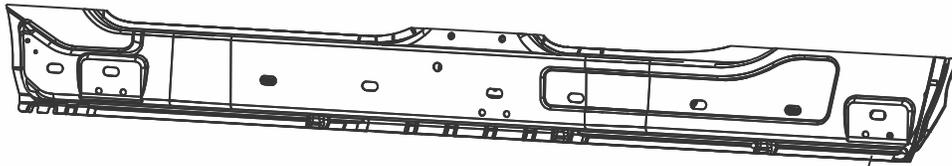


Front of Vehicle
Avant du Vehicule
Parte Delanteradel Vehiculo

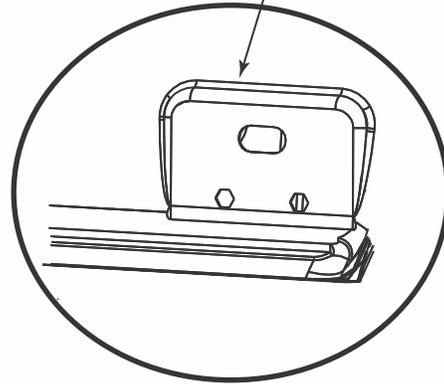


2008-2012

Crew Shown

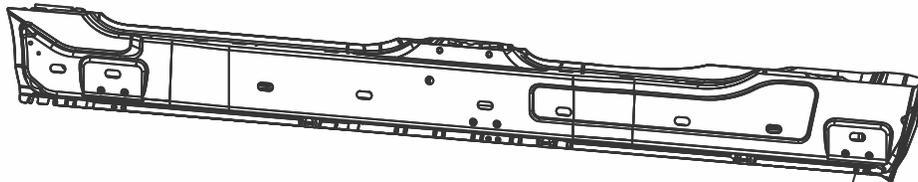

Front of Vehicle
Avant du Vehicule
Parte Delanteradel Vehiculo

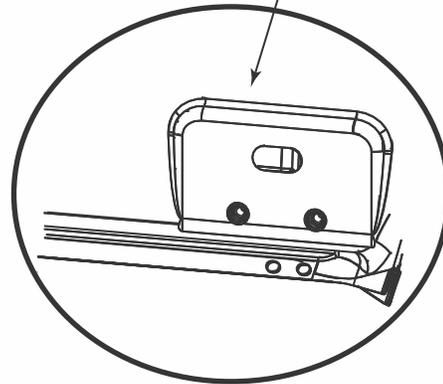

2013 +


Crew Shown

2013 VEHICLE
CREW
6X M8 RIVNUTS INSTALLED
6X SLOTS PUNCHED IN PINCH WELD
REG
4X M8 RIVNUTS INSTALLED
4X SLOTS PUNCHED IN PINCH WELD




If model year is 2008-2012 proceed to step 3. If model year is 2013 or newer proceed to step 9.

2

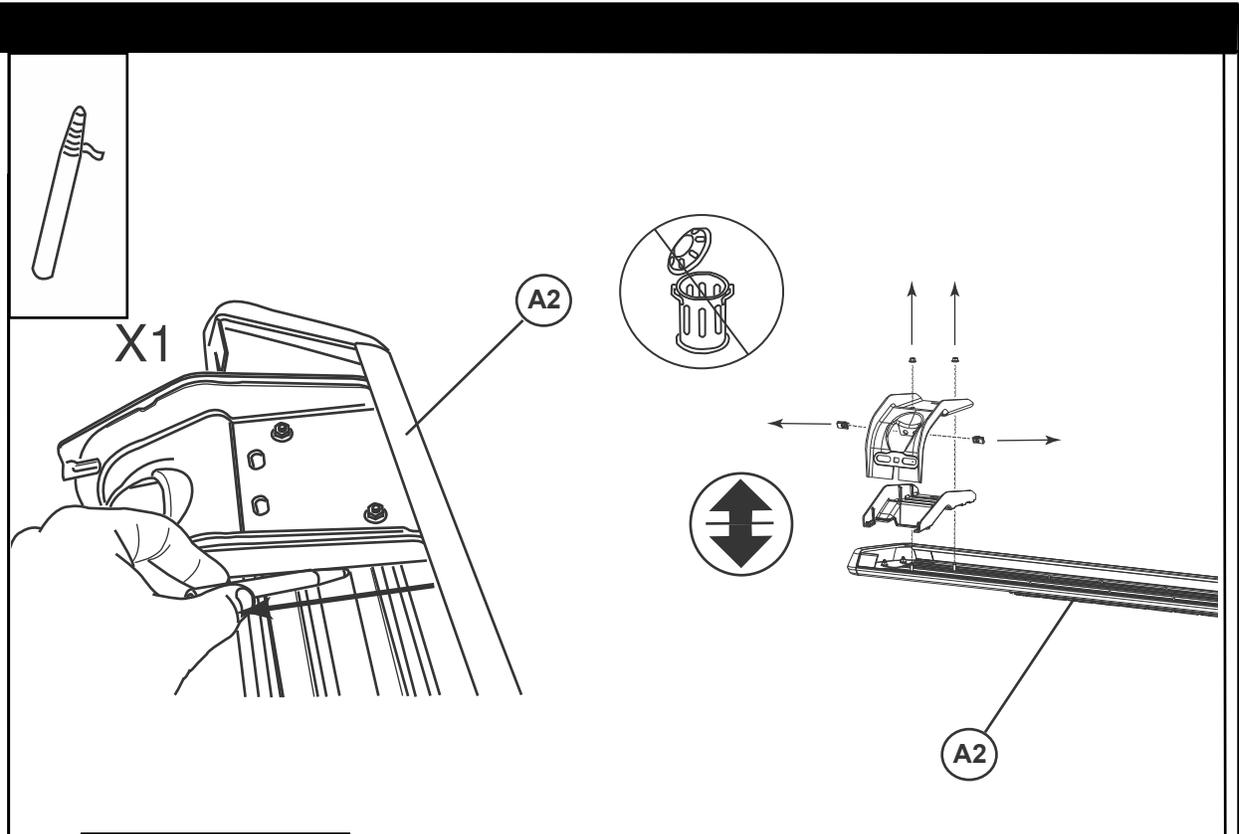

3 Crew Shown


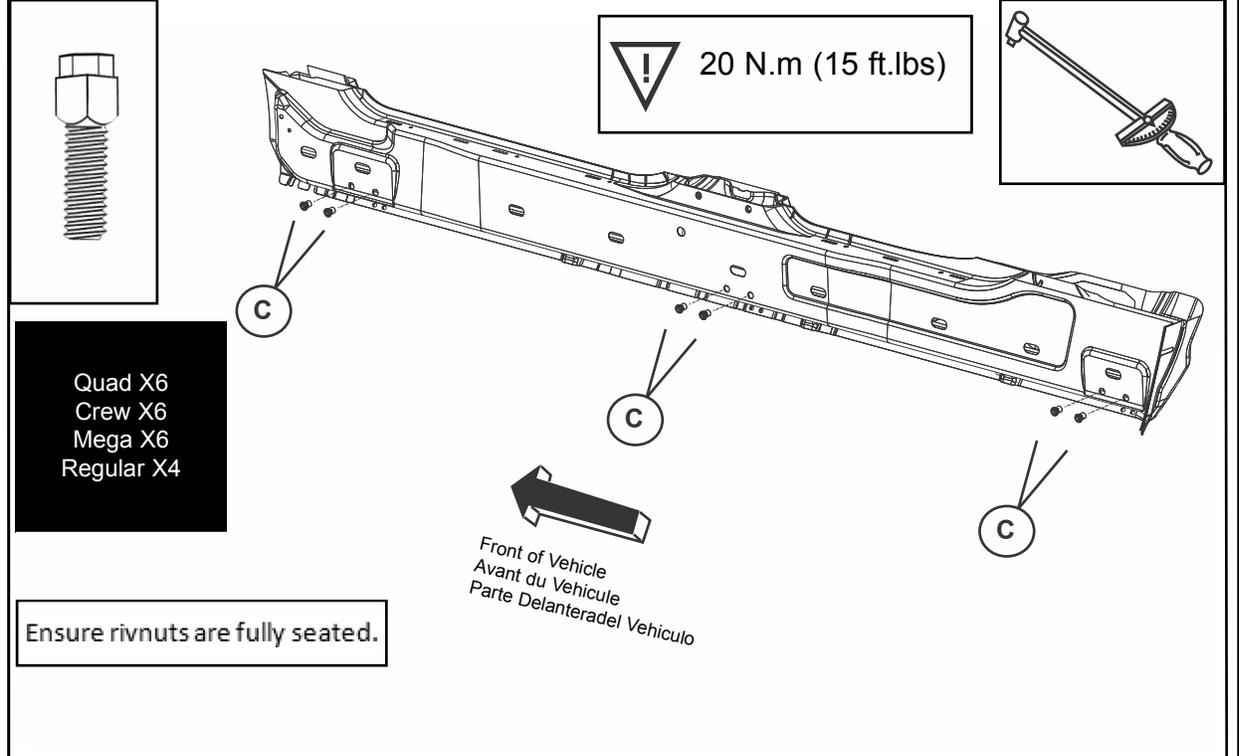


4 Crew Shown



Quad X6
Crew X6
Mega X6
Regular X4

Crew Shown

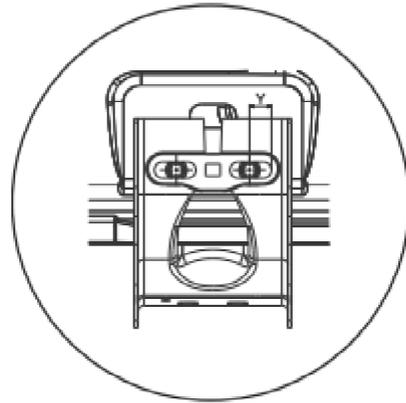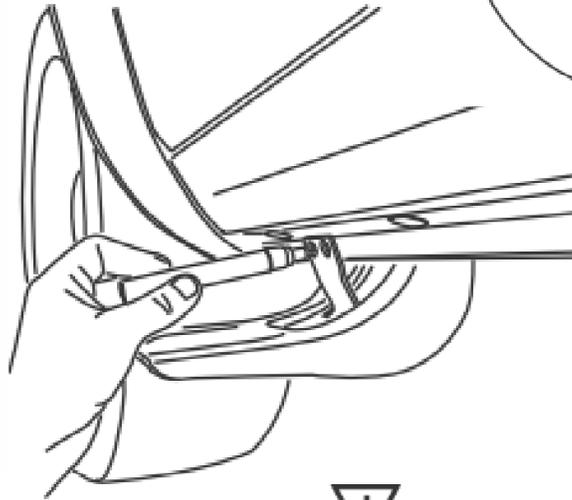

Using 2 M8 fasteners (item B) loose assemble the bracket removed in step 3 and mark the drill locations in the pinch weld. All measurements will be taken from the rear most edge of the rear slot on the upper part of the bracket to the center of the corresponding rivnut.

Measurements:

Front Bracket (Quad, Crew, Mega & Regular) = 18mm

Center Bracket (Quad, Crew & Mega) = 24mm


Rear Bracket (Quad, Crew & Mega) = 12mm

Rear Bracket (Regular) = 15mm

5


Repeat step 5 for all remaining bracket locations on the left and right hand side of the vehicle.

6

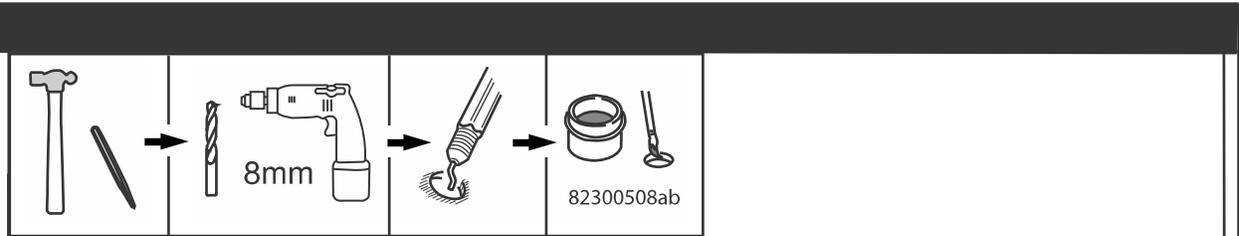


Quad X6
 Crew X6
 Mega X6
 Regular X4

Crew Shown

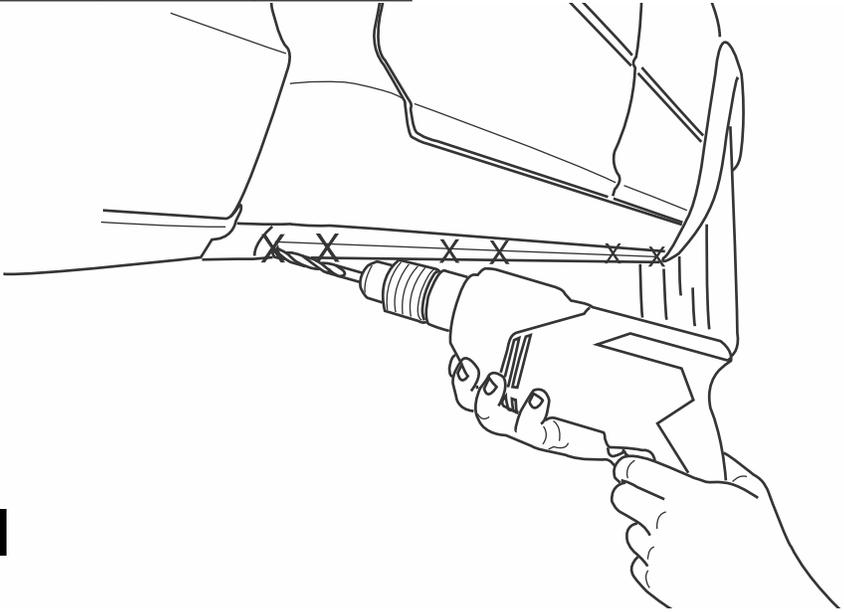


7

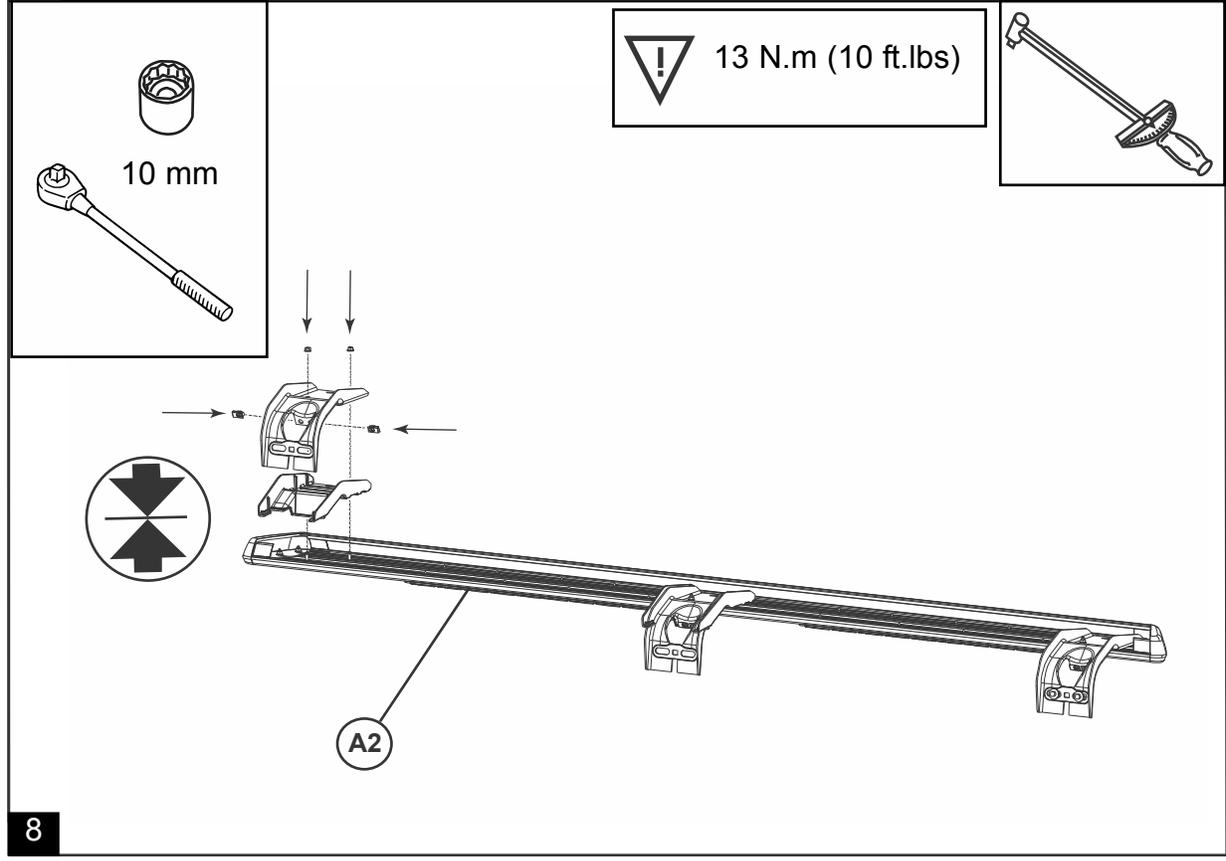

8

Align the slots in the pinch weld with the lower bracket holes. Make sure the rivnuts are visible through the slots on the upper portion of the bracket. No center bracket on Regular vehicle.

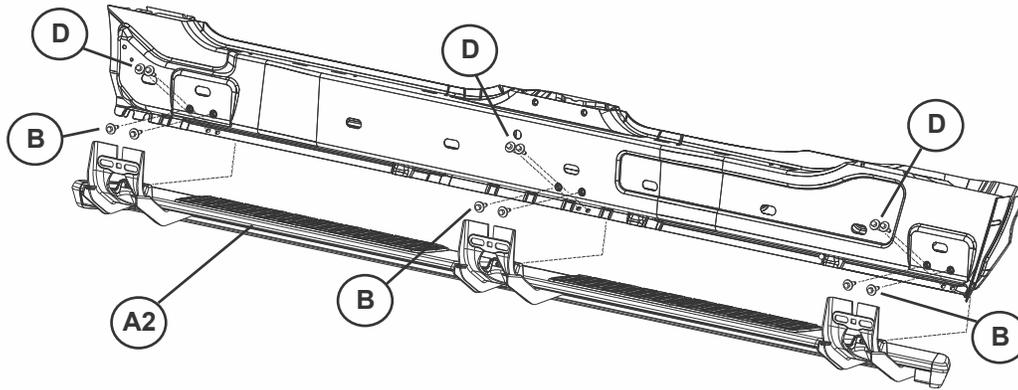


Front of Vehicle
 Avant du Vehicule
 Parte Delanteradel Vehiculo



9

Crew Shown

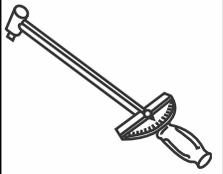

B





23 N.m (17 ft.lbs)

D



13 N.m (10 ft.lbs)

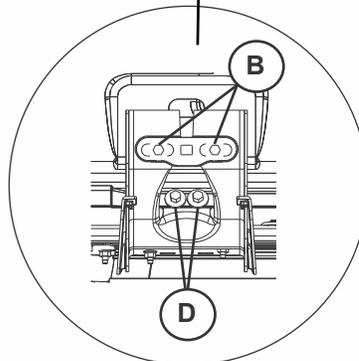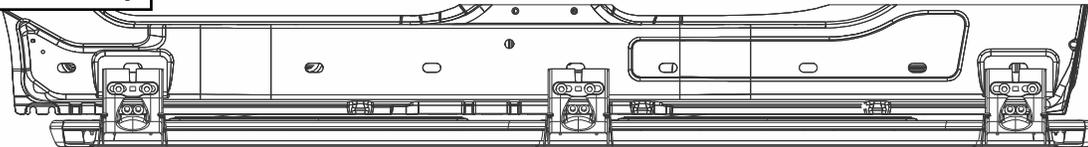

10

Crew Shown