



JEEP GRAND CHEROKEE

CHROME FRONT AIR DEFLECTOR



(A1) Chrome Air Deflector



(A2) Fasteners x 5



(A3) Bumpers x 5




(A4) Anti-abrasion Film Pads x 5



(A5) Alcohol Wipes x 1

A KIT CONTENTS

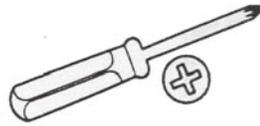

Phillips Screwdriver



Wash Tools

B TOOLS REQUIRED



INSTALLED VIEW OF
FRONT AIR DEFLECTOR



97°F

35°C

68°F

20°C



APPLICATION:

IMPORTANT NOTICE


Prior to installation, check the entire kit for possible damage or defects.

**IF PARTS ARE DAMAGED OR CONTAIN DEFECTS DO NOT INSTALL.
YOU MUST RETURN THE COMPLETE KIT IF YOU WISH TO MAKE A WARRANTY CLAIM.**



JEEP GRAND CHEROKEE


CHROME FRONT AIR DEFLECTOR

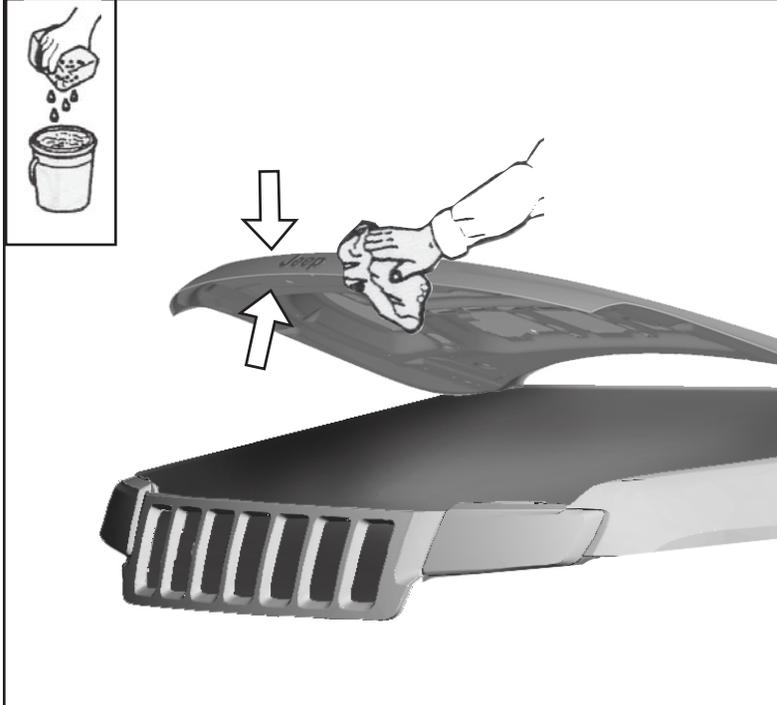


1 WASH TOP AND BOTTOM SIDES OF THE HOOD SURFACE AND DRY WITH CLEAN CLOTH.

BUMPER **A3** PLACEMENT INDICATED BY CIRCULAR MARKINGS ON BACK OF AIR DEFLECTOR. (5x)

CLEAN BACK OF AIR DEFLECTOR SURFACE LOCALLY WITH THE ALCOHOL PAD OR A CLEAN CLOTH USING ISOPROPYL ALCOHOL; 70% MINIMUM. INSTALL BUMPERS AFTER ALCOHOL HAS COMPLETELY EVAPORATED.

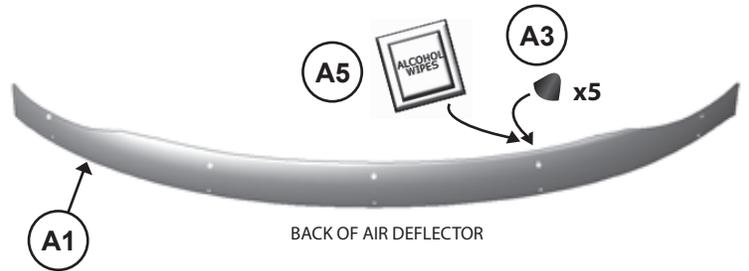


2

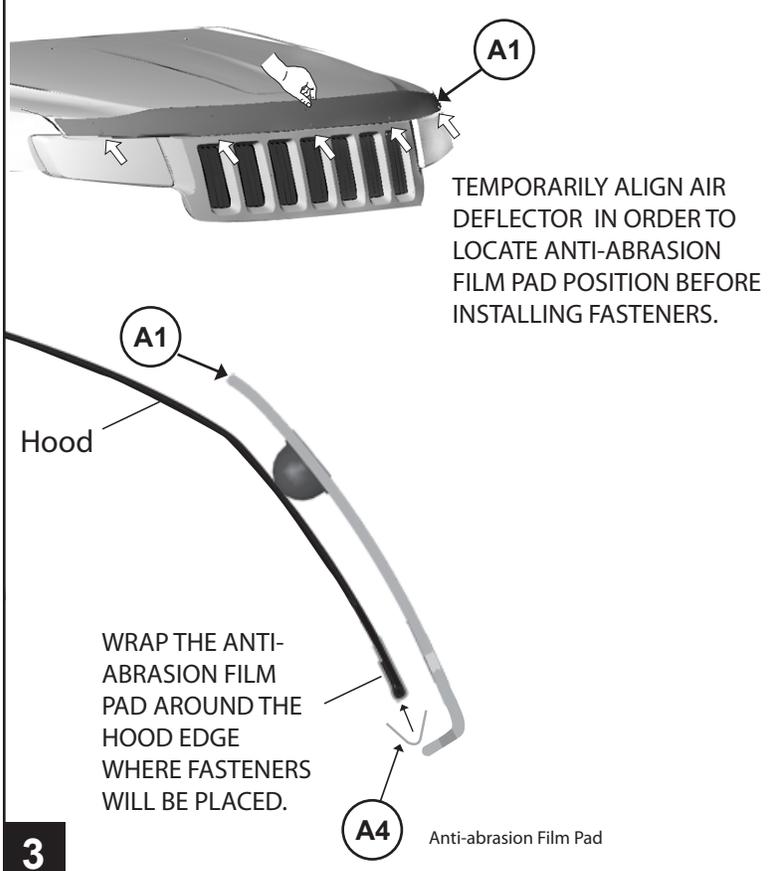

TEMPORARILY ALIGN AIR DEFLECTOR IN ORDER TO LOCATE ANTI-ABRASION FILM PAD POSITION BEFORE INSTALLING FASTENERS.


WRAP THE ANTI-ABRASION FILM PAD AROUND THE HOOD EDGE WHERE FASTENERS WILL BE PLACED.

3

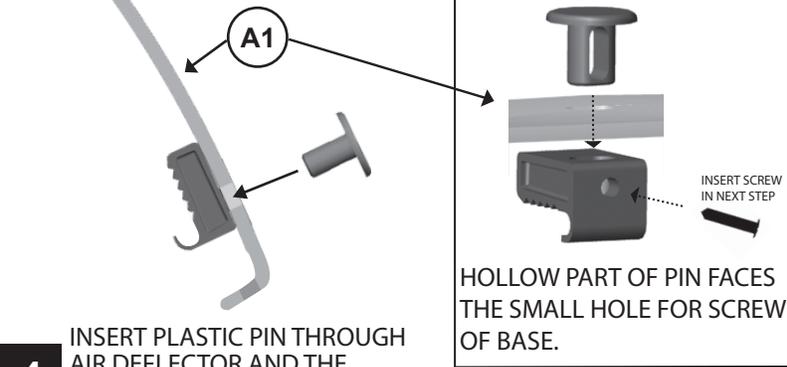

4 INSERT PLASTIC PIN THROUGH AIR DEFLECTOR AND THE FASTENER BASE. (X5)

HOLLOW PART OF PIN FACES THE SMALL HOLE FOR SCREW OF BASE.

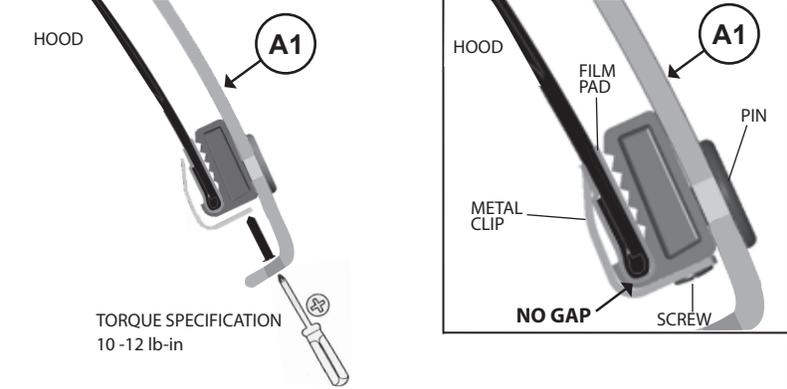

5

AFTER DEFLECTOR IS PROPERLY ALIGNED, SECURE AIR DEFLECTOR TO THE HOOD USING METAL CLIPS AND SCREWS. (X5)