



Charger Pistol Grip Shifter Installation Instructions

TOOLS REQUIRED


Needle-nose pliers
Shim tool
Phillips (star) screwdriver
Rubber Mallet & Pad



NOTE: Inspect Pistol Grip Shifter for Quality prior to Installation



2. Using needle-nose pliers, pull retainer clip from bottom front of shifter collar

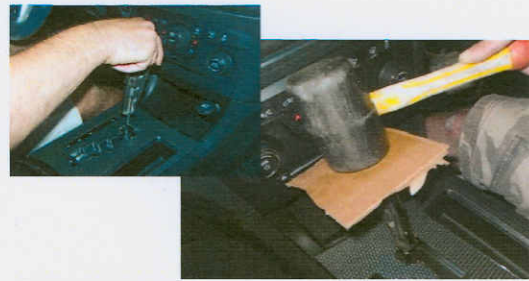

4. Place the Pistol Grip Shifter center over shaft. Cover with protector and tap shifter into place using rubber mallet.



6. Install 3 phillips screws with screwdriver. Torque screws to 12in-lbs +/- 2in-lbs

Once Installed: Check Pistol Grip Shifter is installed securely...1-2degree movement from center
Ensure plastic sides are installed correctly and there are no misalignments between mating surfaces.
Ensure there are no sharp plastic parting lines or tips.



1. Ensure vehicle is in the Park position. Using tool, "pop" chrome neck of shifter head down.



3. Remove Shifter head and chrome neck.



5. Snap on plastic side pieces.



Installed Mopar Shifter