




Chrysler 200 Convertible


WINDSTOP

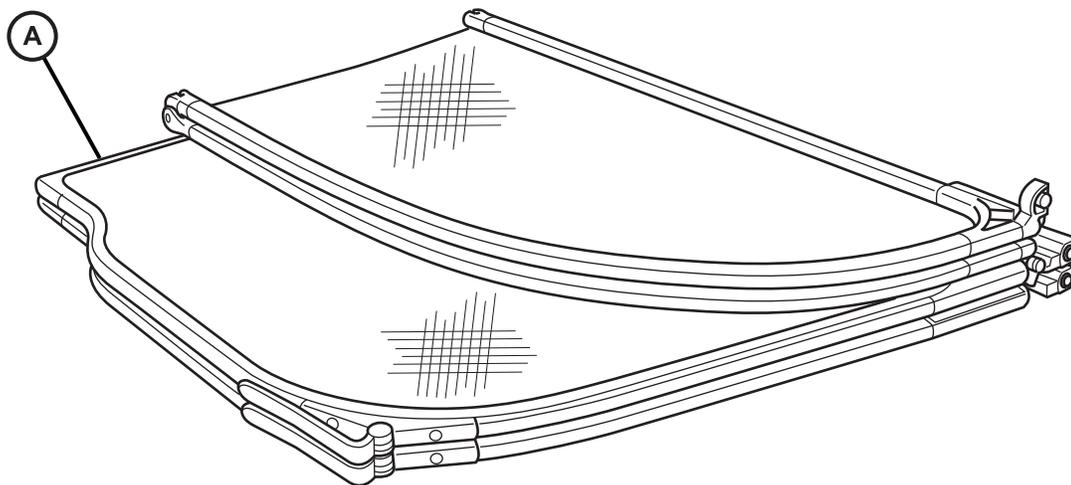


INSTALLATION

INSTALLATION


INSTALACIÓN

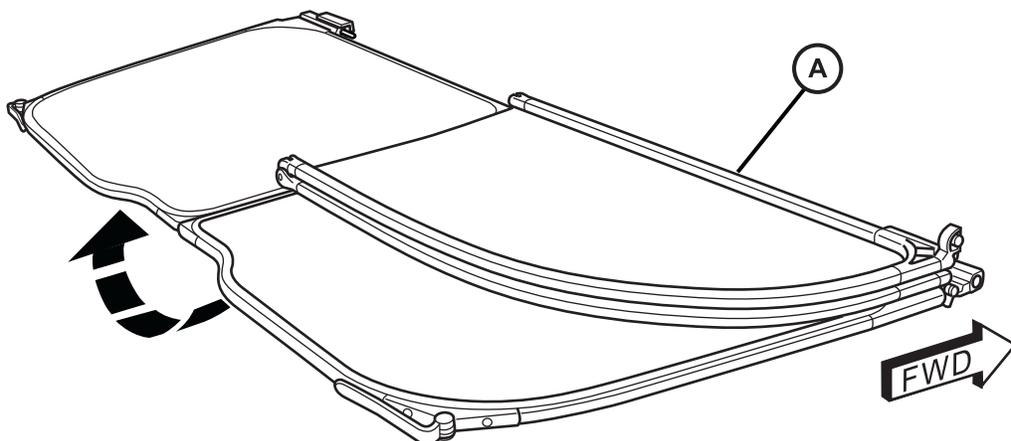


1

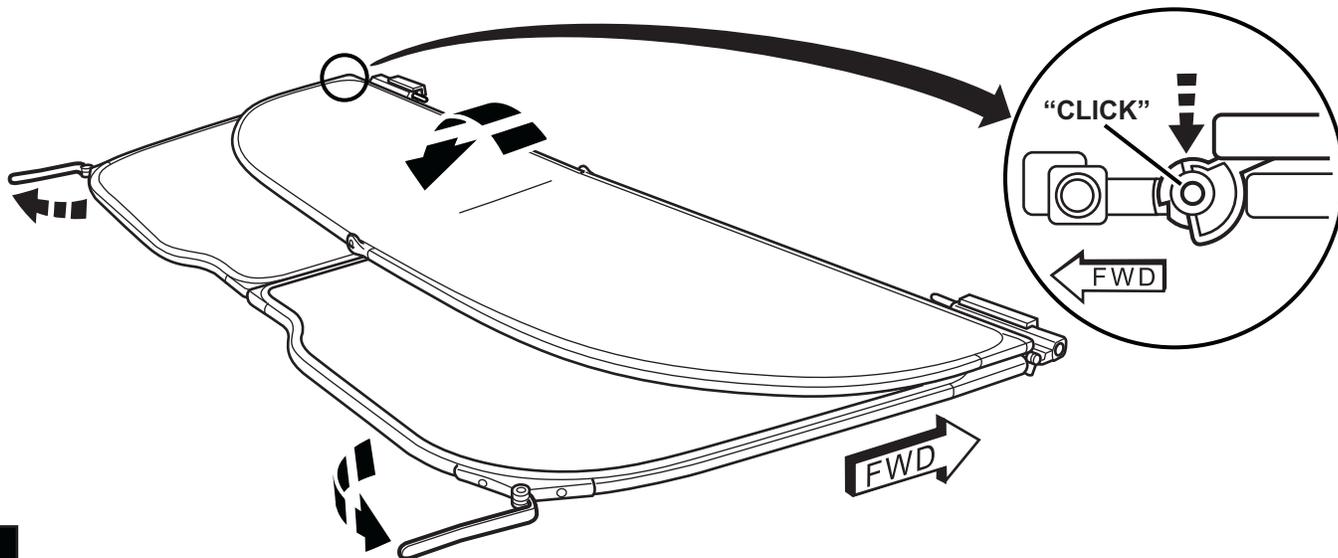


2

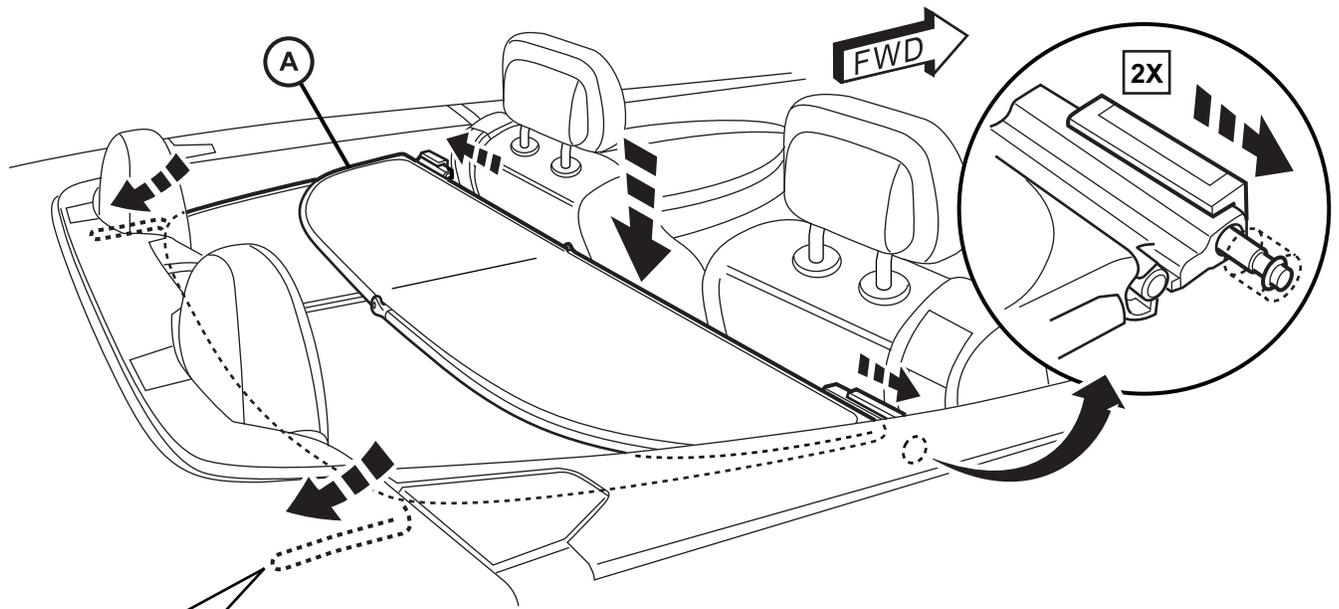

3 INSERT REAR STEMS INTO TRIM PANEL SLOTS	INSERT ARRIÈRE TIGES EN TRIM FENTES DU PANNEAU	INSERT TRASERO TALLOS EN TRIM RANURAS DEL PANEL
---	--	---

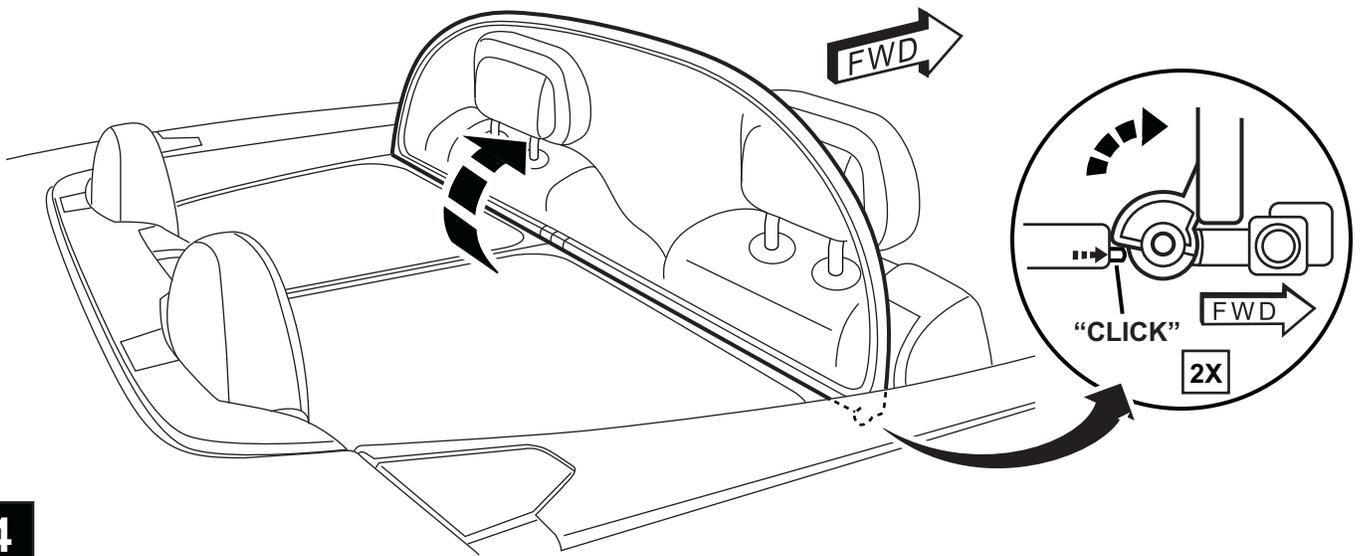

4

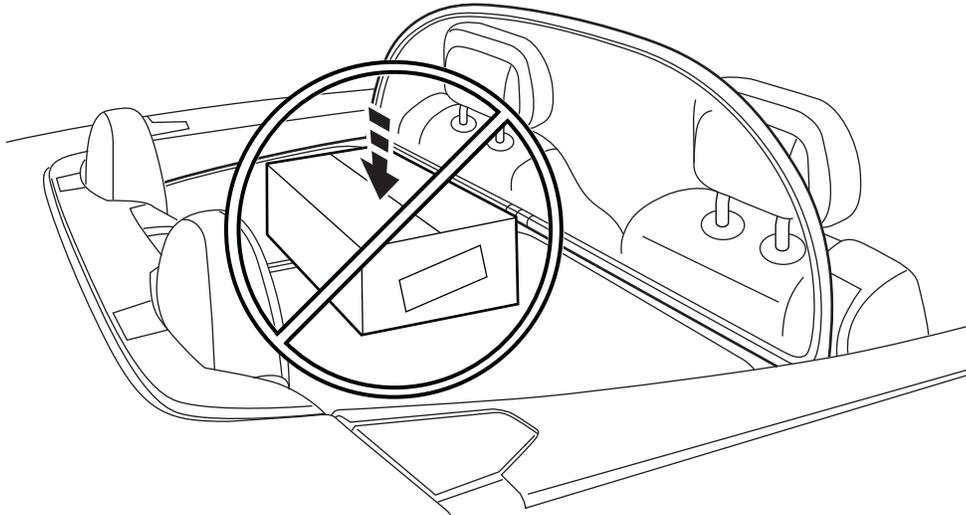


5


REMOVAL

RETRAIT


RETIRO

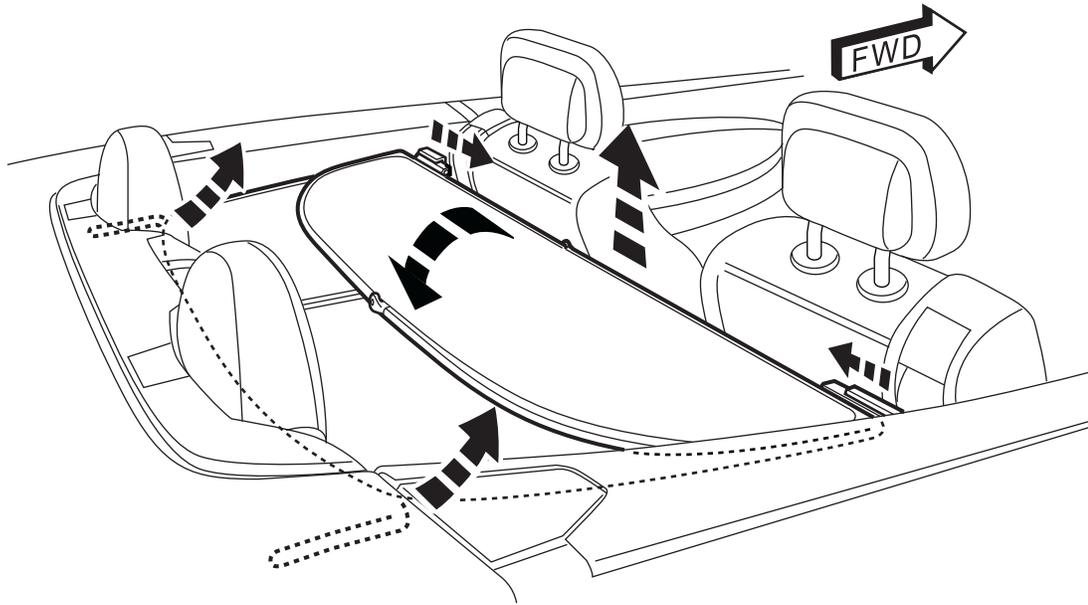

6

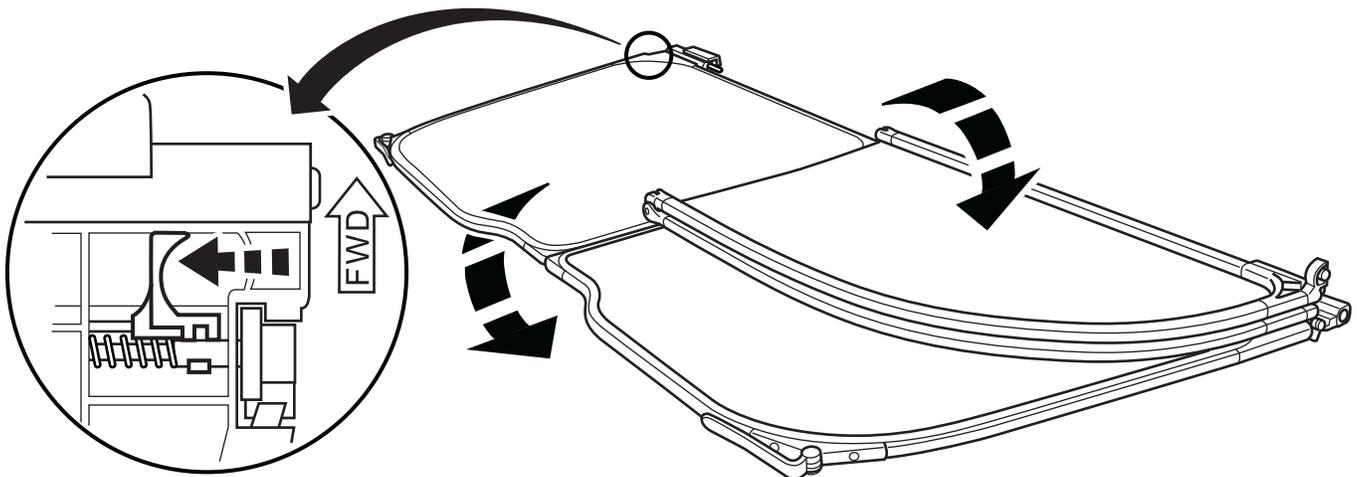

7

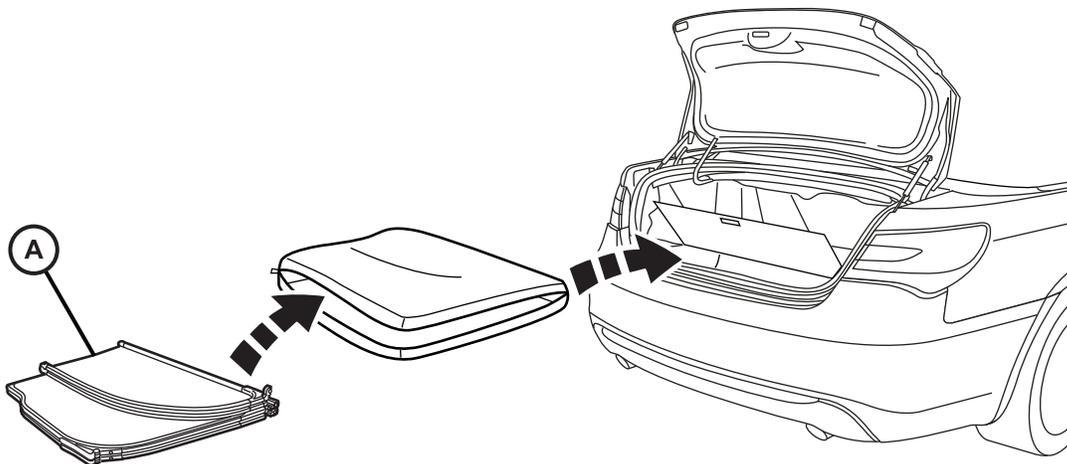

8