






Dodge Charger Automatic Shift Knob

TOOLS REQUIRED:

Pry tool
Phillips (star) screwdriver
Allen Wrench
Standard (flat head) screwdriver
Rubber Mallet & Pad

NOTE: Inspect Shifter prior to Installation

**1. Ensure vehicle is in the NEUTRAL position with parking brake on.
Using shim tool, "pop" chrome ring down.**

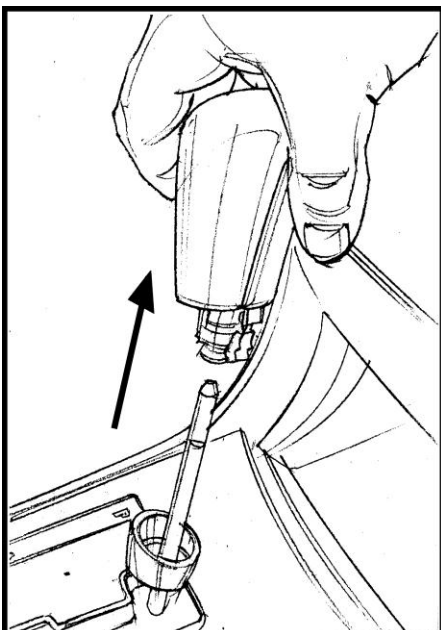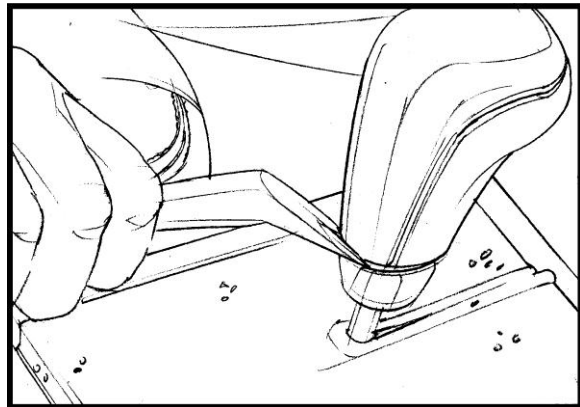
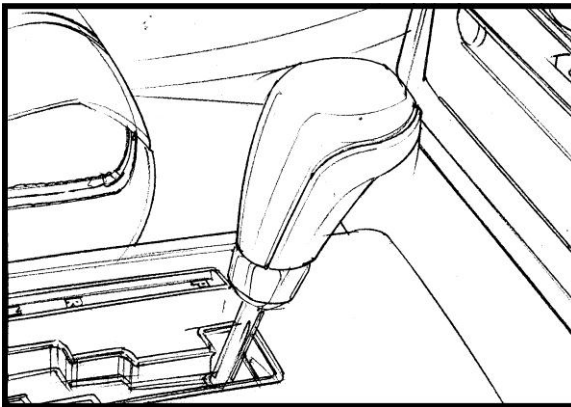


2. Remove Shifter head and chrome neck.




Dodge Charger Automatic Shift Knob

3. Remove the screw on the back of the shifter handle and the back cover.

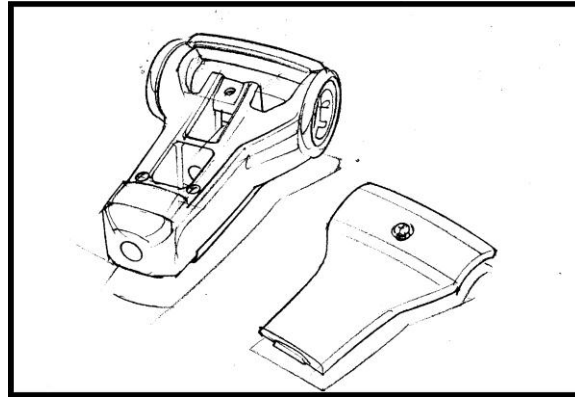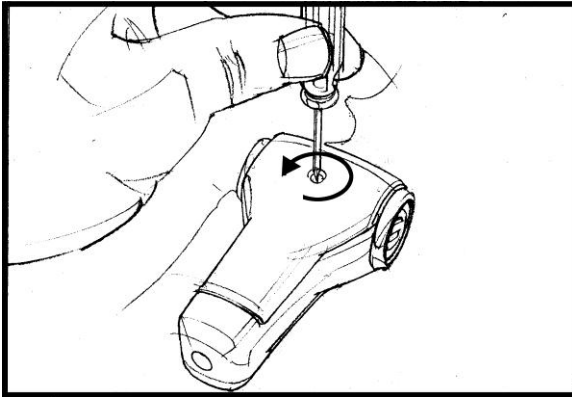


4. Place the shifter handle on the shaft and using a screwdriver or similar tool placed inside the handle (**CAUTION - NOT ON THE COVER**) and a rubber mallet - tap into place.

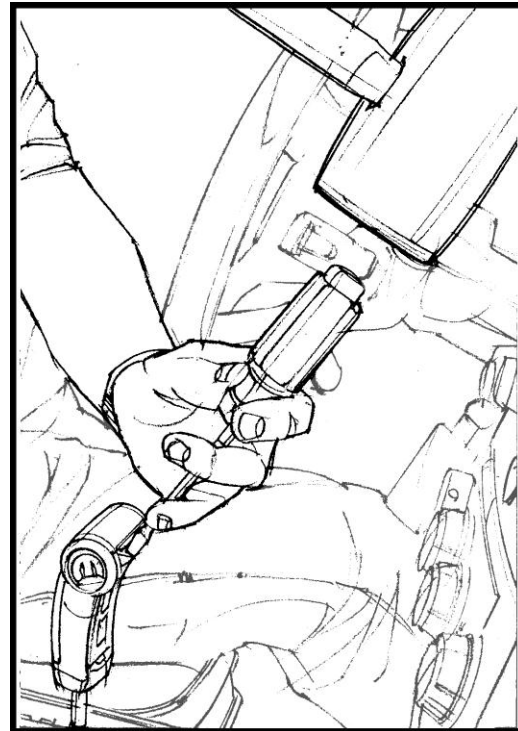




Dodge Charger Automatic Shift Knob

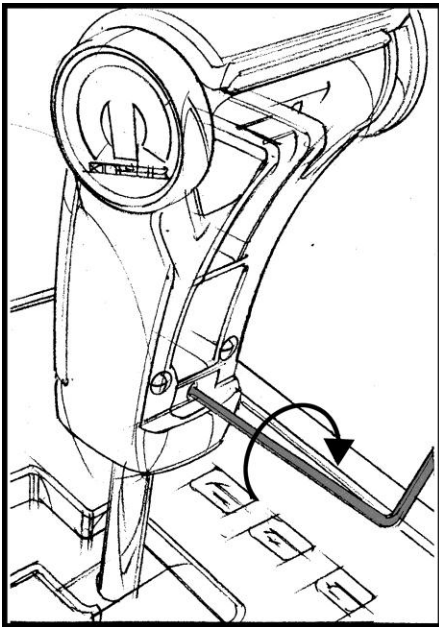

5. Once the shifter handle is in place, tighten the set screw located at the bottom of the shifter handle. (Torque to 13 inch-pounds)

6. Place rear cover onto shifter and screw in place. The tang on the bottom of the rear cover must be inserted into the slot of the casting to fit properly. The head of the screw can not be felt when tightened into position. Do not over tighten.

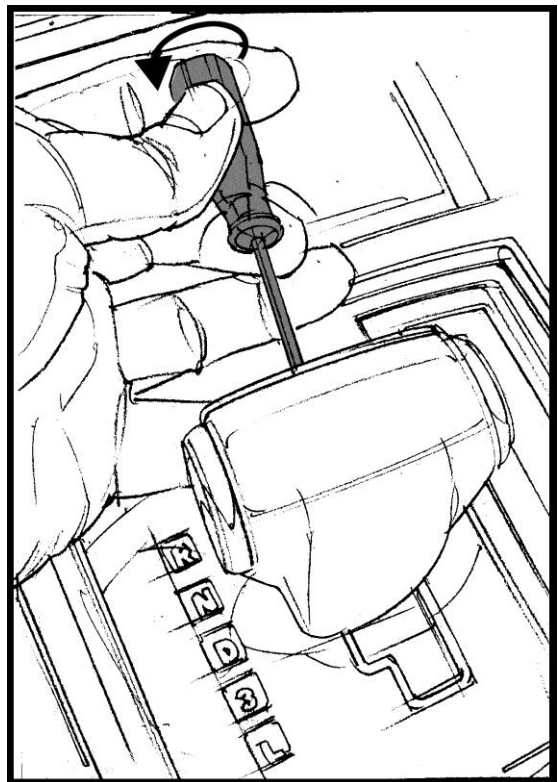

Installed Mopar Shifter

