

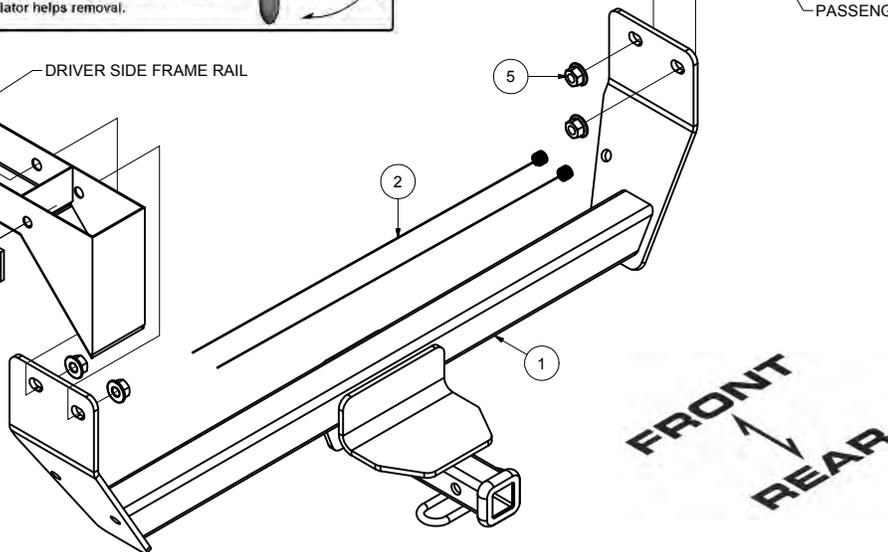
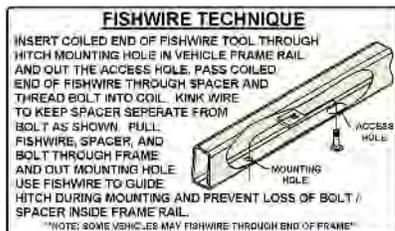
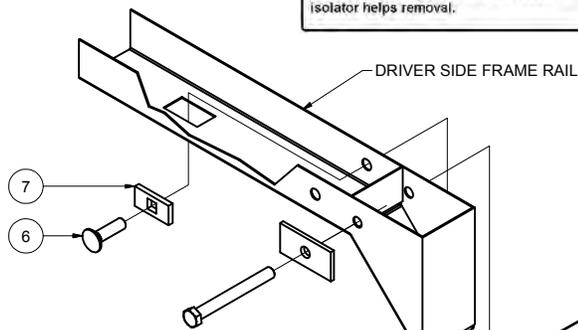


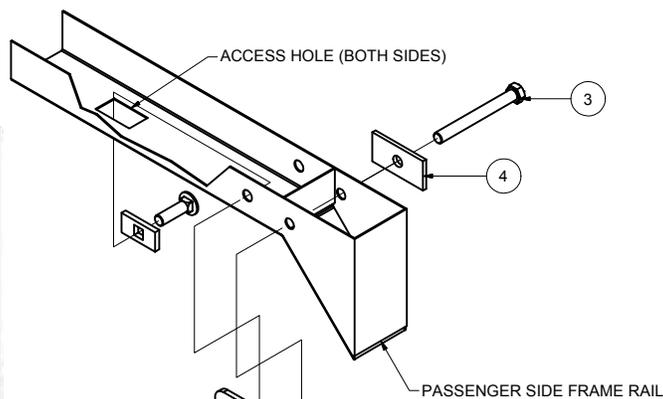

2007-13 CHRYSLER SEBRING, 200 & DODGE AVENGER TRAILER HITCH

Parts List			
ITEM	QTY	PART NUMBER	DESCRIPTION
1	1	82213638	RECEIVER HITCH (400038)
2	2	1_2 FISHWIRE	1/2" FISHWIRE
3	2	600129	HEX BOLT
4	2	600130	.188 x 1.50 x 3.00" ROUND HOLE SPACER
5	4	600086	NUT, HEX FLANGE, 1/2-13
6	2	600104	BOLT, CARRIAGE, 1/2"-13x1 3/4", CHRYSLER
7	2	600131	.250 x 1.00 x 2.00" SQUARE HOLE SPACER

TOOLS REQUIRED
RATCHET
3/4" SOCKET
3/4" WRENCH
TORQUE WRENCH
PRY BAR

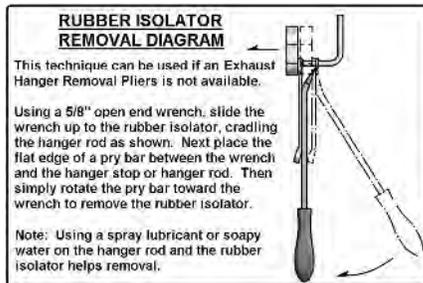

INSTALLATION INSTRUCTIONS

- 1) For vehicles with dual exhaust, lower exhaust by removing the (4) rear most rubber isolators (See RUBBER ISOLATOR REMOVAL DIAGRAM). Wire may be used to hold exhaust to prevent damage if lowered too far.
- 2) Fishwire 1/2" carriage bolt and CM-SP12 spacer into position through access hole in each frame rail. See FISHWIRE TECHNIQUE above. **Note:** Leave fishwires attached to hardware to prevent loss in frame.
- 3) Place 1/2" hex bolts with CM-SP34 spacers into rear mounting holes in frame rails.
- 4) Thread fishwires through appropriate mounting holes and raise hitch into position.
- 5) Secure hitch to vehicle with (4) 1/2" flange nuts.
- 6) Torque all 1/2" hardware to 110 ft-lb (149N•m).