








GRAND CHEROKEE / DURANGO WIRELESS PHONE CHARGER


Grand Cherokee / Durango Chargeur de téléphone sans fil

Grand Cherokee / Durango Cargador del teléfono inalámbrico


www.mopar.com

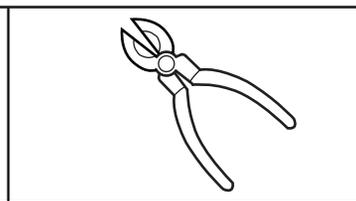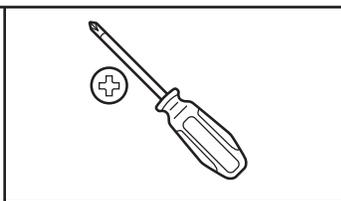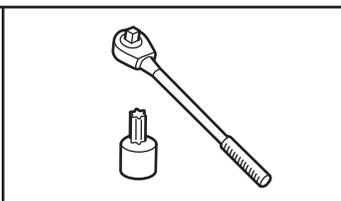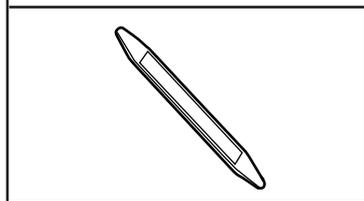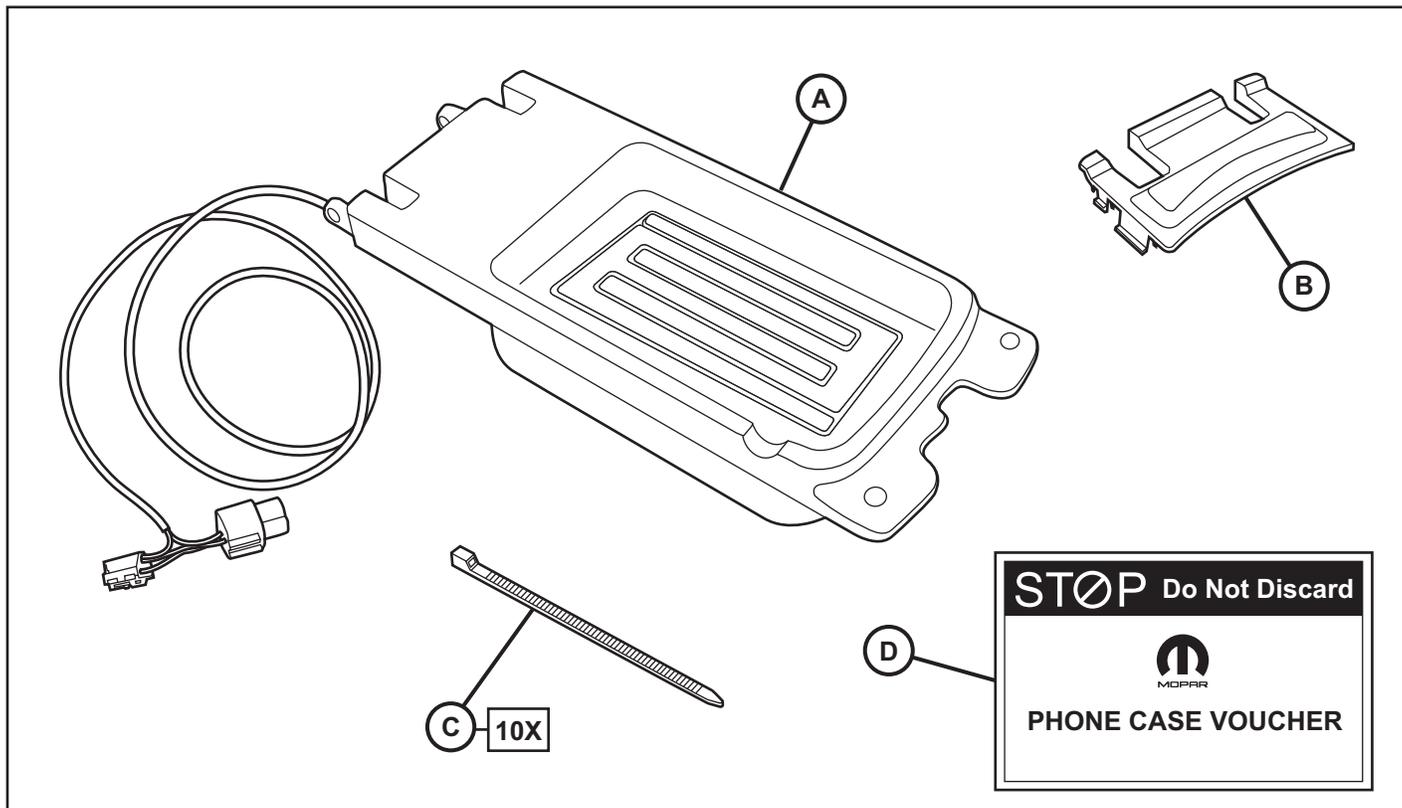







RETAIN ALL FASTENERS FOR REINSTALLATION
 Maintenir toutes les vis pour la réinstallation
 Mantenga todos los tornillos para la reinstalación

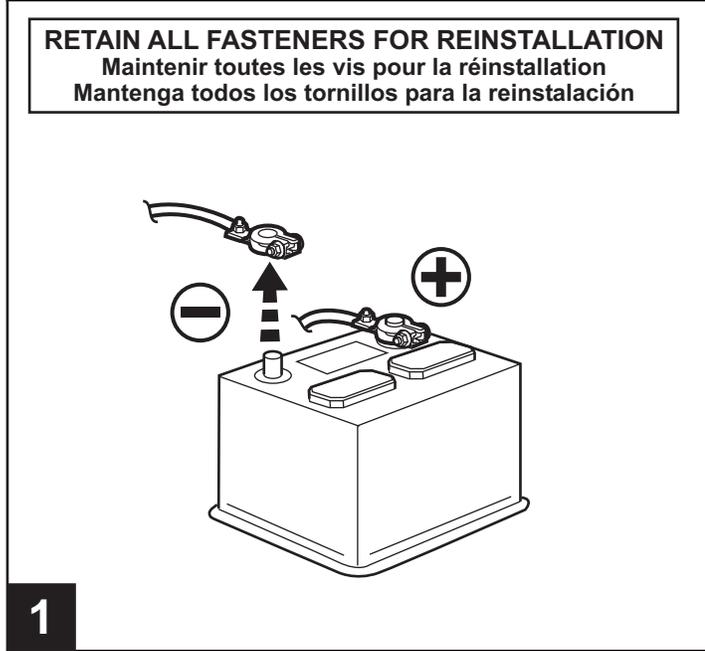

1

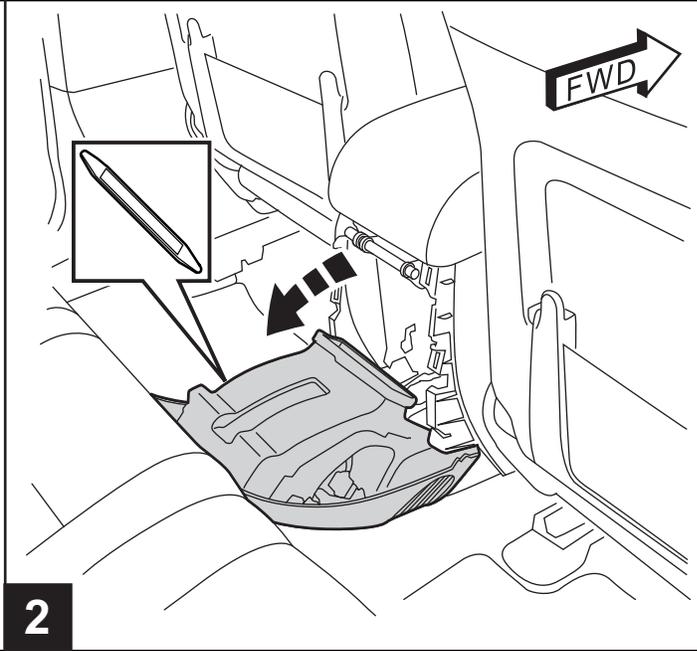

2

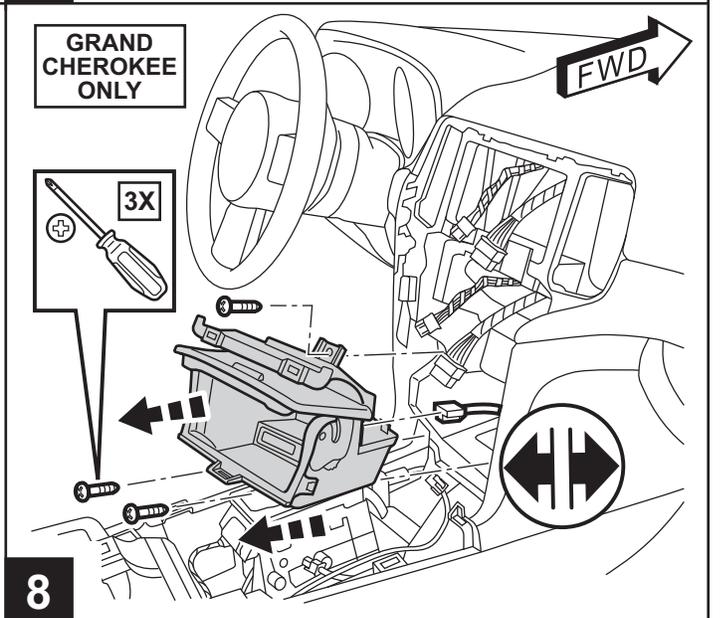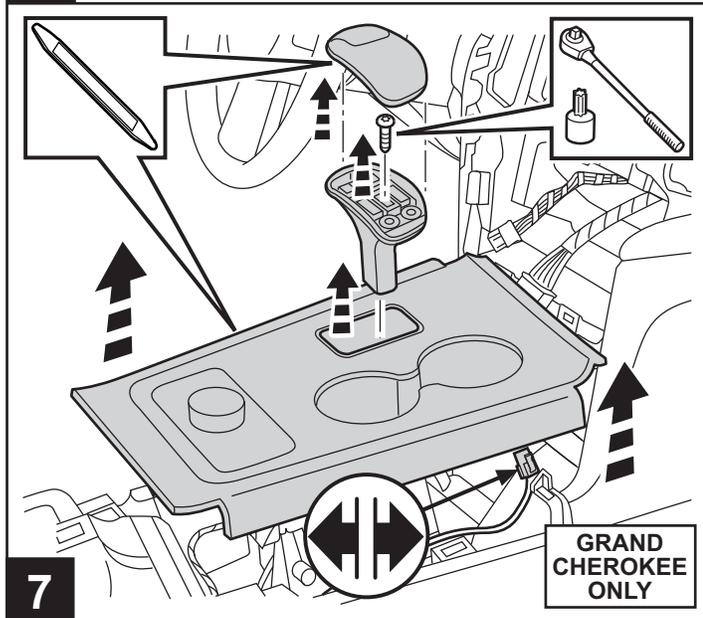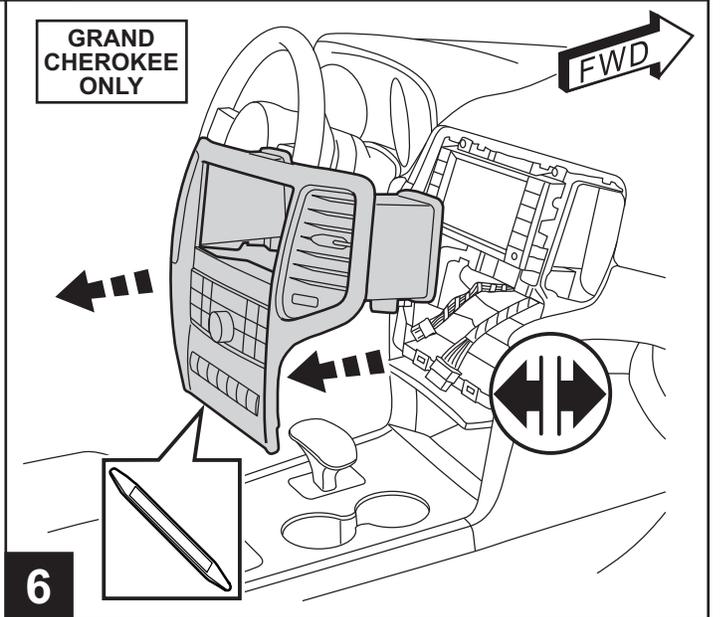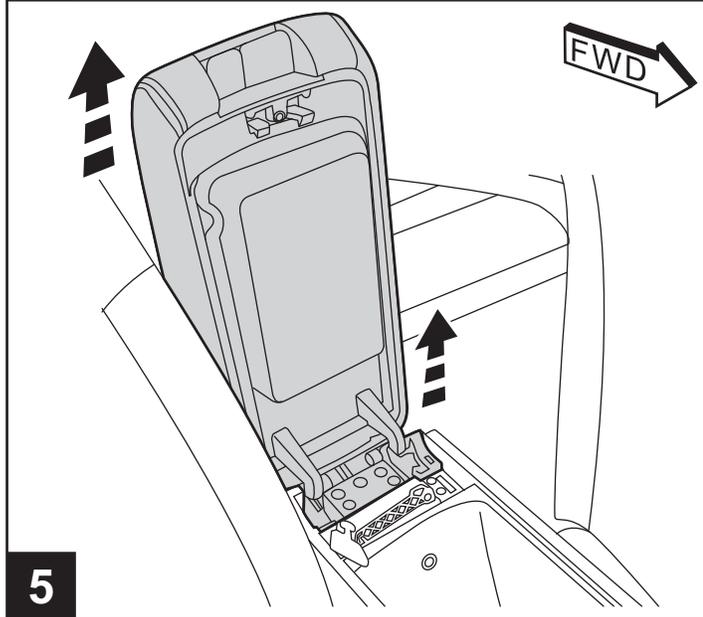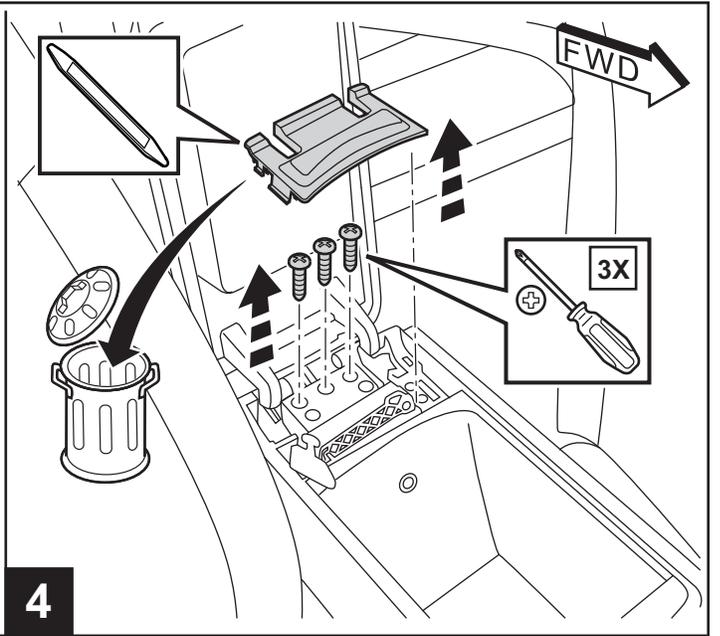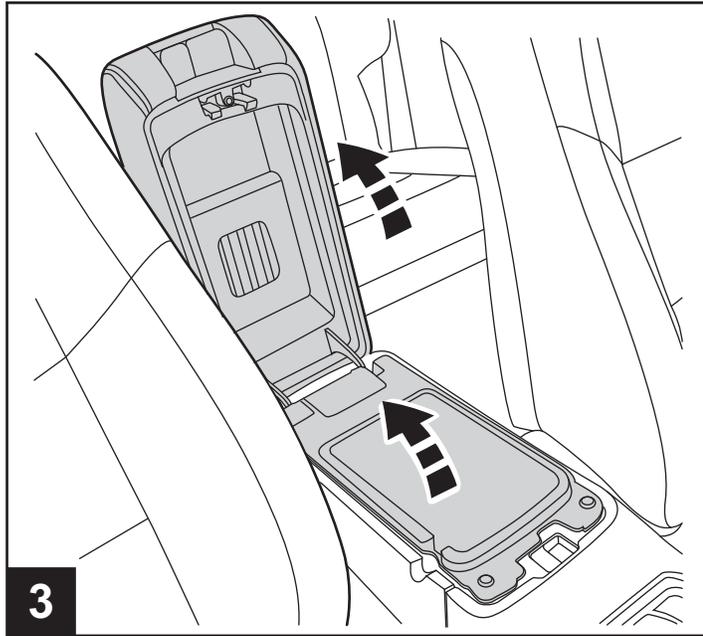

DURANGO ONLY

FWD →

12V DC



9

10

A

11

12

FWD →

2X

GRAND CHEROKEE ONLY

GRAND CHEROKEE ONLY

FWD →

A






13

14


GRAND CHEROKEE ONLY

2X

FWD →

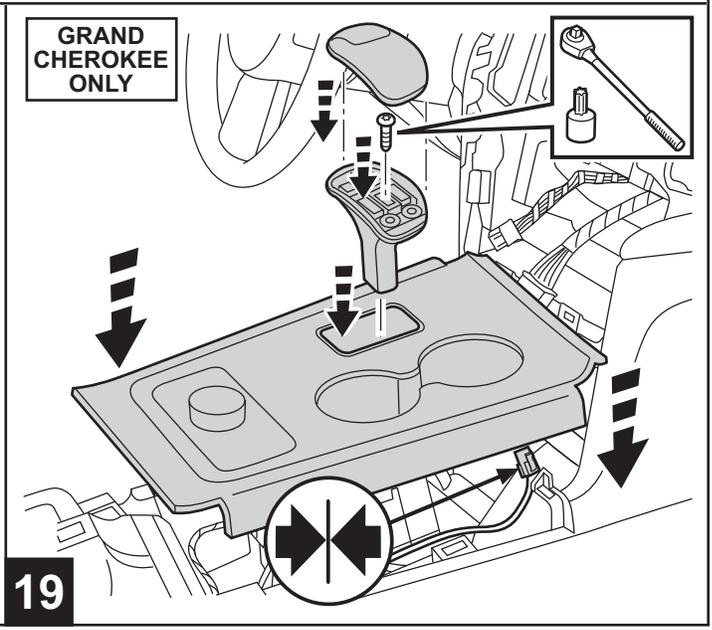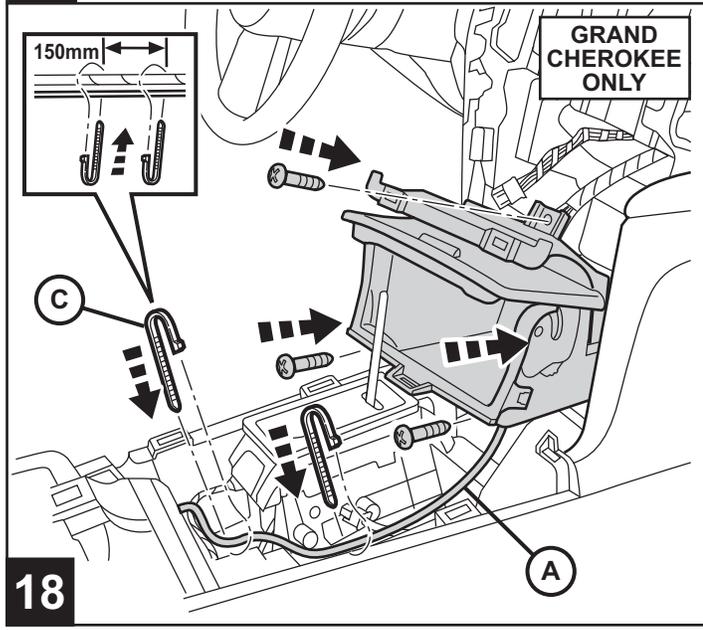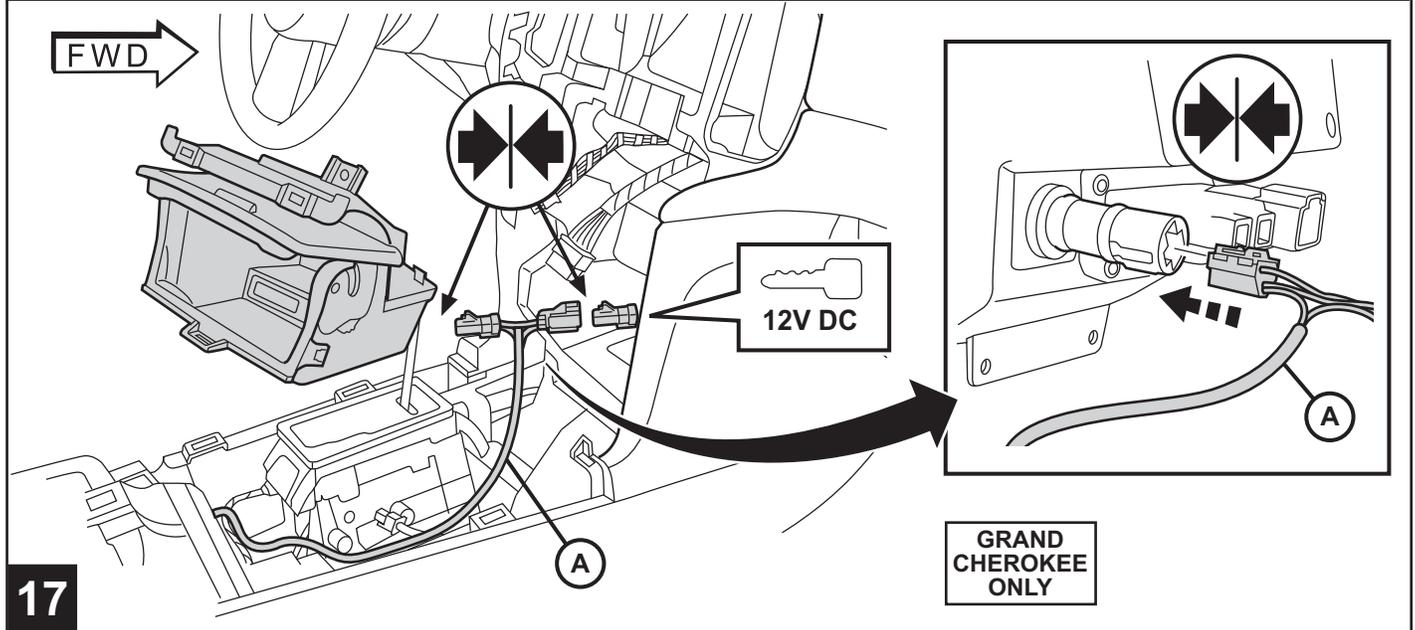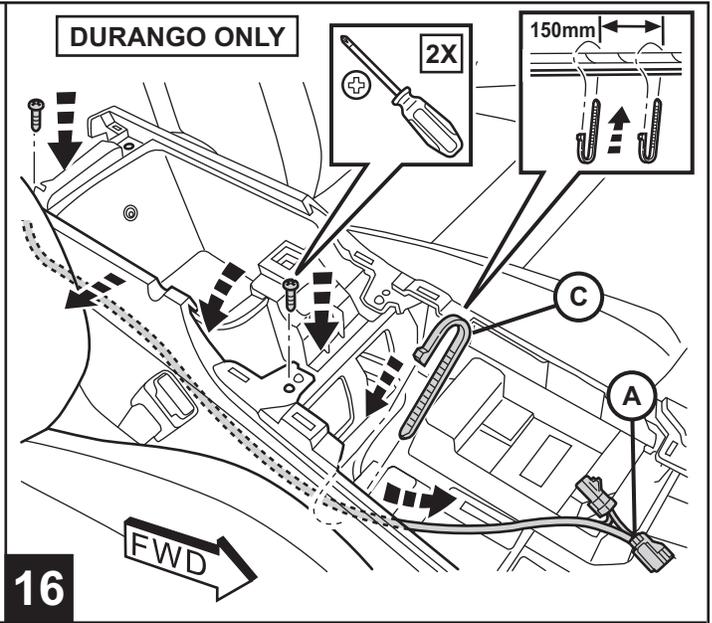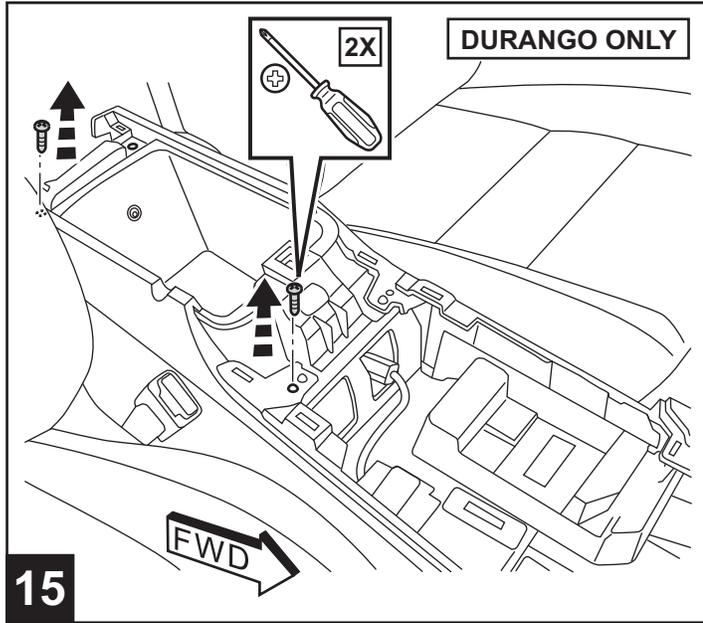


GRAND
CHEROKEE
ONLY

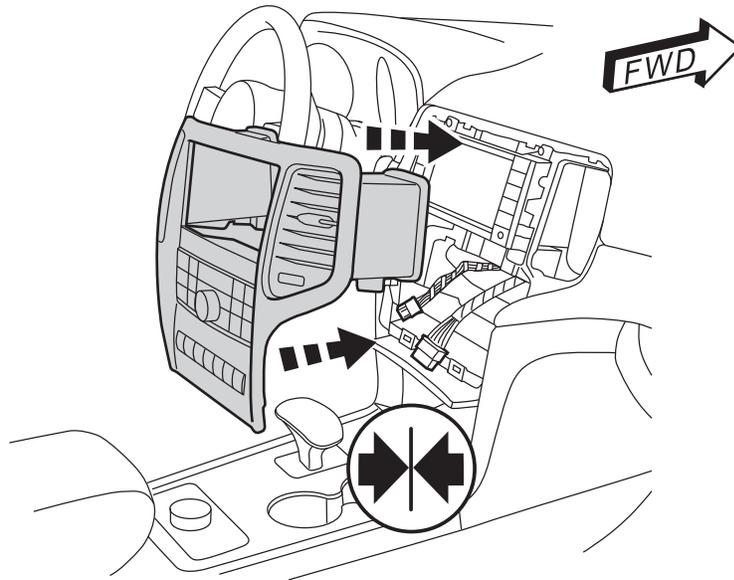


20


DURANGO ONLY

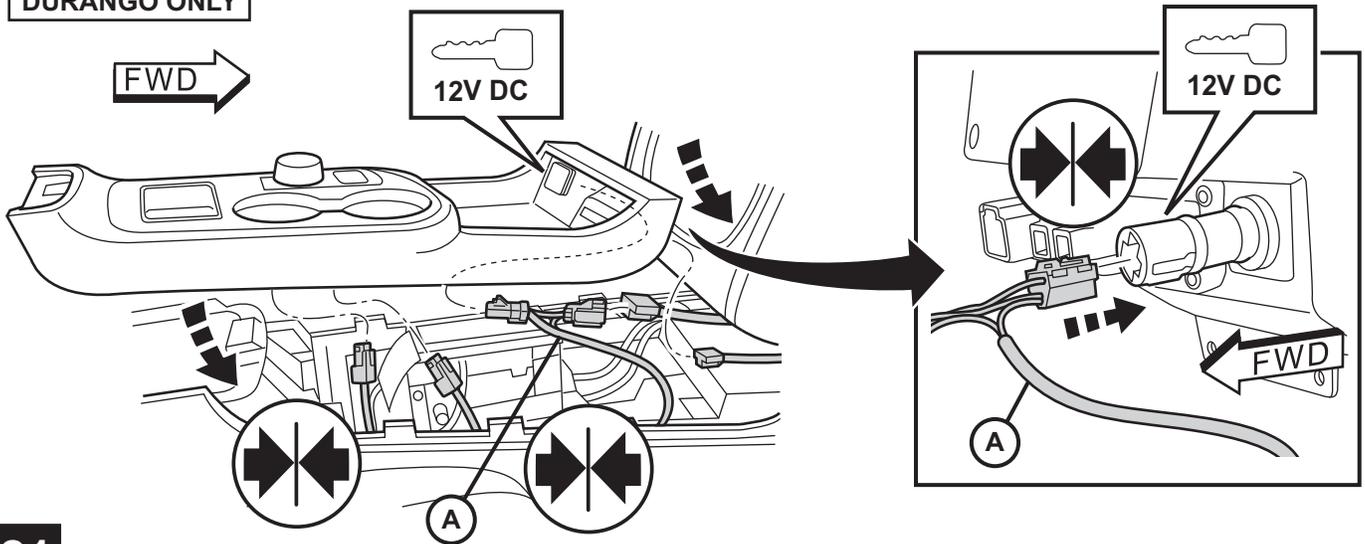


21

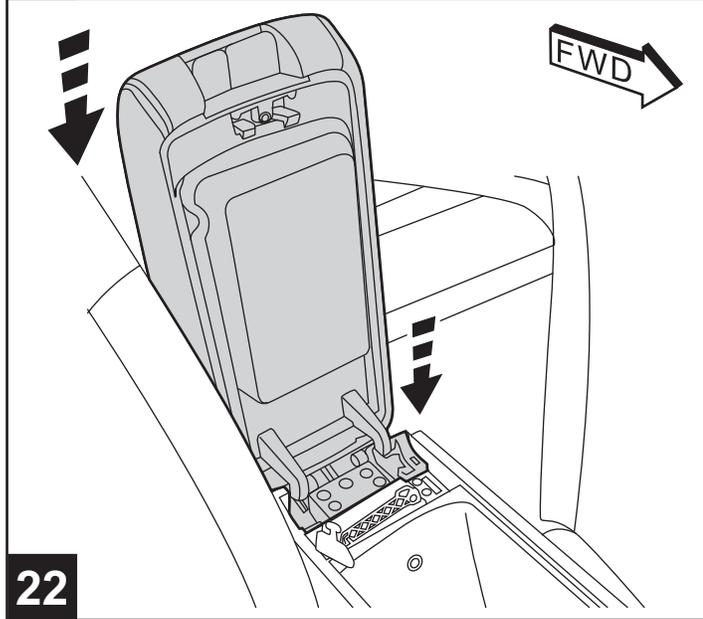

22

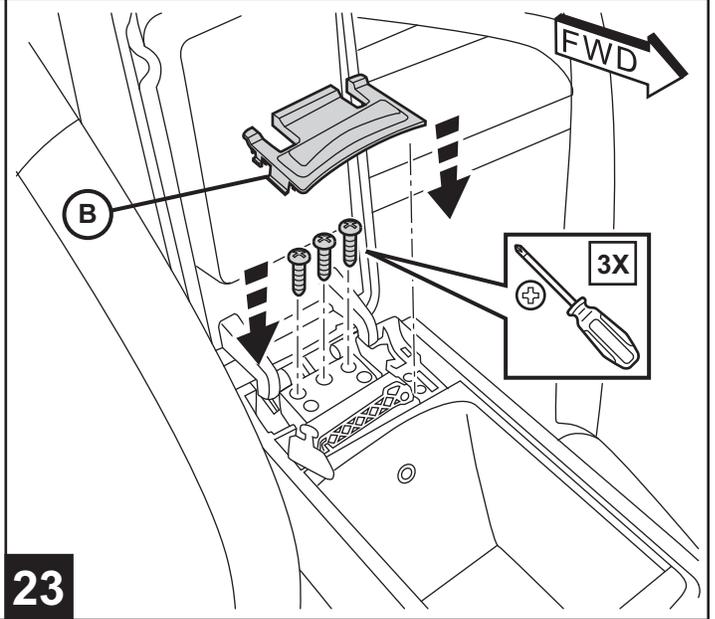

23

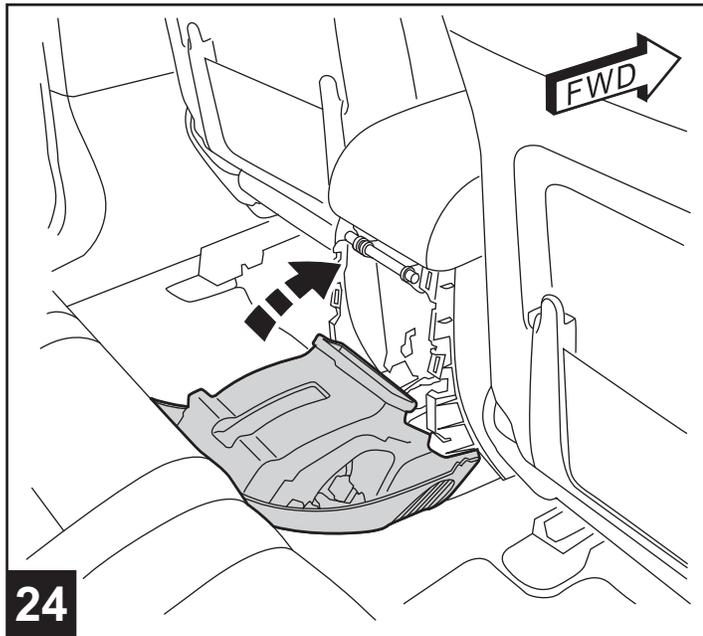

24

**CHECK ALL WIRING AND
TRIM ALL CABLE TIES.**

**GIVE PHONE CASE VOUCHER (D)
TO CUSTOMER**


Contrôlez tout le câblage et coupez
l'excédent des attaches-câbles.

Donnez la carte de téléphone (C) au client

Revise todos los cables y ajuste los sujetacables.

Dé la bono tarjeta (C) al cliente

25

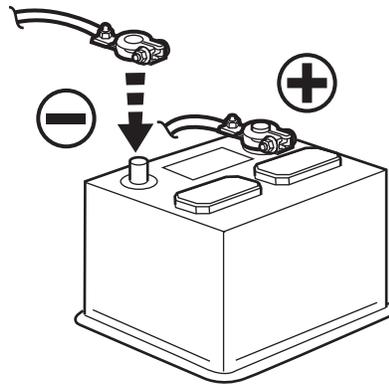

26