




Cargo Net

CHRYSLER 200

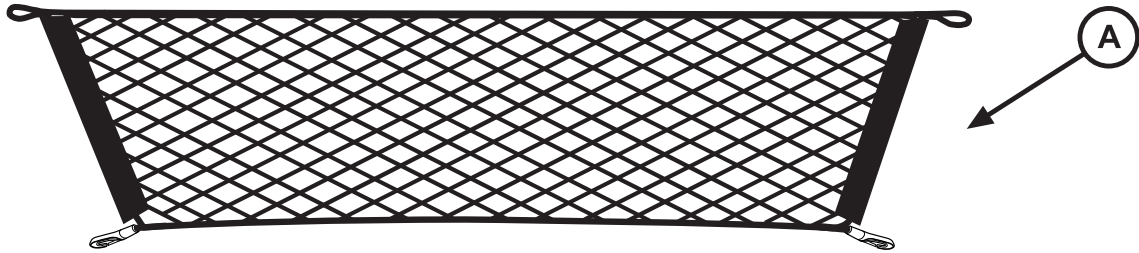


CALL OUT	DESCRIPTION	QUANTITY
A	Cargo Net	1


TOOLS REQUIRED		

CARGO NET


1. Mounting location shown.

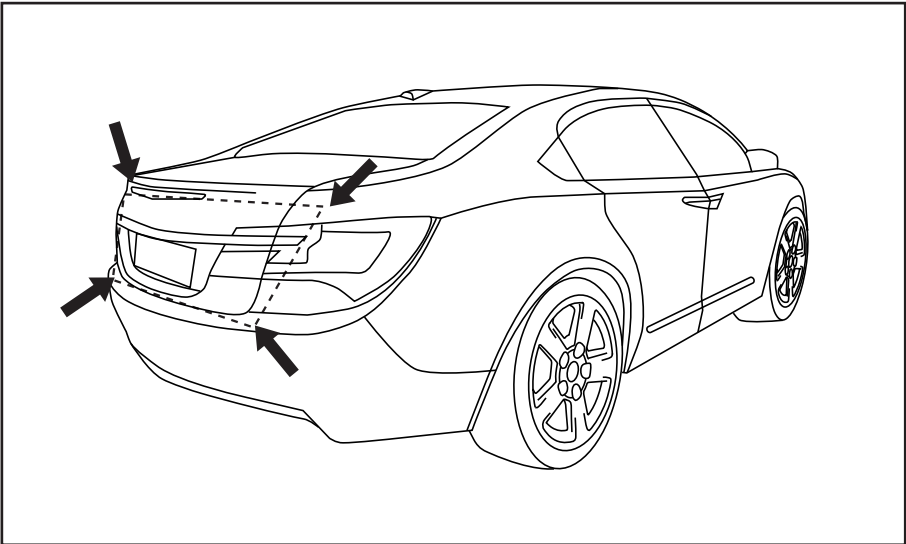


2. Locate upper attachment anchor and lower attachment D-ring.

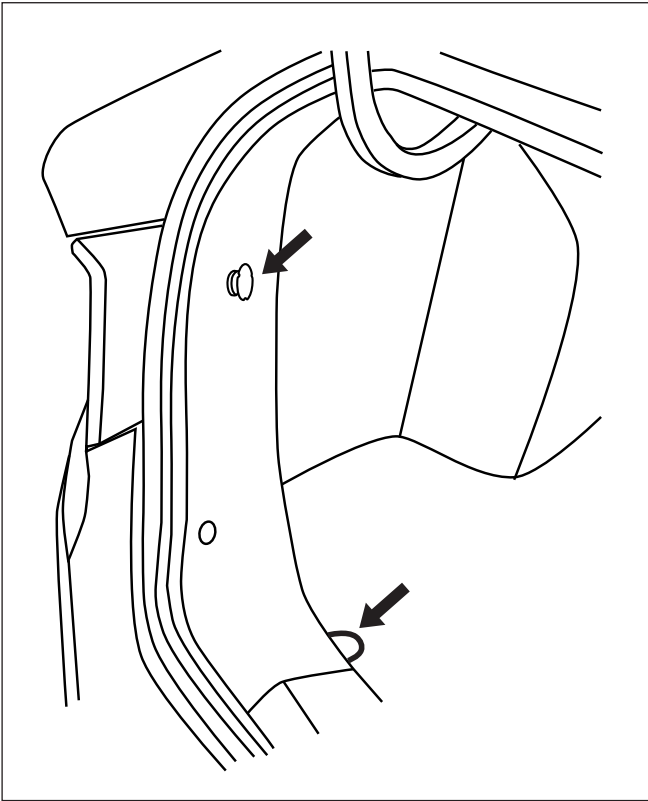


3. Attach net loop to upper attachment anchor.

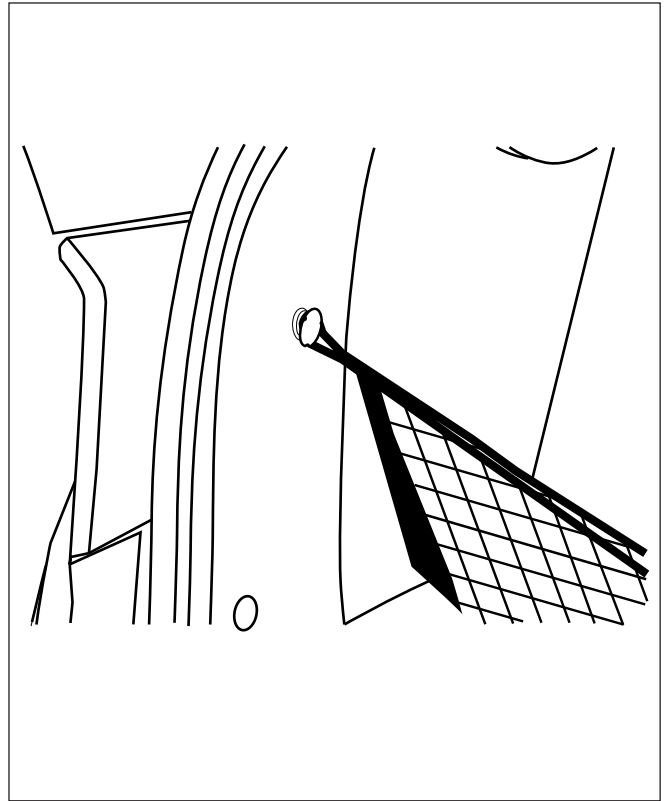

4. Attach lower cargo net hook to vehicle D-ring.

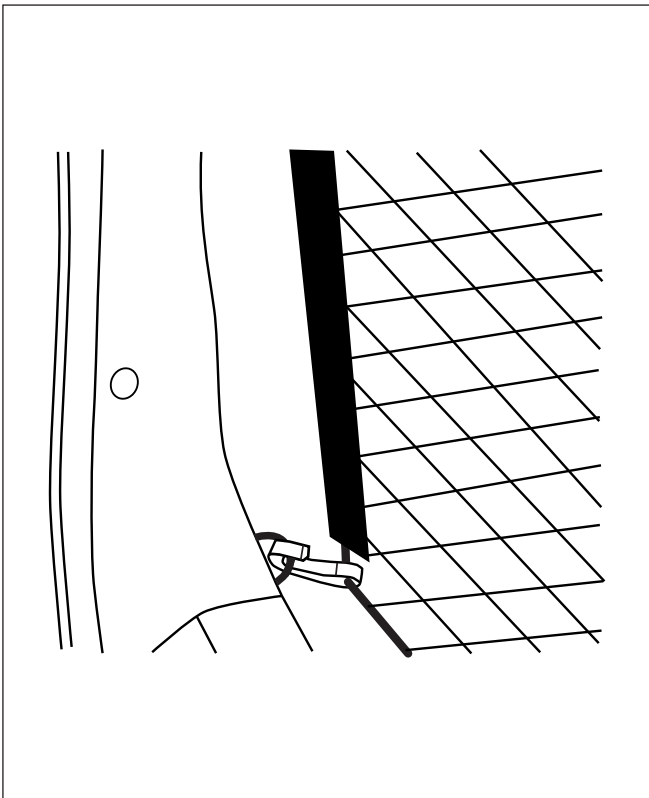


5. Installed net.

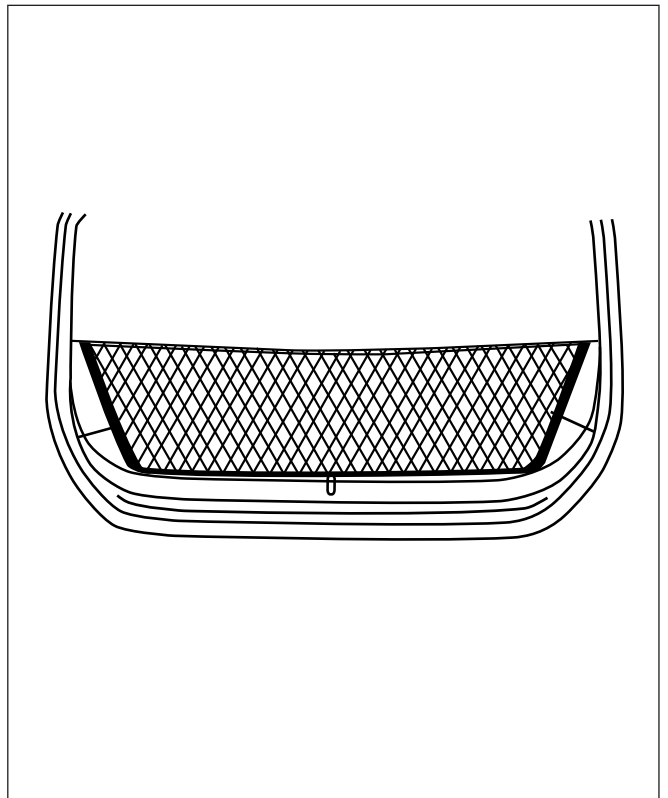



Filet d'Arrimage

CHRYSLER 200

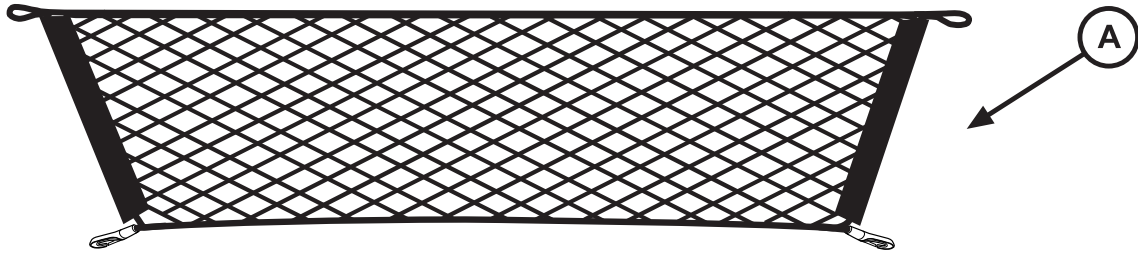


RÉFÉRENCE	DESCRIPTION	QUANTITÉ
A	Filet d'Arrimage	1


OUTLS REQUIS		

FILET D'ARRIMAGE


1. Emplacement de montage indiqué.

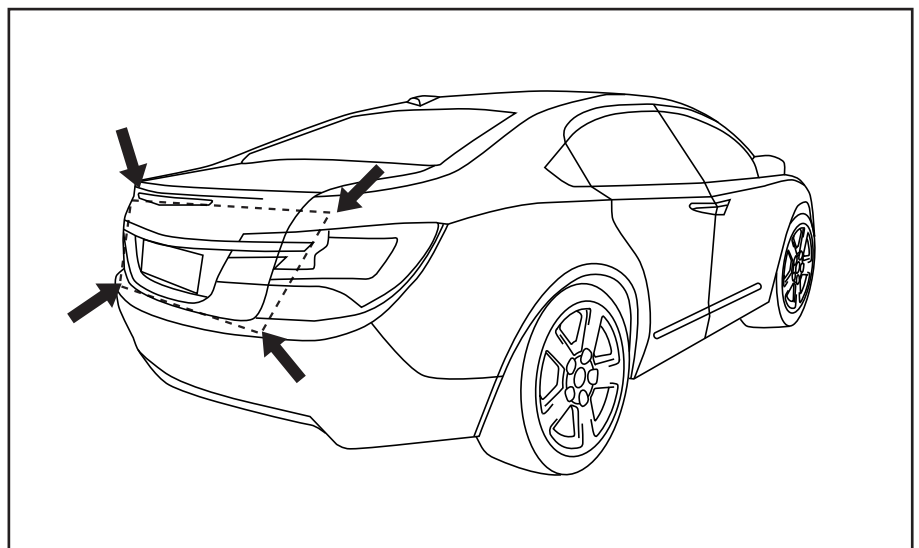


2. Localiser ancrage de fixation supérieure et l'ancre d-anneau inférieur.

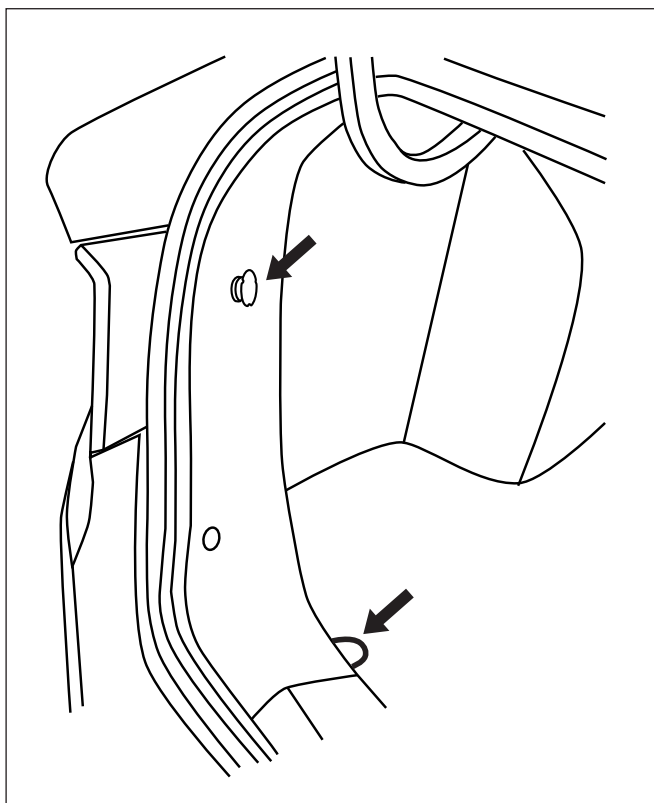


3. Attachez le boucle de filet à ancrage supérieure.

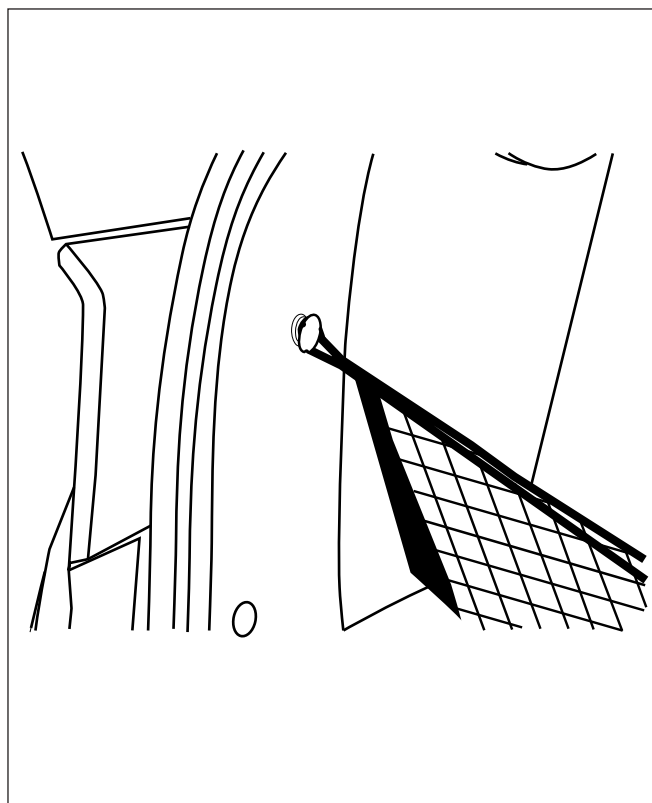

4. Attachez le crochet net d-ancrage.

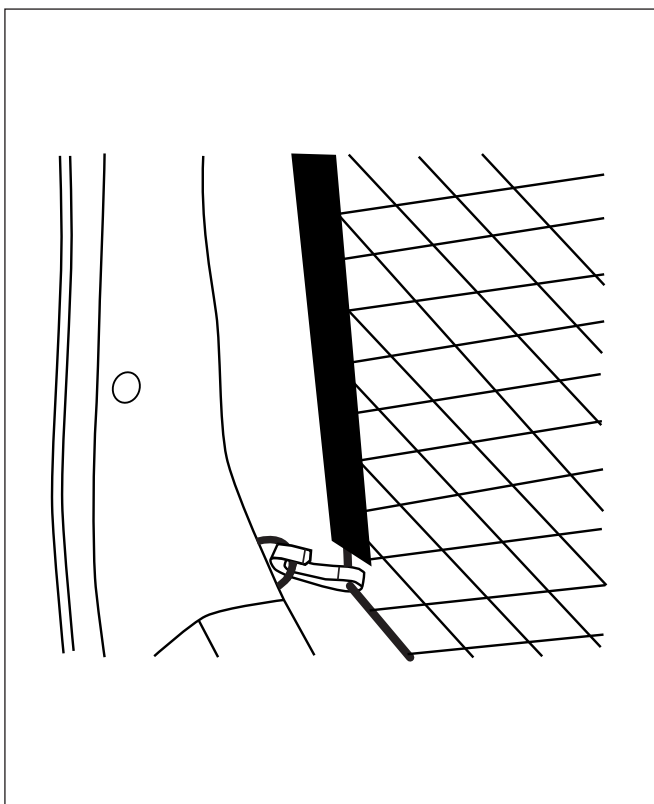


5. Filet installé.

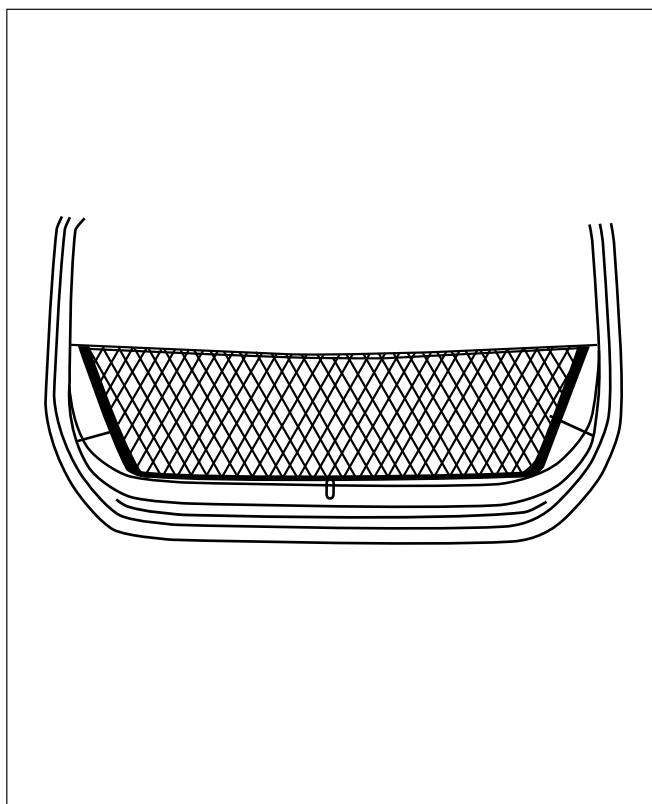



Red de Carga

CHRYSLER 200

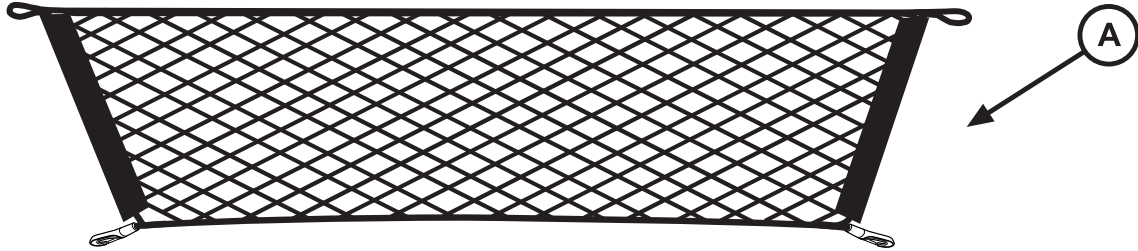


ELEMENTO	DESCRIPCION	CANTIDAD
A	Red de Carga	1


HERRAMIENTAS NECESARIAS		

RED DE CARGA


1. Imagen de la ubicacion del montaje.

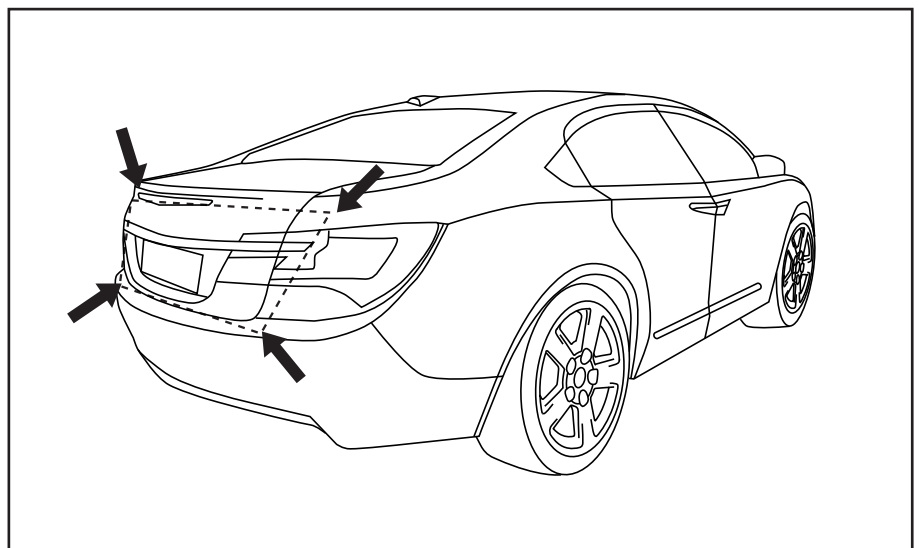


2. Localizar anclaje de fijación superior inferior de anclaje d-ring.

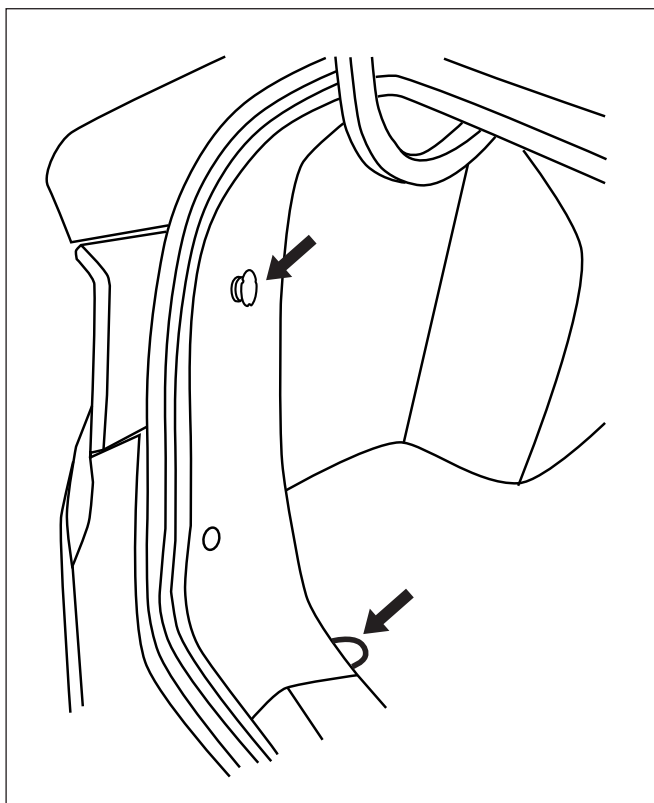

3. Adjunte bucle red para anclaje superior.

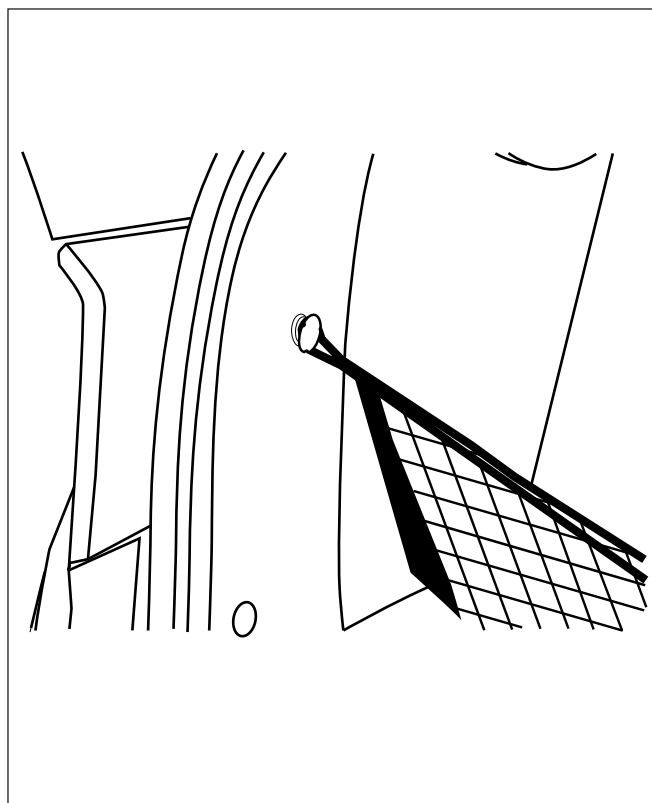

4. Conecte el gancho de red para d-ancla.

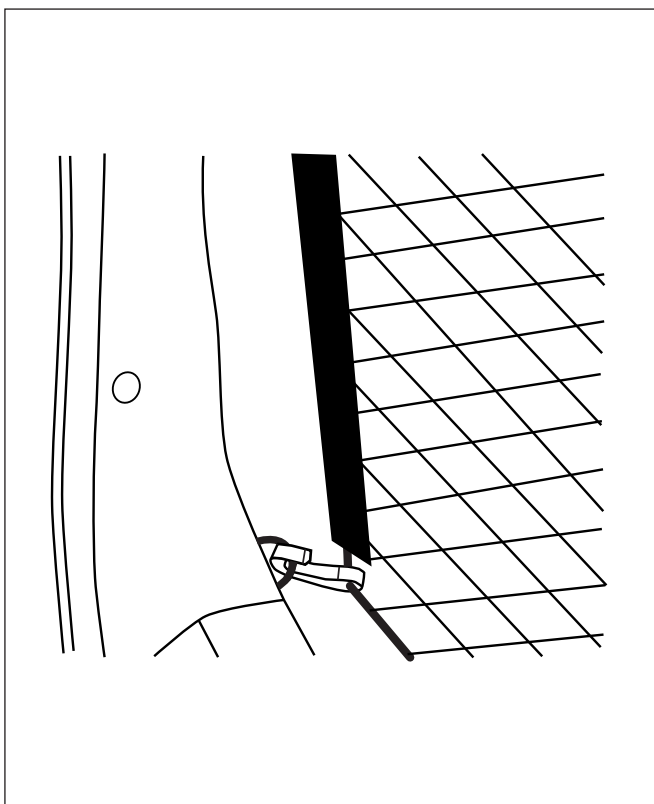

5. De carga neta instalada.

