





# Chrysler 200


## Front Fascia Kit

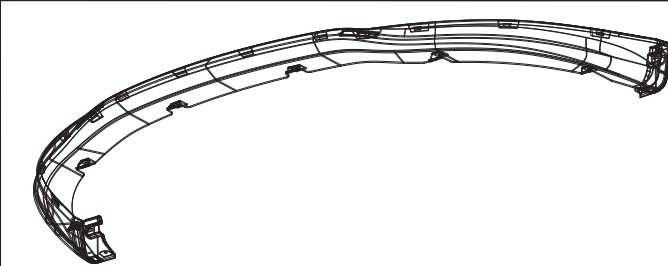


**A** X1

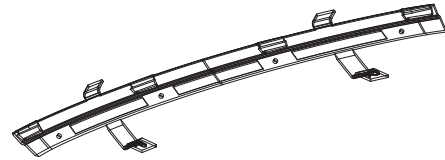

**B** X1

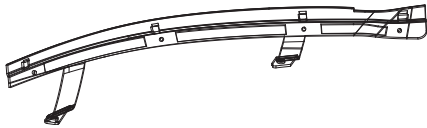




**D** X1

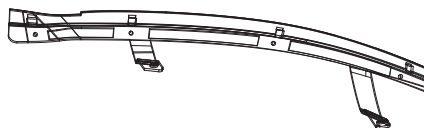


**C** X1




**E** X14

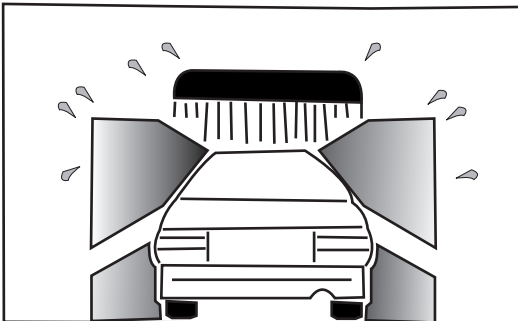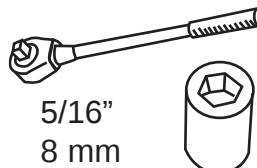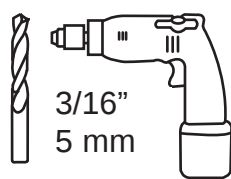





**1**



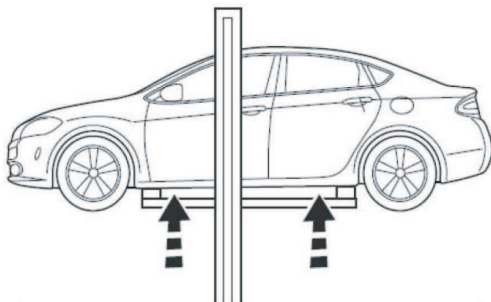



**2**

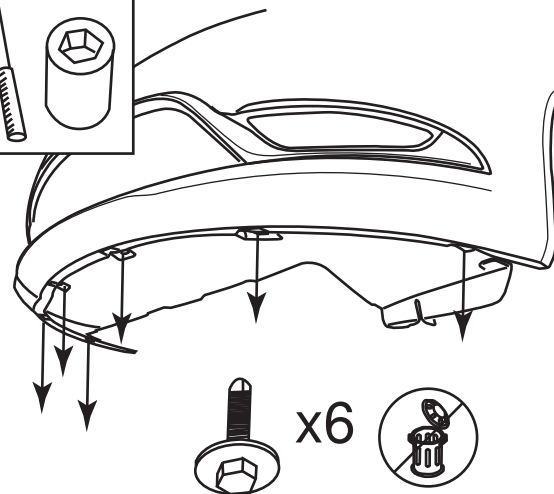

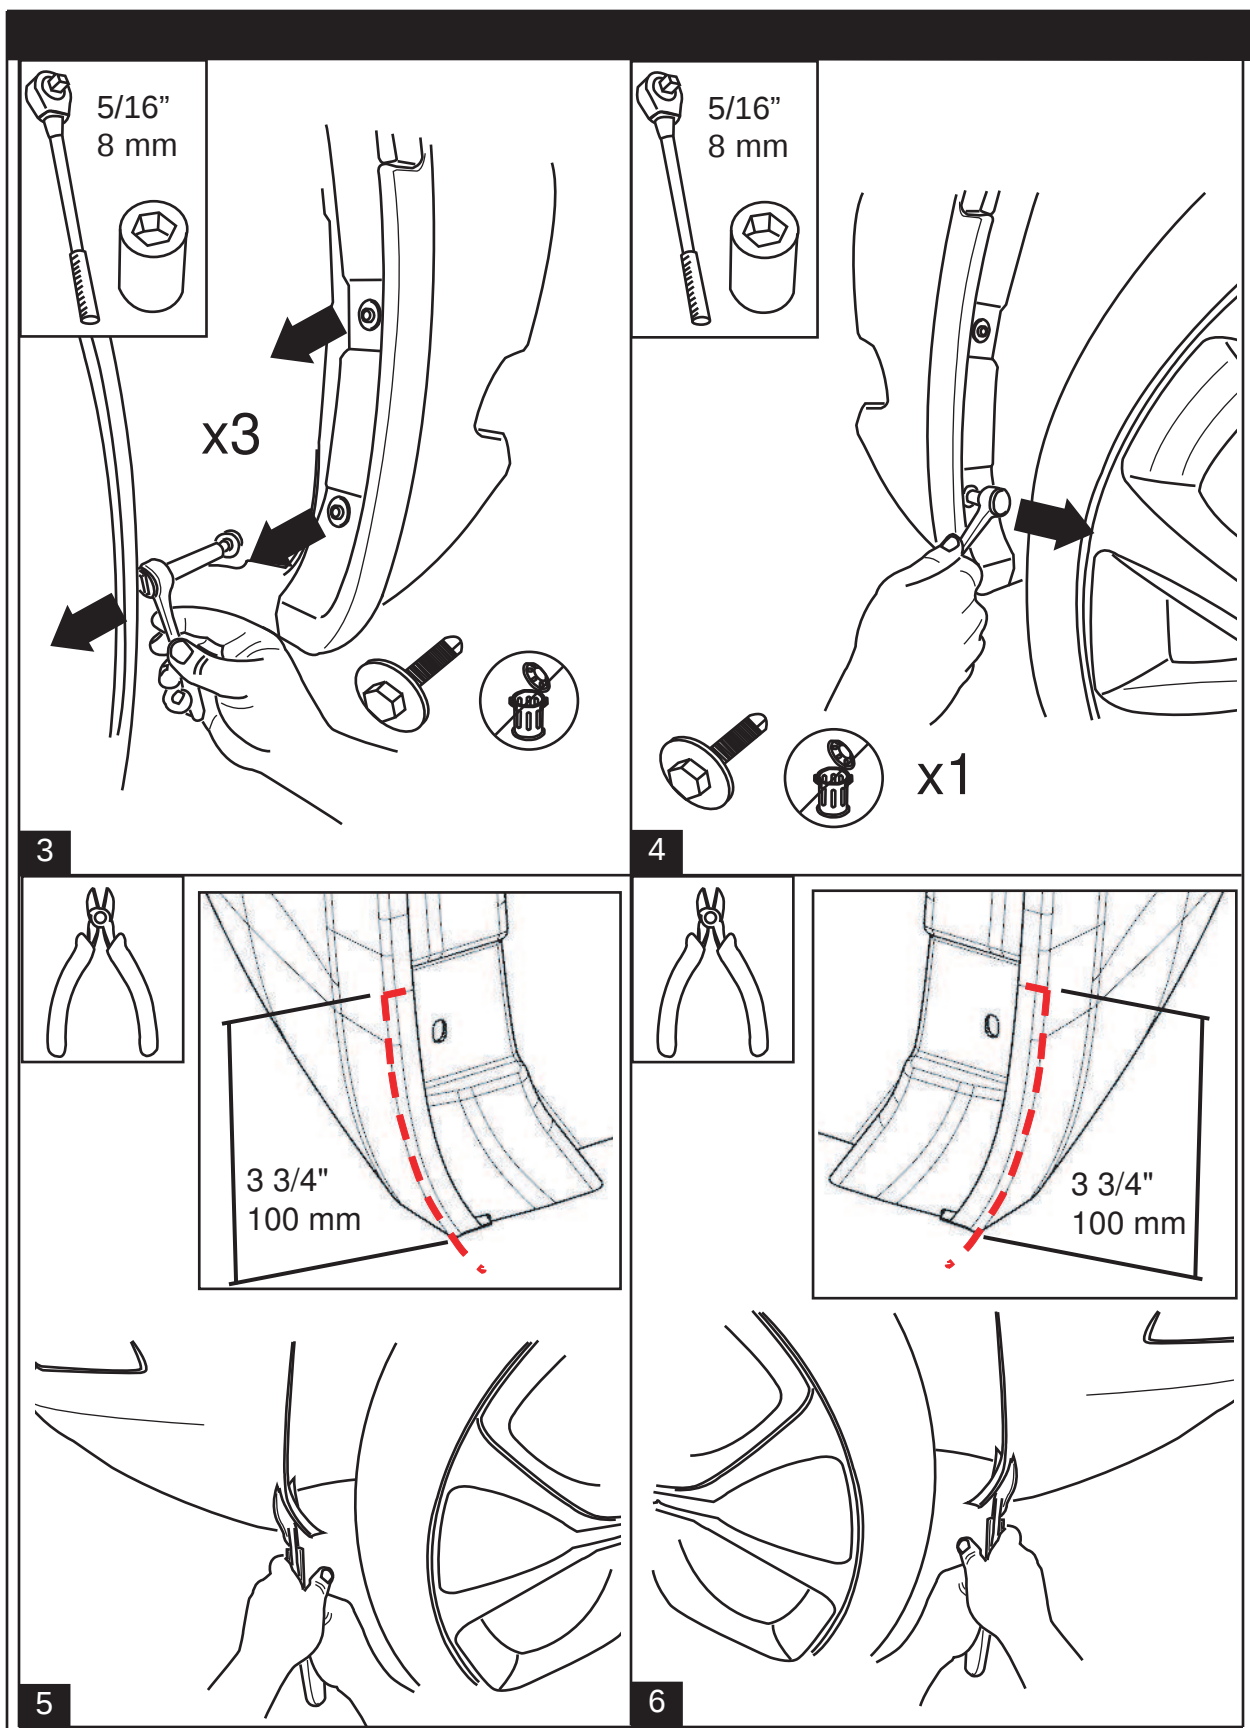


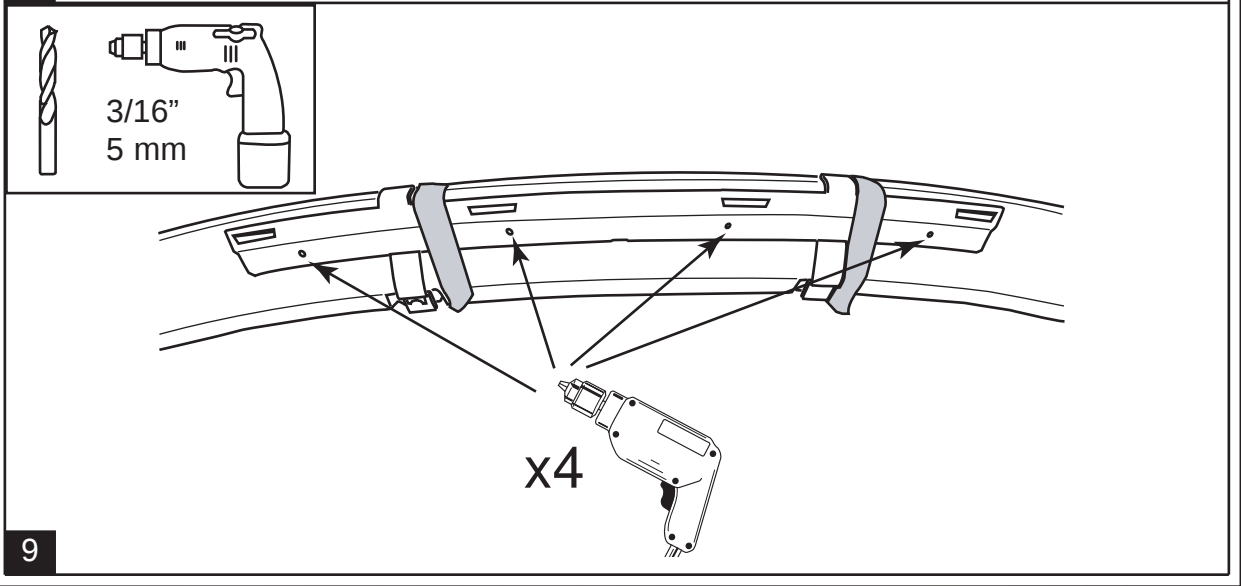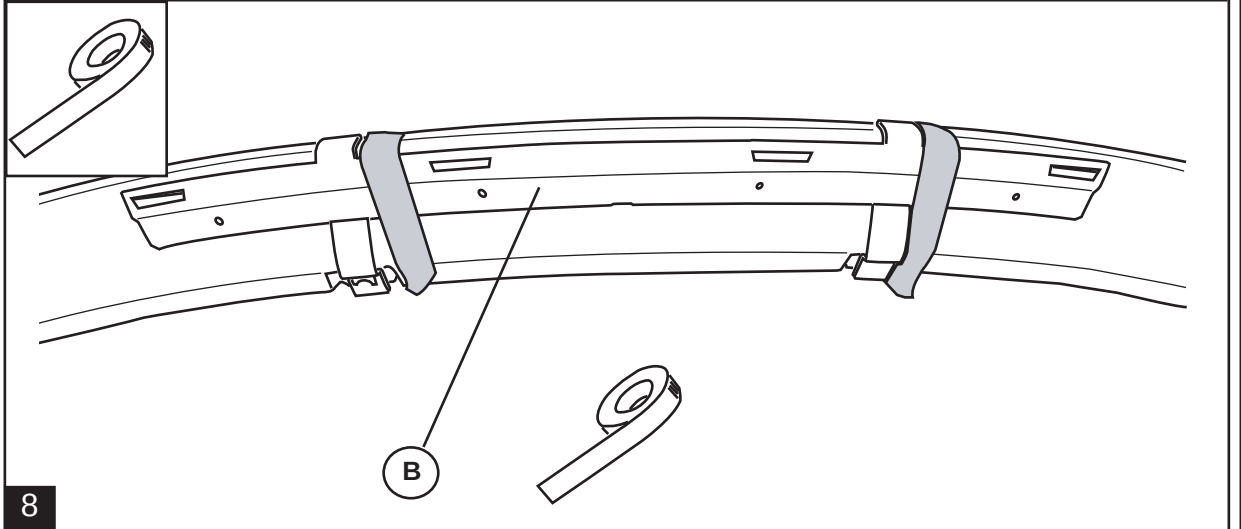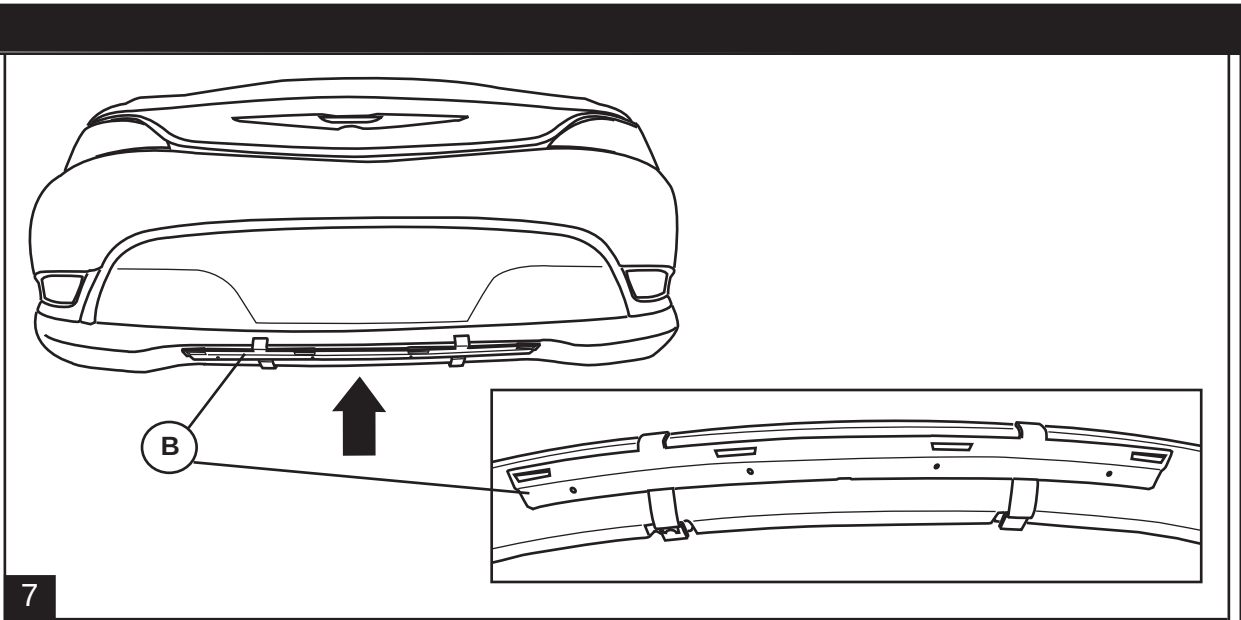

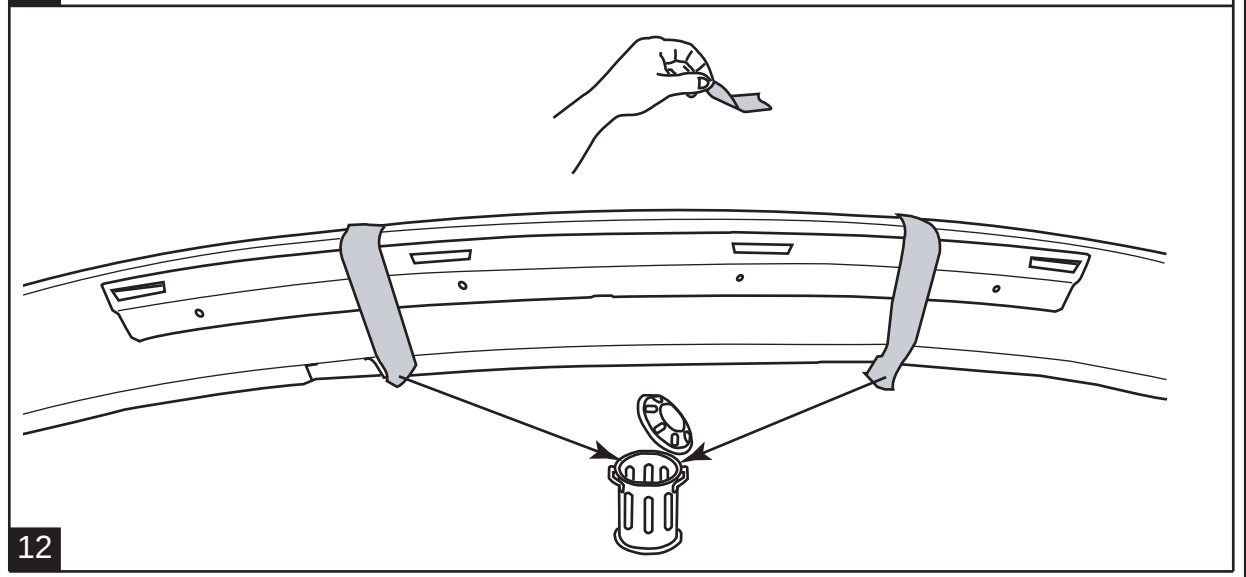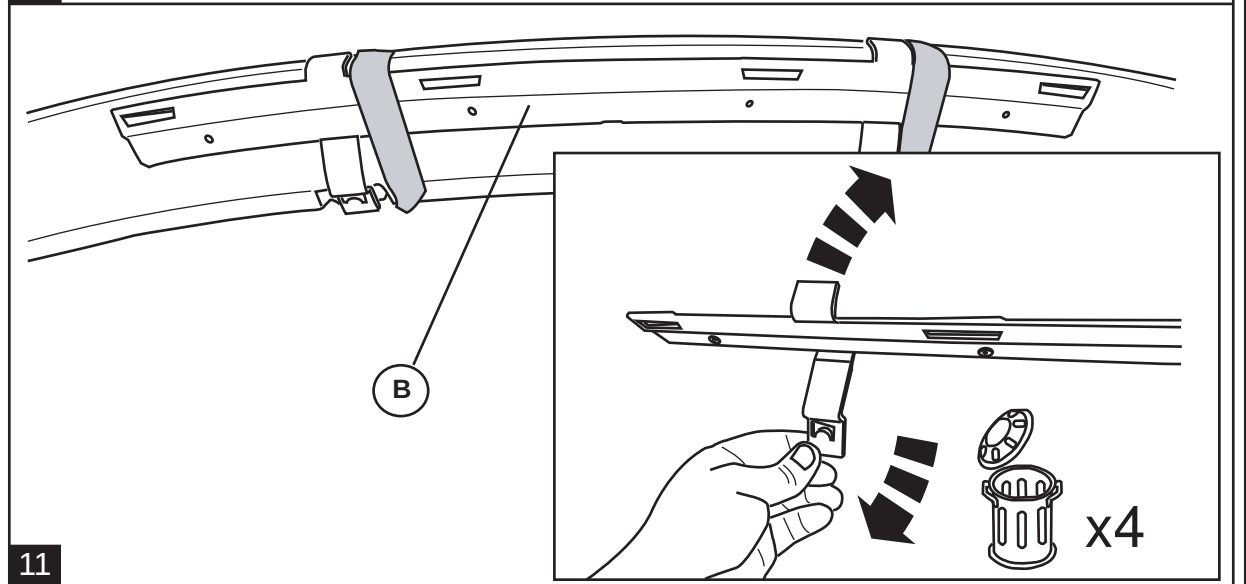
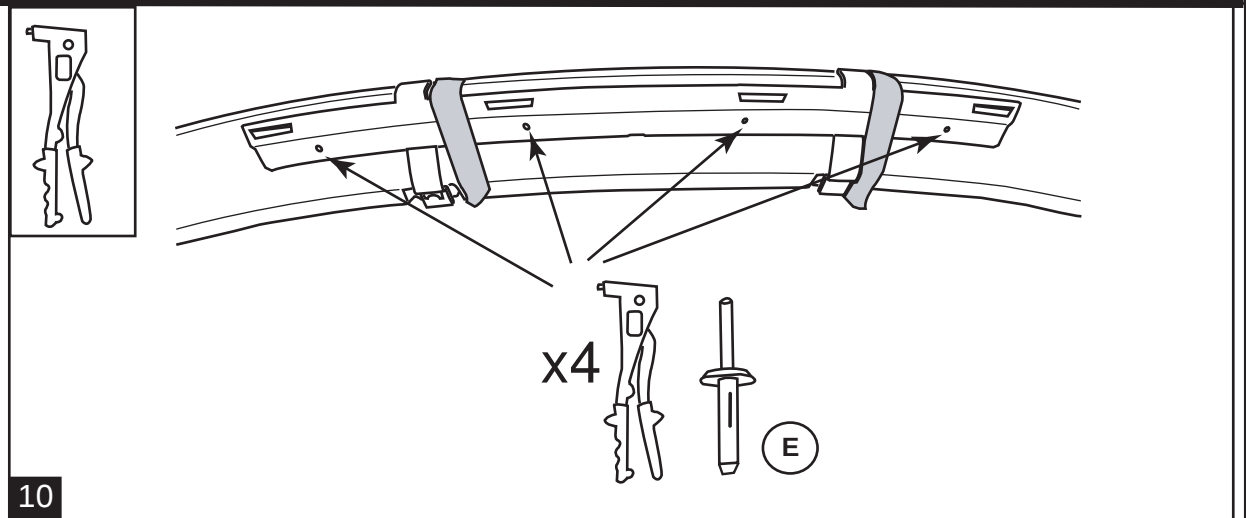


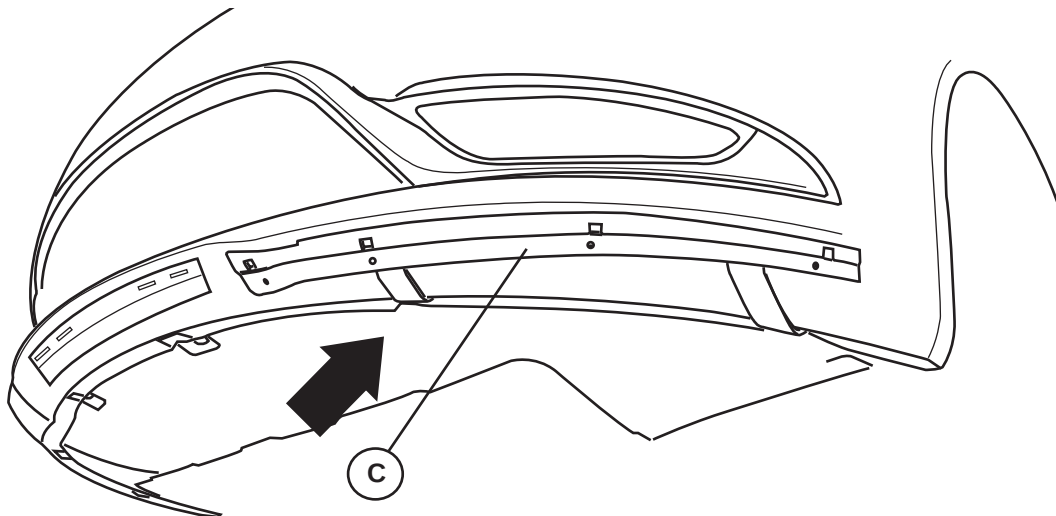


13

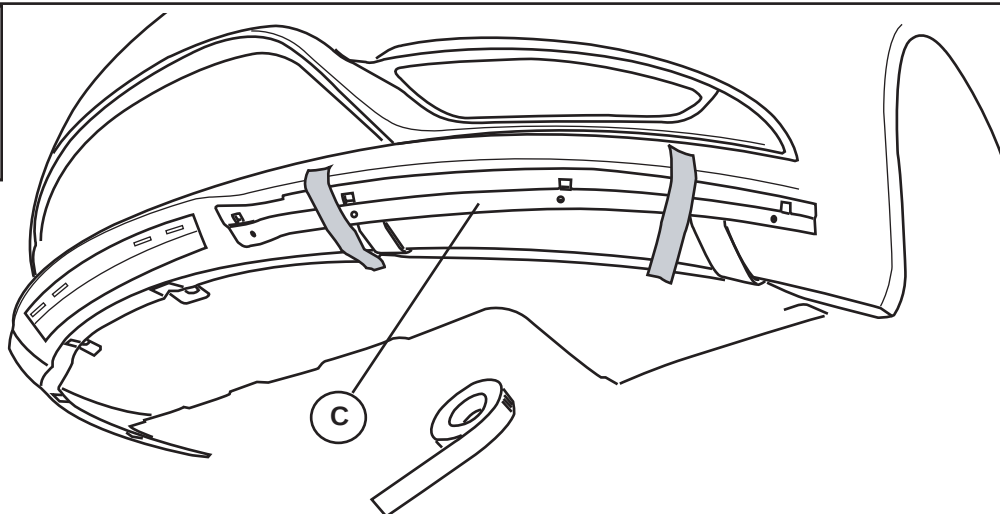

14

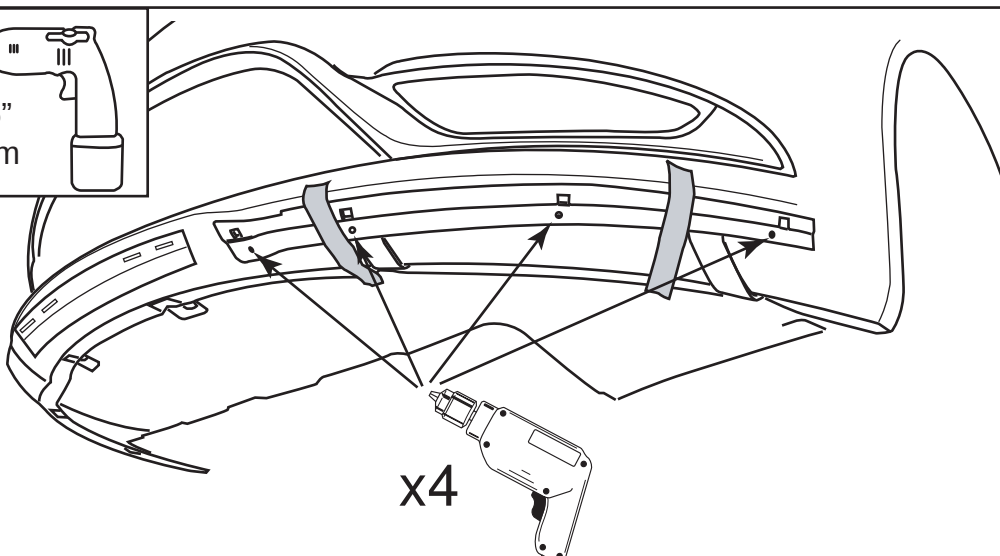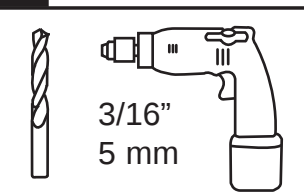

15

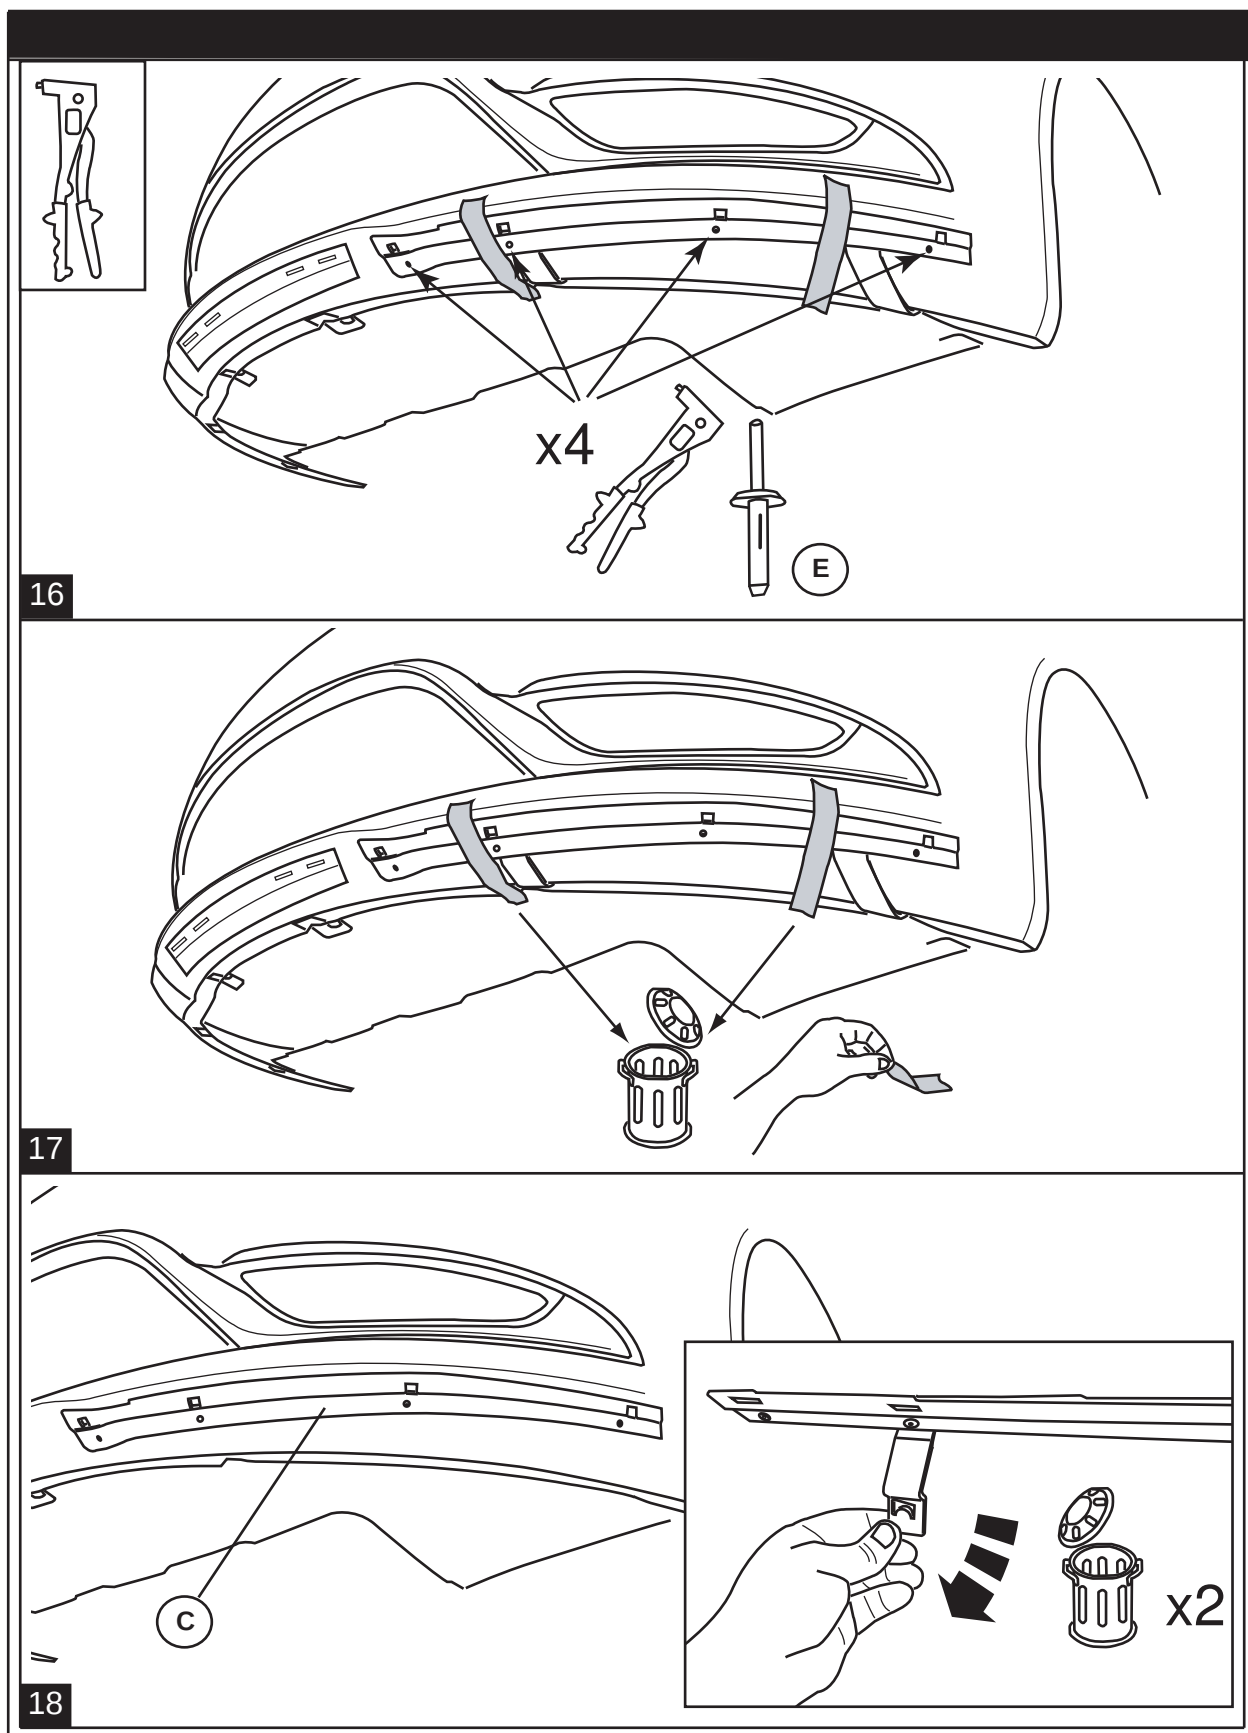

**GB** NOTE: Repeat steps 13-18 on the other side


**E** NOTA: Repita estos pasos 13-18 en otro lado

**F** NOTE: Répétez les étapes 13-18 pour l'autre côté


**G** ANMERKUNG: Wiederhole Schritte 13-18 auf der piher Seite

**I** NOTA: Ripetere i passaggi da 13-18 su lato

19

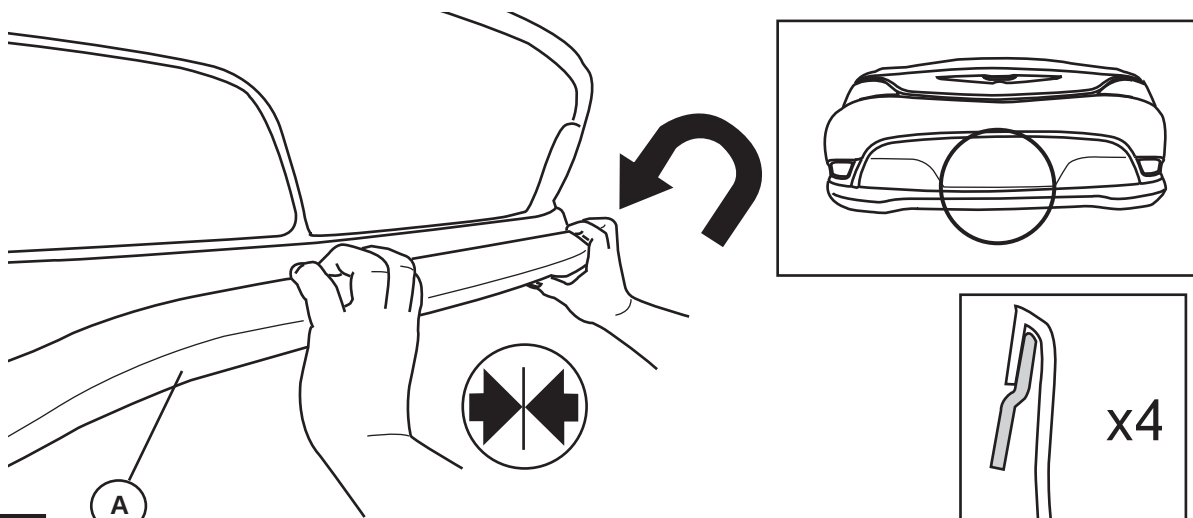


20

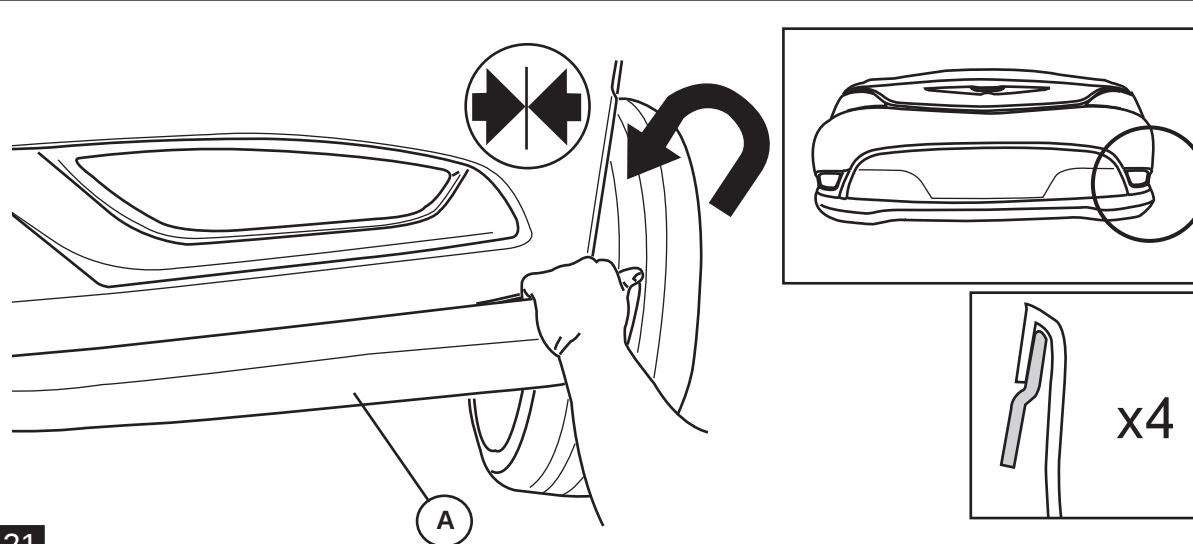


21

22

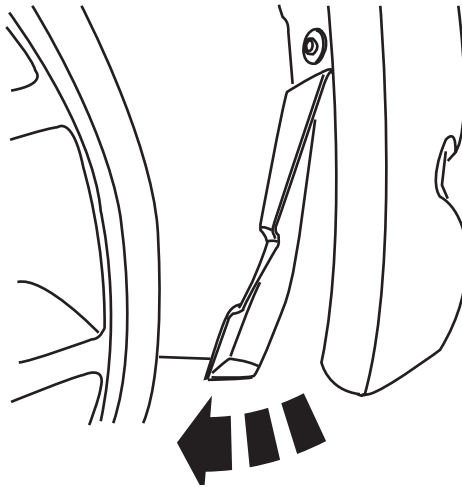

23

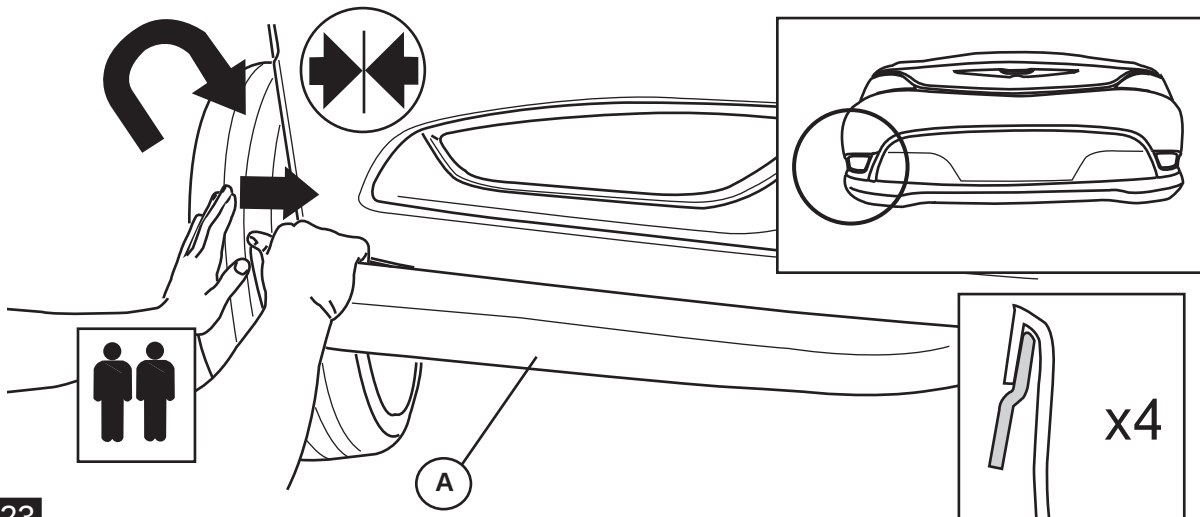

24

