







RUBICON FRONT BUMPER HOOPS

RUBICON PARE-CHOCS AVANT CERCEAUX



CALCOMANÍAS AROS DELANTEROS

www.mopar.com

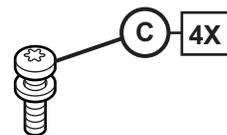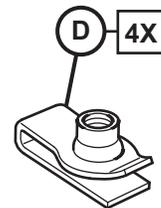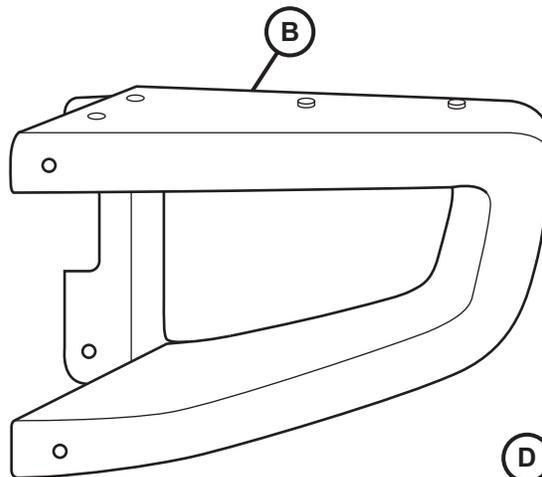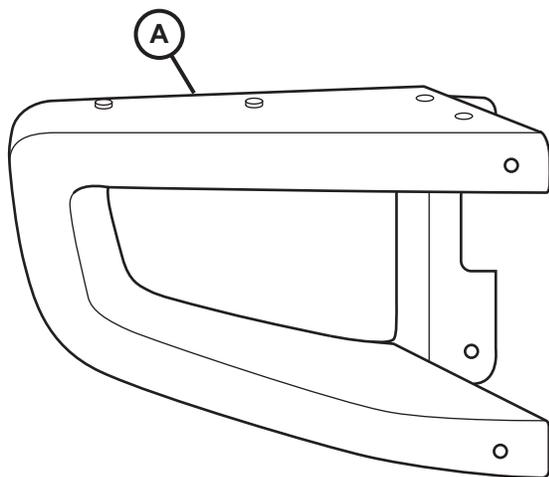


M10 x 1.5 x 42 mm
TORX BOLT

NOTE: IF ANY EXISTING TORX FASTENERS ARE DAMAGED OR LOST, REFERENCE SERVICE PART NO. 68231973AA
 Remarque: Si les vis Torx existant sont endommagés ou perdus, remplacer par le numéro 68231973AA
 Nota: Si los tornillos Torx existiendo se daña o se pierde, sustituya con la referencia 68231973AA

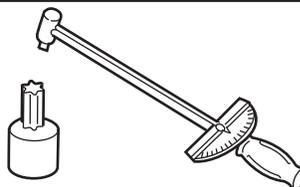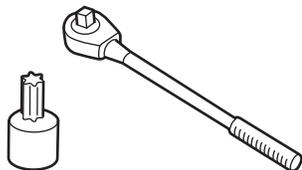

REMOVE EXISTING FASTENERS


Enlever les vis existantes
 Quitar los tornillos existentes

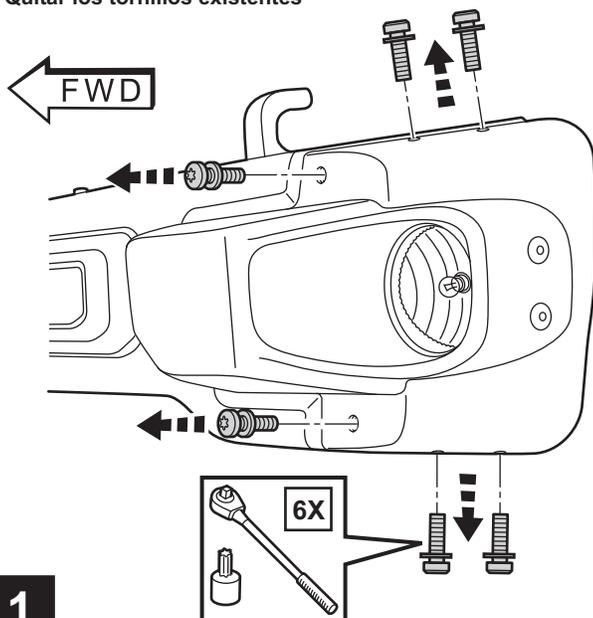

1

REMOVE EXISTING FASTENERS

Enlever les vis existantes
 Quitar los tornillos existentes

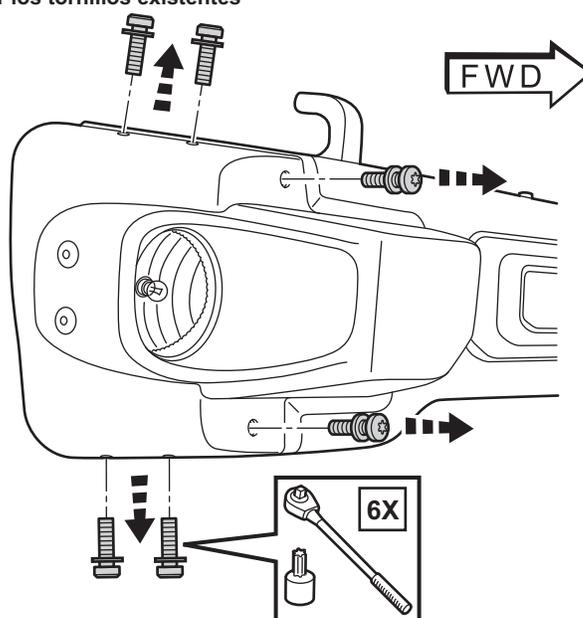

2

USE EXISTING FASTENERS
Remplacer les vis existantes
Reemplazar los tornillos existentes

6X

B

6X



30 Nm
(22 ft. lbs.)

2

USE EXISTING FASTENERS
Remplacer les vis existantes
Reemplazar los tornillos existentes

6X

A

6X



30 Nm
(22 ft. lbs.)

3

B

C

2X

D

2X

2X



30 Nm
(22 ft. lbs.)

FWD

3

C

2X

D

2X

2X



30 Nm
(22 ft. lbs.)

FWD

4

A