






MOPAR®




JEEP COMPASS RALLYE BADGE

RALLYE


A 2x

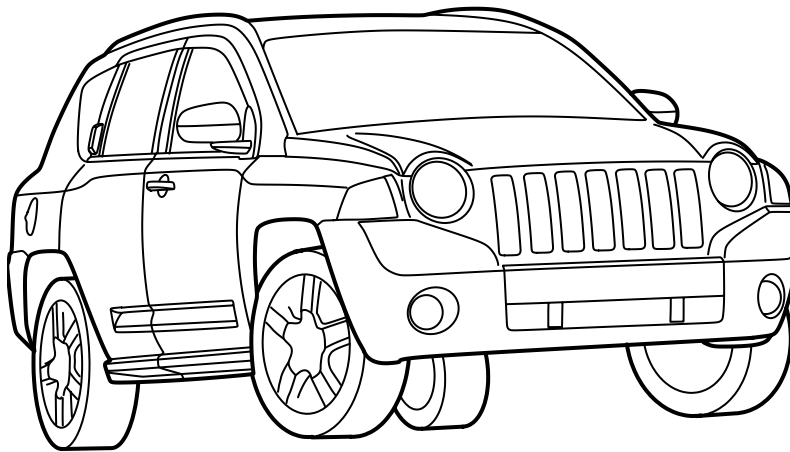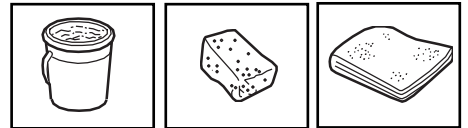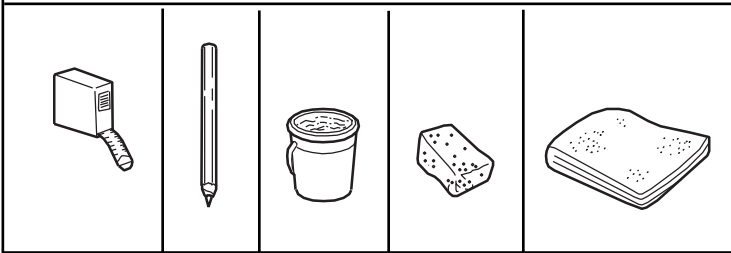



1

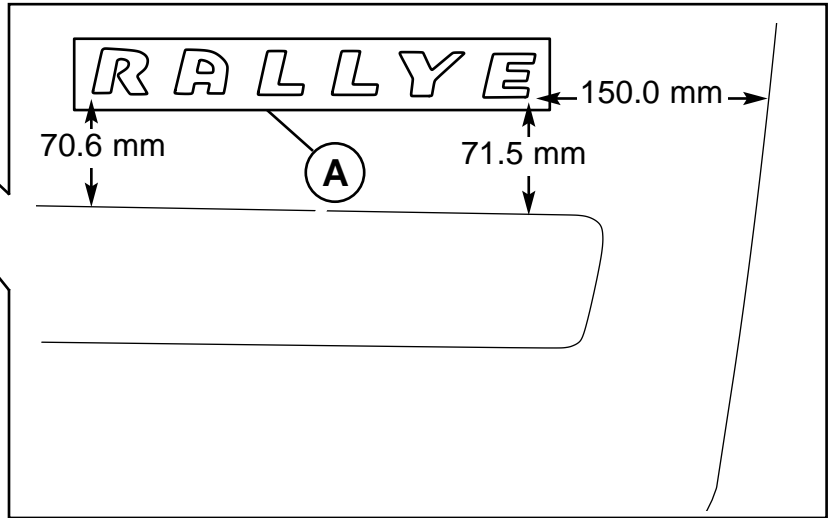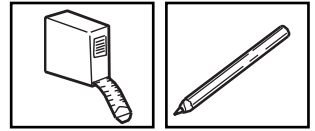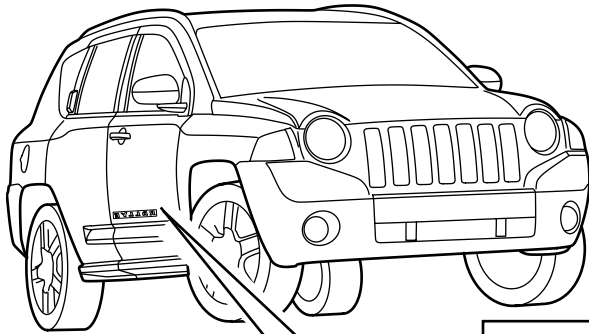

2


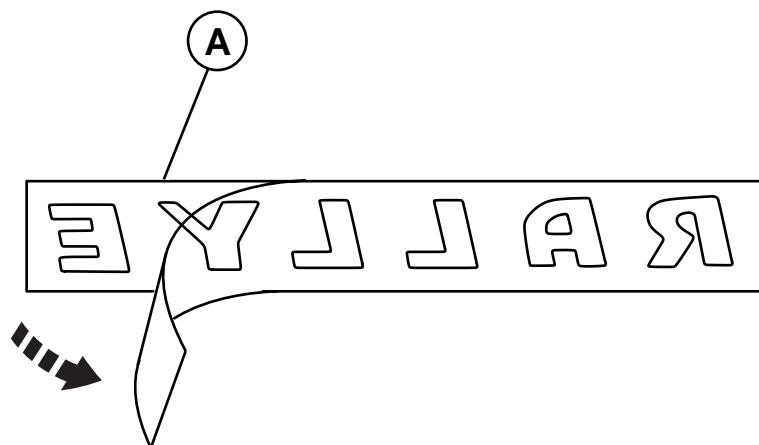


3

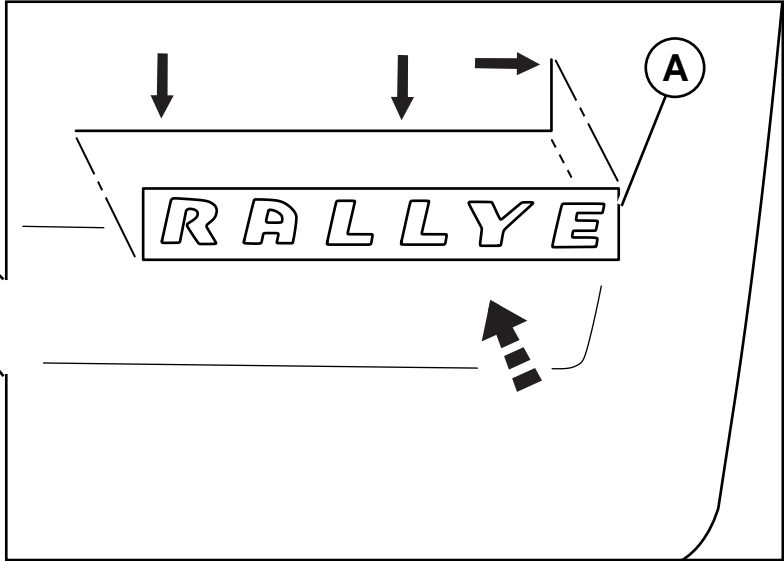
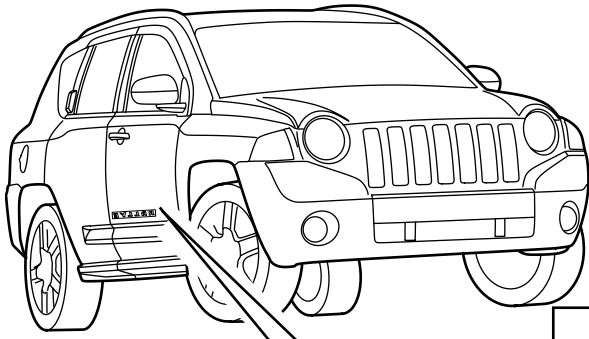


3

NOTE: Apply 10lbs of pressure to properly secure adhesive.

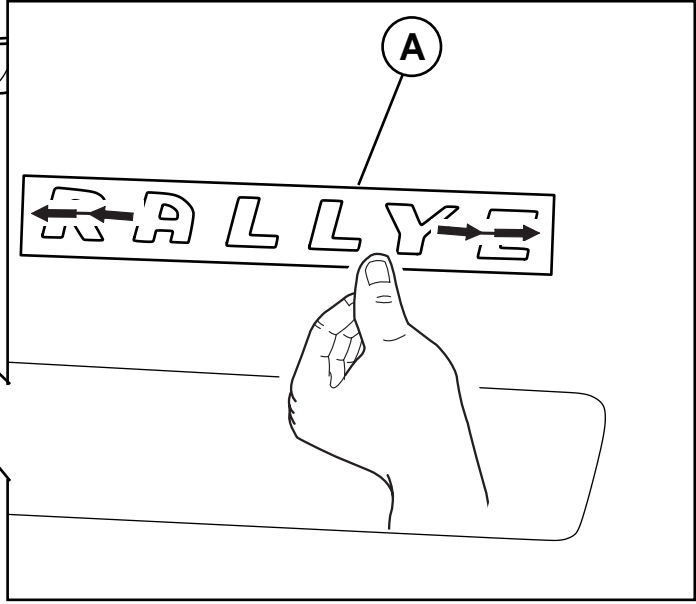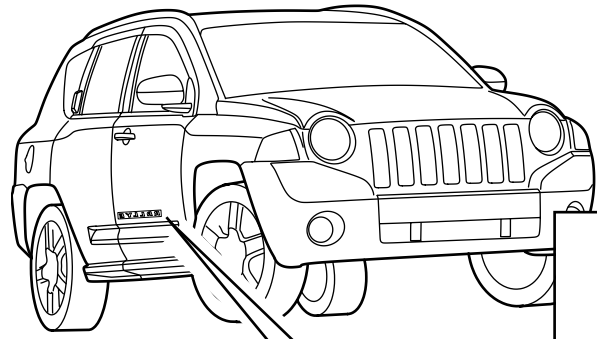

4

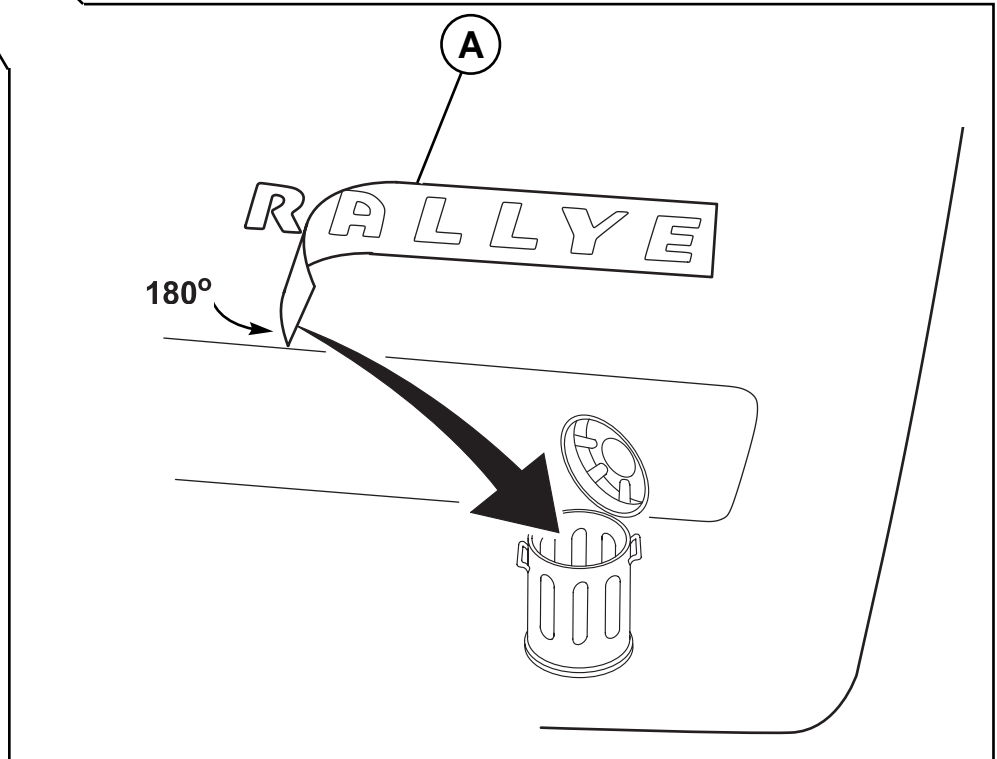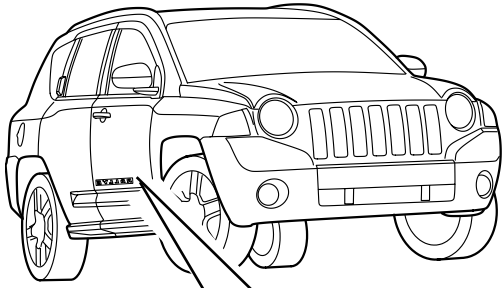

5

NOTE: Repeat steps 1-5 for opposite side.

6