



# INSTALLATION INSTRUCTIONS STAGE 1 SCAT PACK KIT

2013-2014 CHRYSLER 300 5.7 HEMI

2013-2014 DODGE CHARGER/CHALLENGER 5.7 HEMI


PART NUMBERS 77072300, 77072302, 77072303, 77072304, 77072305, 77072307, 77072329, 77072330

## Stage 1 Scat Pack


# INSTALLATION

Stage 1 Scat Pack kits vary based on the year, make and model of your vehicle. To determine the specific I-Sheets for your vehicle, reference the following matrix:

		Cold Air Intake	Catback Exhaust	Stage 1 PCM	Badges	
300C / 300S	2013	K6857282	K6857295	K6862184	n/a	
	2014					
Charger	2013		K6857293		K6857176	K6862284
	2014					
Challenger	2013	n/a	K6857176	K6862283		
	2014					
Challenger Shaker	2014	n/a	K6857176			

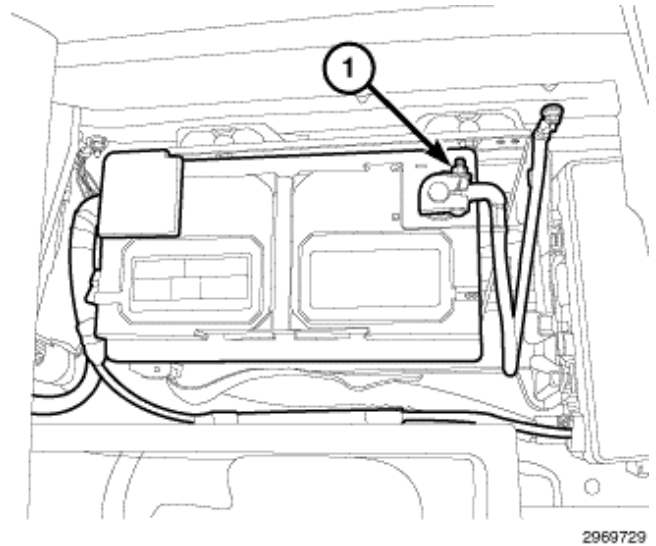

- Disconnect and isolate the negative battery cable (1).

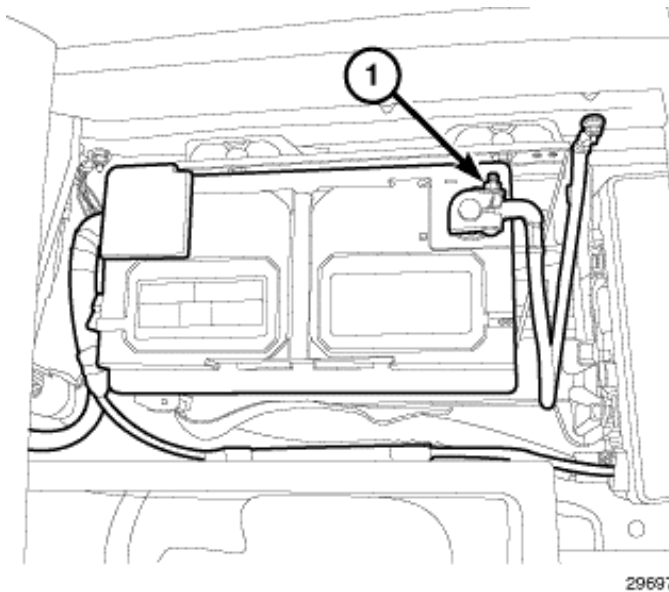

- Install Stage 1 Scat Pack kit contents in any order.
- After completing installation, connect the negative battery cable and tighten nut (1) to 5 N·m (45 in. lbs.).