




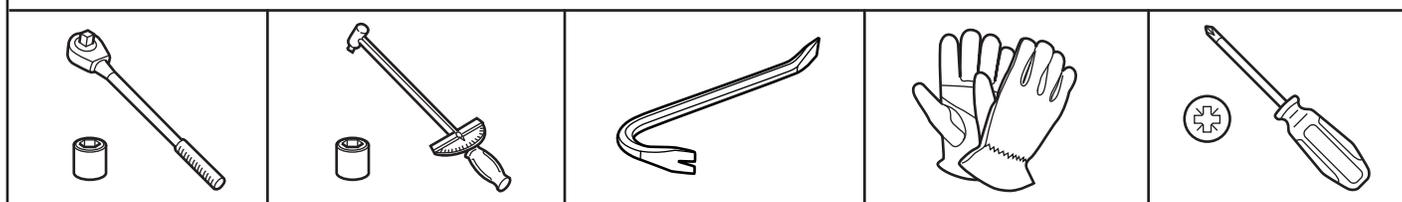







# JEEP WRANGLER LED FOGLAMPS






www.mopar.com

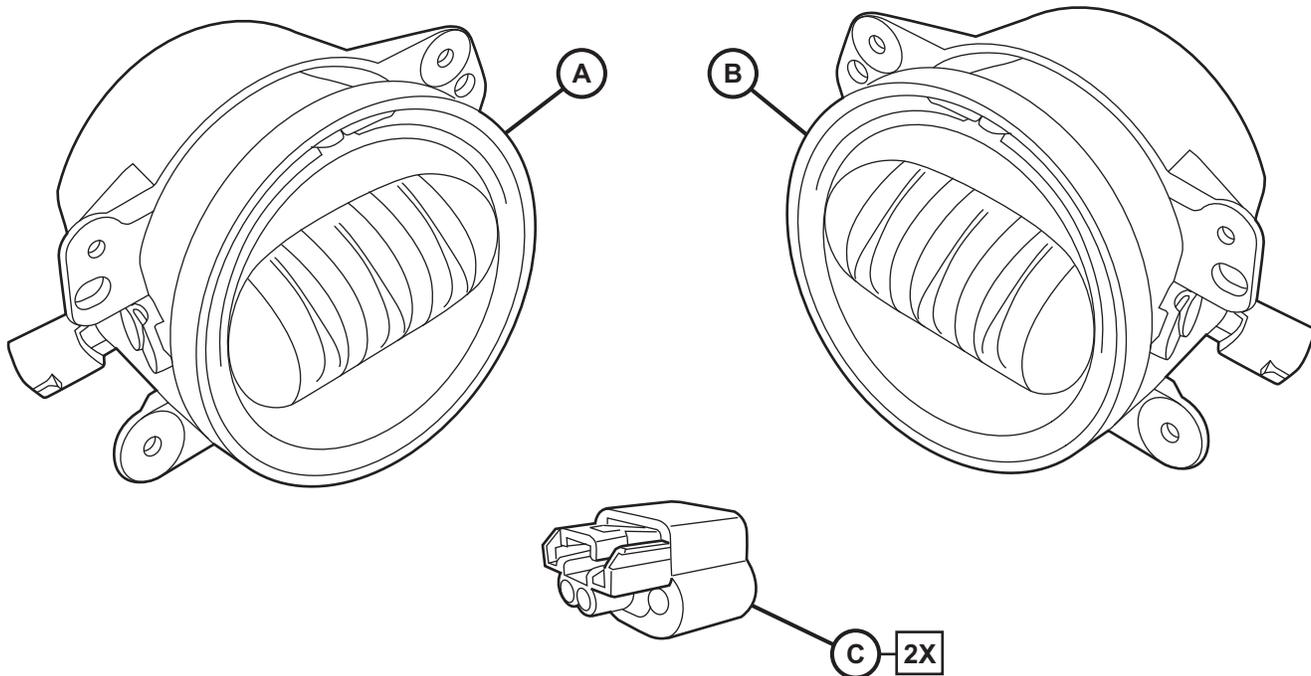


RETAIN ALL FASTENERS FOR REINSTALLATION

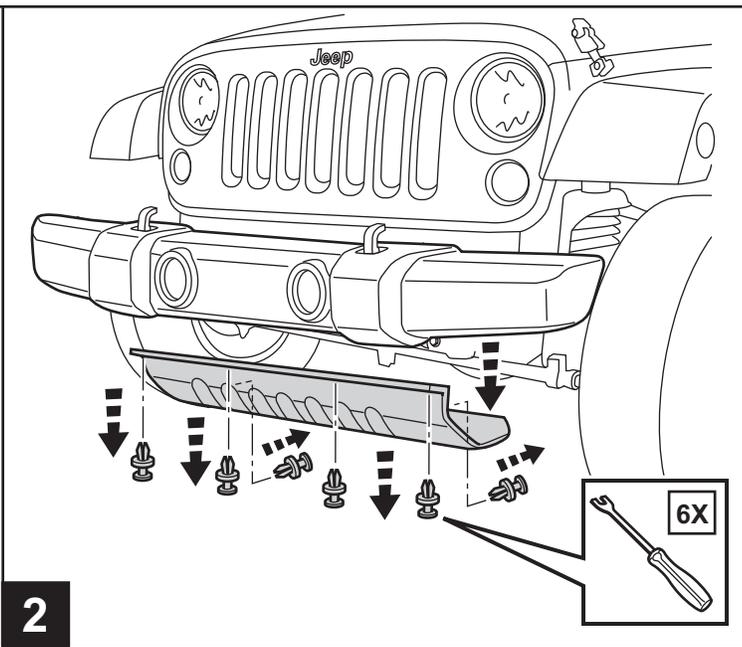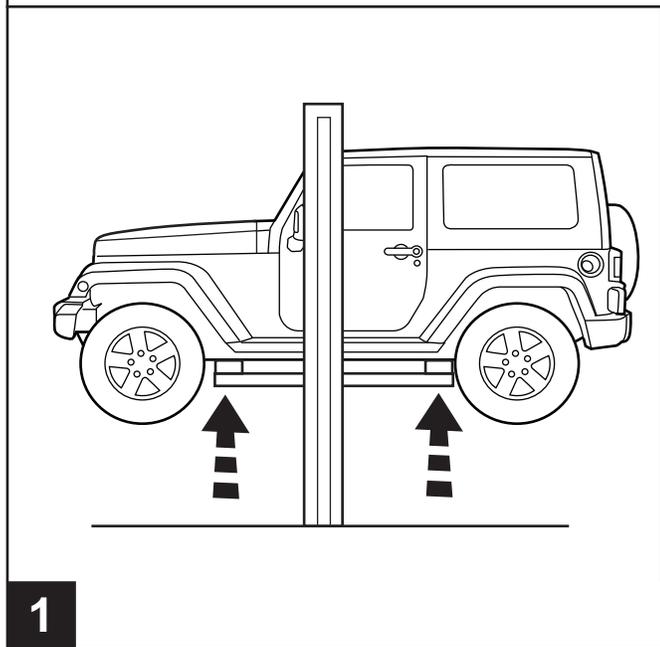

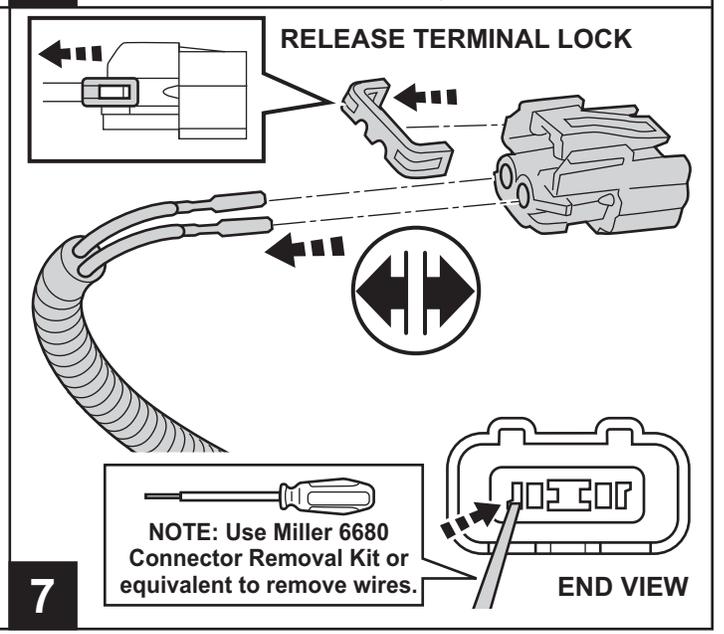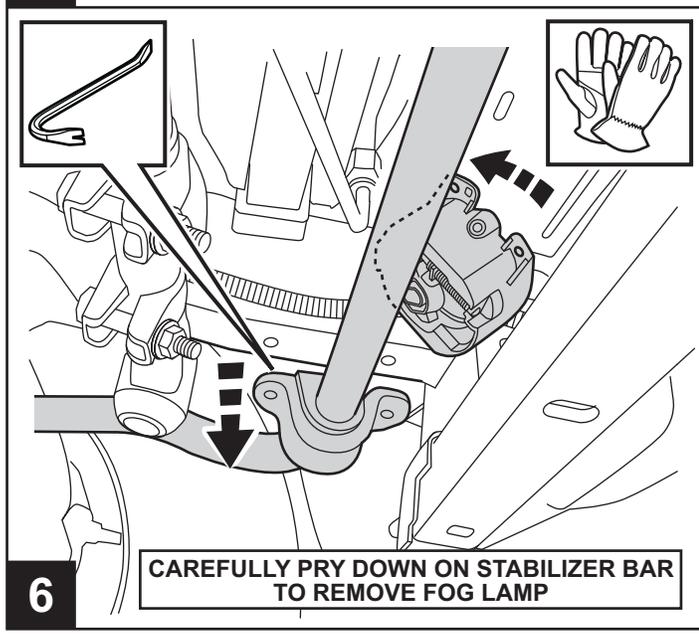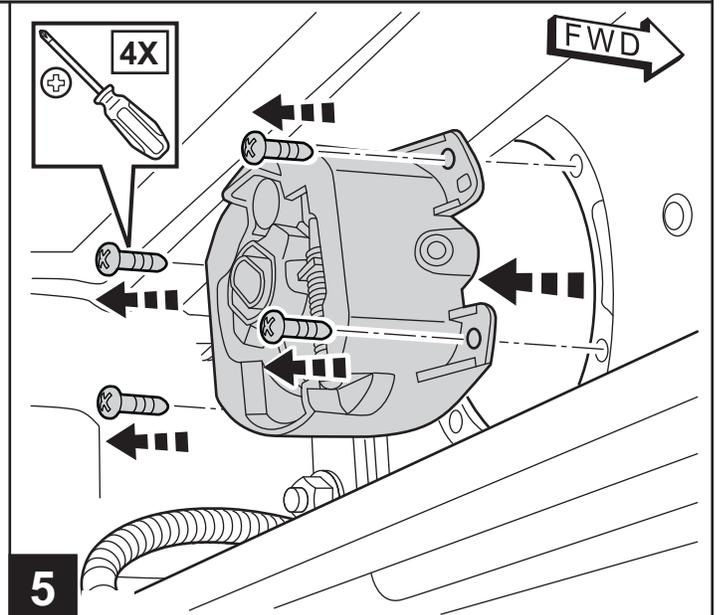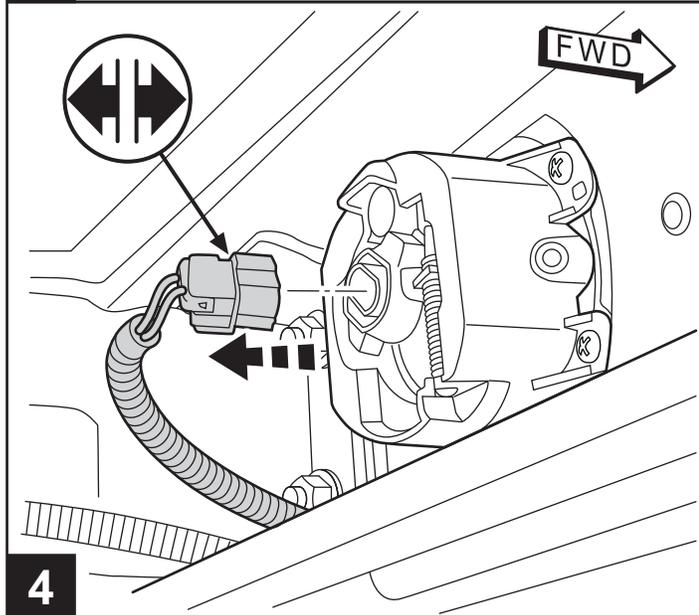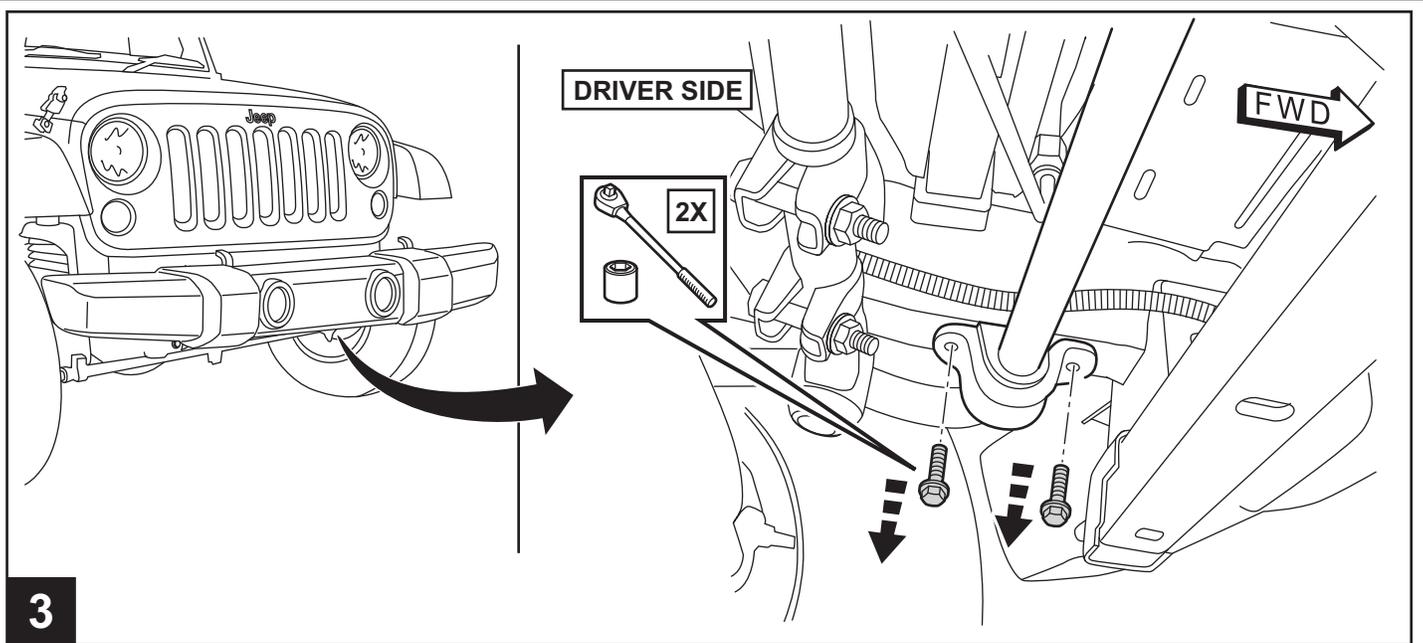

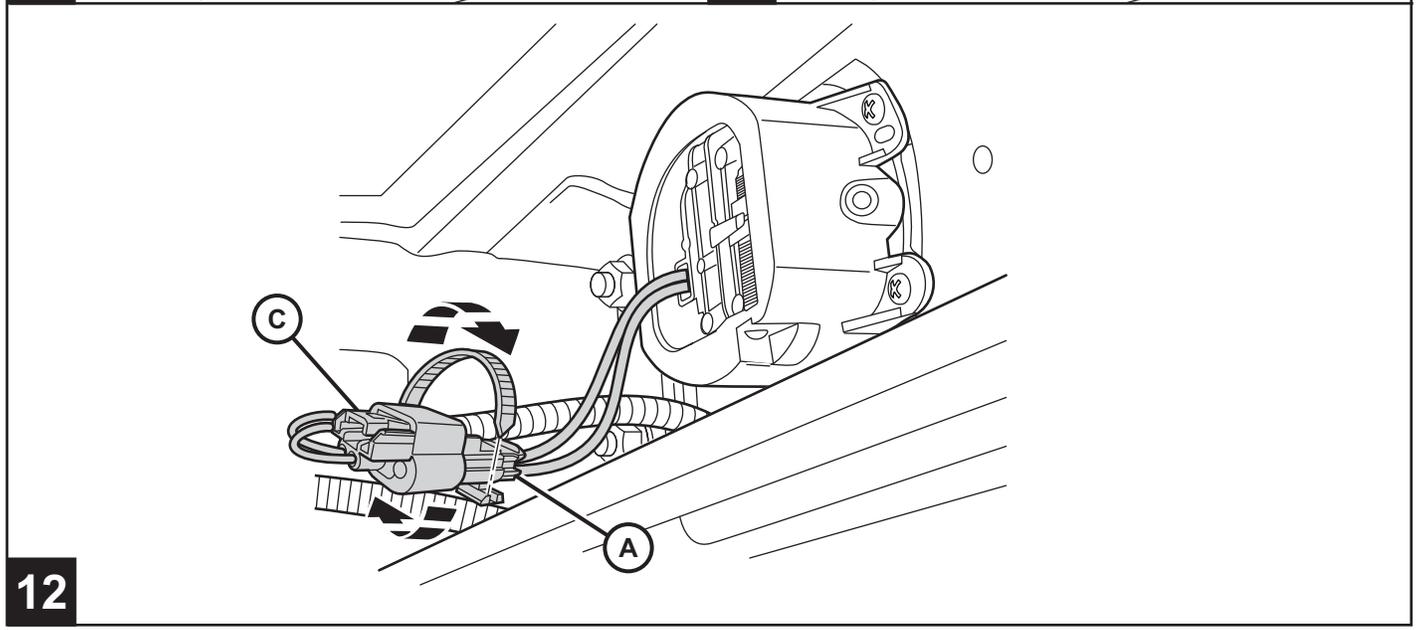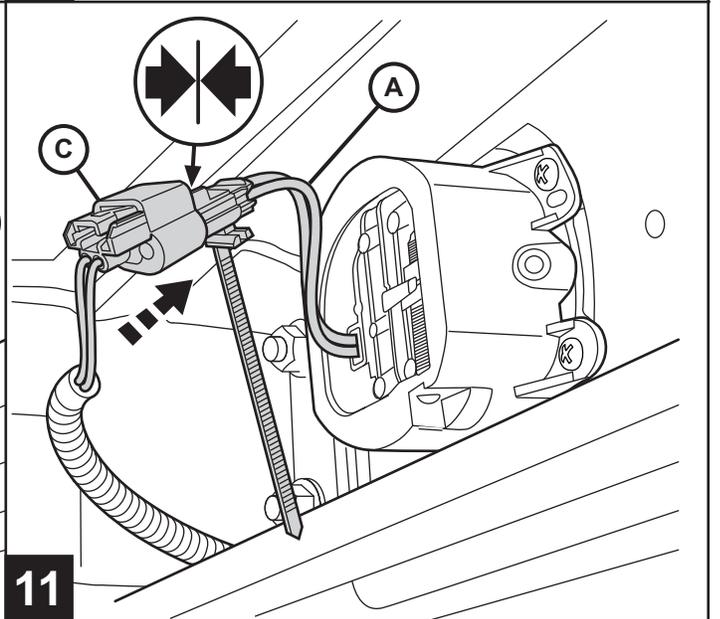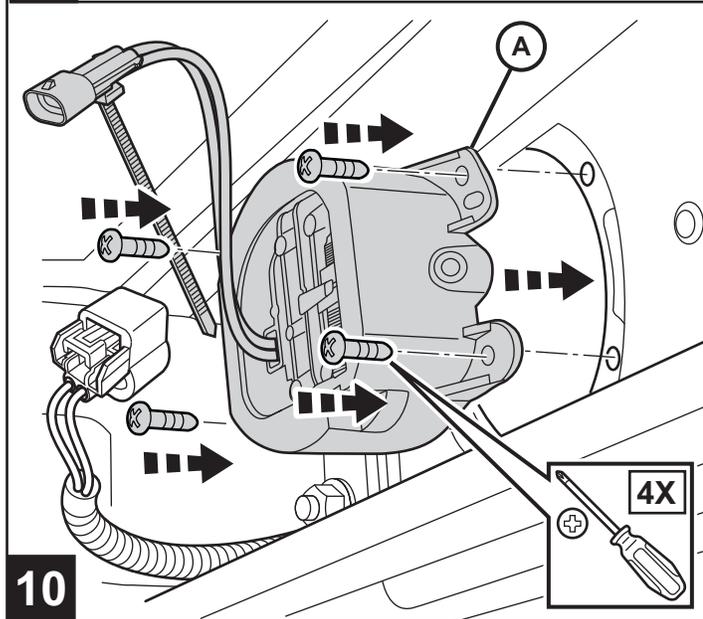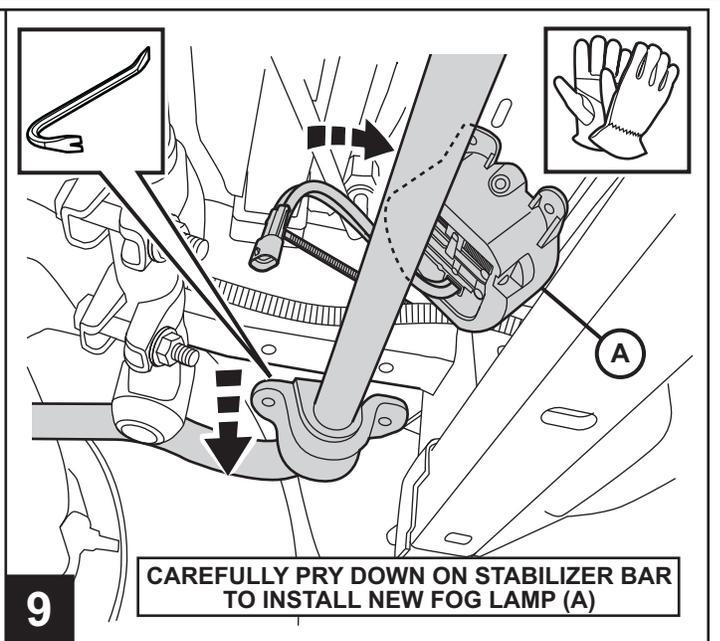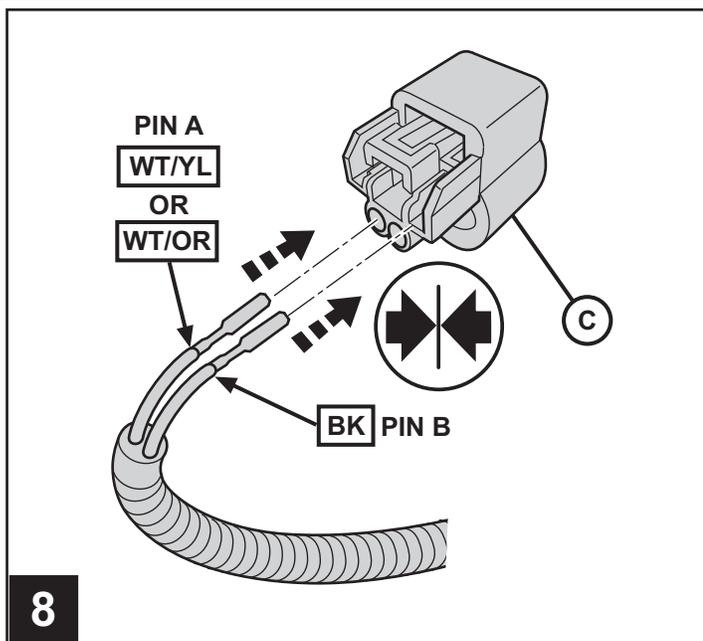

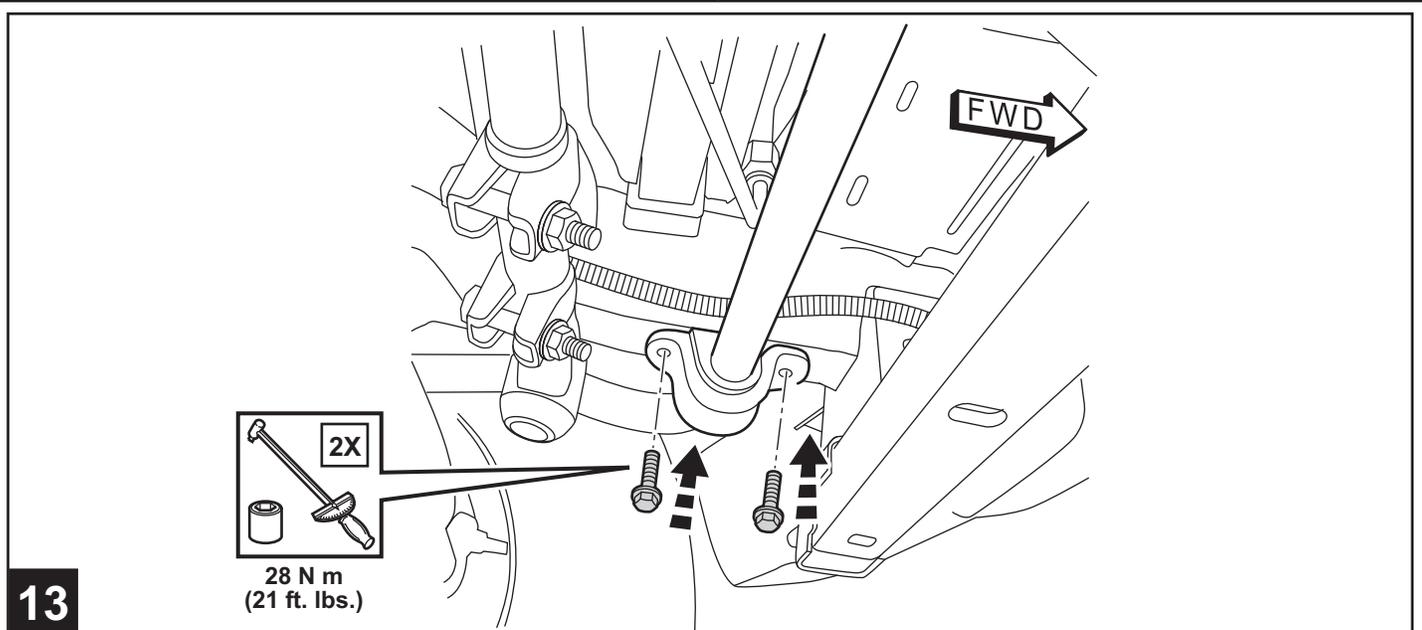**13**

**REPEAT STEPS 3 THROUGH 12  
FOR PASSENGER SIDE OF VEHICLE  
USING LAMP (B).**

**14**

**REVERSE STEP 2 TO REINSTALL  
FRONT SHIELD**

**15**


#### VEHICLE PREPARATION FOR LAMP ALIGNMENT - DOMESTIC MARKET ONLY

1. Check for and correct any burnt out bulbs.
2. Repair or replace any ineffective, worn or damaged body or suspension components that could hinder proper lamp alignment.
3. Verify proper tire inflation pressures.
4. Remove any accumulations of mud, snow or ice from the vehicle underbody and clean the front lamp lenses.
5. Verify that there is no load in the vehicle (cargo or passengers), except for the driver.
6. The fuel tank should be FULL. Add 2.94 kilograms (6.5 pounds) of weight over the fuel tank for each estimated gallon of missing fuel.
7. Verify correct vehicle suspension height.

#### FOG LAMP ALIGNMENT

**NOTE: A properly aimed front fog lamp will project a pattern (top of fog light pattern) on the alignment screen 100 millimeters (4 inches) below the fog lamp centerline and straight ahead of the lamp.**

1. Turn the fog lamps ON.
2. Insert a screwdriver through the clearance hole in the underside of the front bumper (1) to rotate the vertical adjustment screw (2) on each fog lamp to adjust the beam height as required

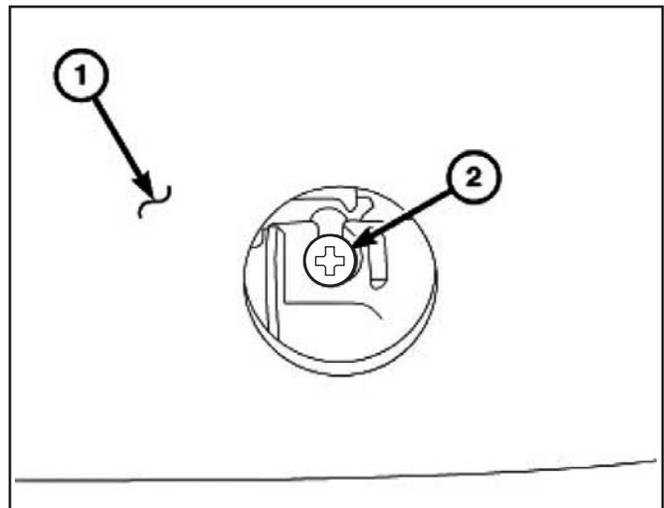

## LAMP ALIGNMENT SCREEN PREPARATION

The procedure that follows will prepare a suitable front lamp alignment screen.

1. Tape a line on a level floor 7.62 meters (25 feet) away from and parallel to the flat wall that will be used as the lamp alignment screen. The level floor will be used as the horizontal zero reference.
2. An adjacent wall or floor member that is perpendicular to the alignment screen can be used as the vertical zero reference. If there is no adjacent wall or floor member that is perpendicular to the screen, tape a second line on the floor perpendicular to both the alignment screen and the first line, and outboard of either side of where the vehicle will be positioned. This will be used as the vertical zero reference.
3. Position the vehicle so that the side of the vehicle is parallel to the vertical zero reference, and so that the front of the lamp lenses are in the vertical plane of the parallel line taped on the floor 7.62 meters (25 feet) away from the screen.
4. Rock the vehicle side-to-side three times to allow the suspension to stabilize.
5. Jounce the front suspension three times by pushing downward on the front bumper and releasing.
6. Measure the distance between the optical center of one of the lamps being aimed (head or fog) and the floor (horizontal zero reference). Transfer this measurement to the alignment screen with a piece of tape placed horizontally to the floor. This line will be used as the lamp horizontal reference.
7. Measure the distance between the vertical zero reference and the optical center of the nearest lamp being aimed (head or fog). Transfer this measurement to the alignment screen with a piece of tape placed vertically across the appropriate (head or fog) lamp horizontal reference. This is the centerline reference for the first lamp.
8. Measure the distance on center between the first and the second lamp being aimed. Transfer this measurement to the alignment screen with a second piece of tape placed vertically across the appropriate (head or fog) lamp horizontal reference. This is the centerline reference for the second lamp.

